

## FOXX FOXX C10

# FOXX C10 10.1-inch Android Tablet User Manual

Model: FOXX C10

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your FOXX C10 10.1-inch Android Tablet. Please read this guide thoroughly before using your device to ensure proper functionality and to understand its features. Keep this manual for future reference.

## 2. WHAT'S IN THE BOX

Verify that all items are present in the package:

- FOXX C10 Tablet
- Type-C Cable
- Charger (10W)
- User Manual
- Protective Cover (pre-applied)
- Screen Protector Film (pre-applied)

## 3. PRODUCT OVERVIEW

The FOXX C10 tablet features a 10.1-inch HD display, dual 8MP cameras, and a robust 6000mAh battery, all powered by an Android 13 operating system.



Image: Front and back view of the FOXX C10 tablet, showcasing its sleek design and dual camera module on the rear.



Image: An infographic highlighting key features including the 10.1-inch display, Android 13, 6000mAh battery, 8MP cameras, MediaTek quad-core chipset, 4GB RAM + 64GB storage, 4G LTE bands, Wi-Fi, Bluetooth 5.0, Nano SIM, Type-C, and 3.5mm AUX port.

### 3.1 Display

The tablet is equipped with a 10.1-inch HD TFT V-notch display, offering a resolution of 800x1280 pixels for clear visuals.

# 10.1-inch HD TFT V-notch Display

C10 delivers an expansive visual experience  
and renders images and videos in crisp detail



Image: Close-up of the tablet's 10.1-inch HD TFT V-notch display, showing vibrant colors and detail.

## 3.2 Cameras

The FOXX C10 features dual 8-megapixel cameras, both on the front and rear, enabling high-quality photos and video calls.



# Powerful MT Chipset with 2.0 GHz Quad-Core, 4GB+64GB Memory

High performance MediaTek MT8766 chipset with 64GB of storage stands out for our C10 tablet

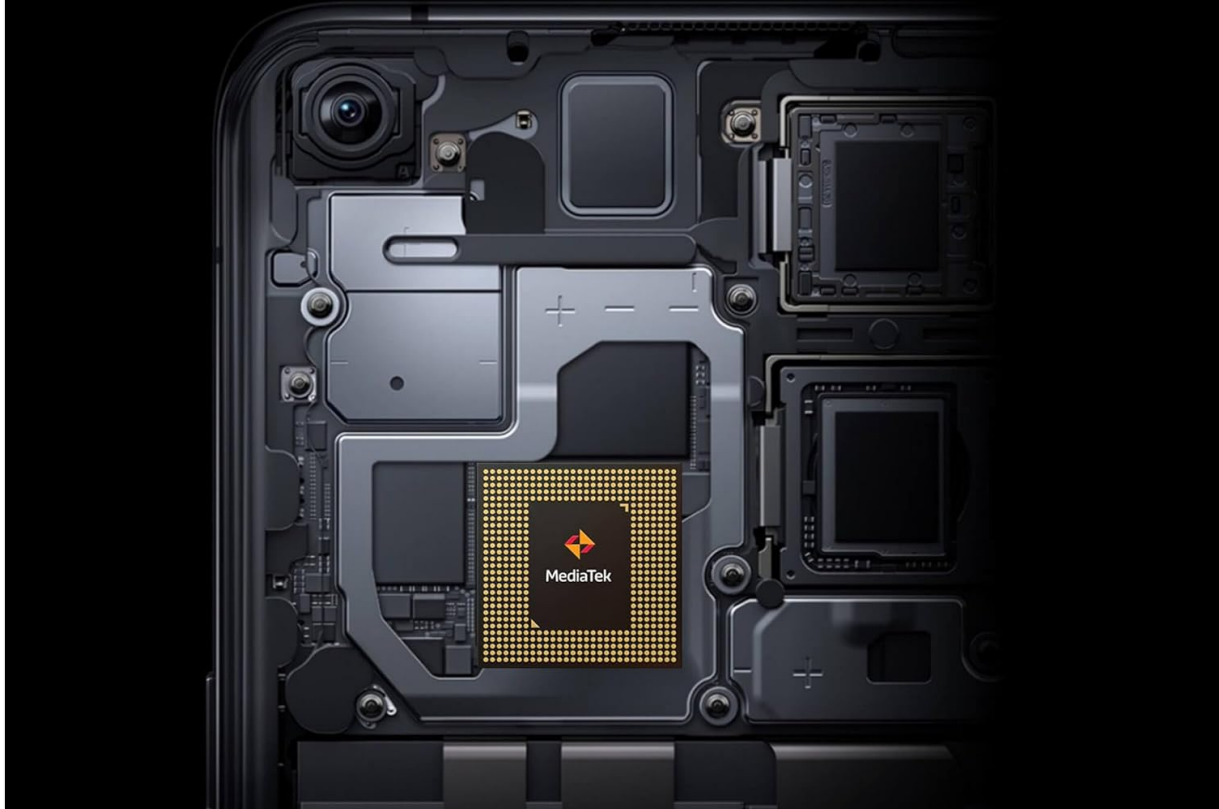 


Image: Detail of the tablet's rear camera module, highlighting the 8-megapixel main camera with autofocus capabilities.

## 3.3 Processor and Memory

It runs on a 2.0 GHz quad-core MediaTek MT8766 chipset, paired with 4GB of RAM and 64GB of internal storage for smooth performance and ample space.

## 8-megapixel main & AF camera

enables you to capture high-quality, vibrant shots



Image: An internal view of the tablet's motherboard, showcasing the MediaTek MT8766 quad-core chipset.

### 3.4 Battery

A 6000mAh battery provides extended usage time, ensuring the device stays powered throughout the day.

## 6000 mAh battery

is powerful and can ensure device stays powered up through the day

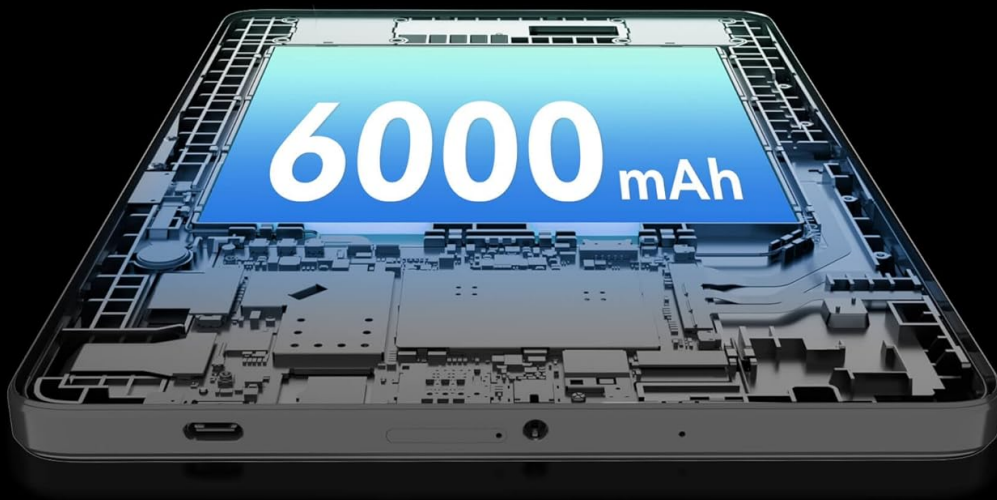 


Image: A cutaway view of the tablet highlighting the large 6000 mAh battery component.

## 4. SETUP

### 4.1 Initial Charging

Before first use, fully charge your tablet using the provided Type-C cable and 10W charger. The battery indicator on the screen will show charging status.

### 4.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options on the screen.
- **To Restart:** Press and hold the Power button, then select 'Restart' from the options on the screen.

### 4.3 SIM Card Installation

The FOXX C10 supports Nano SIM cards for cellular connectivity. Locate the SIM card tray on the side of the tablet. Use the provided SIM ejector tool to open the tray. Insert the Nano SIM card into the designated slot with the gold contacts facing down. Close the tray securely.

## 4.4 MicroSD Card Installation (Optional)

If your tablet supports expandable storage, locate the MicroSD card slot, often combined with the SIM tray. Insert a MicroSD card (up to 128GB, sold separately) into the slot with the gold contacts facing down. Close the tray securely.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Basic Navigation

Your tablet runs on Android 13. Use touch gestures for navigation:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through screens or lists.
- **Pinch:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move icons.

### 5.2 Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted, then tap **Connect**.

### 5.3 Making Calls (4G LTE)

With a properly installed and activated Nano SIM card, your tablet can make and receive calls.

1. Open the **Phone** app.
2. Dial the desired number or select a contact.
3. Tap the **Call** button.

### 5.4 Using the Camera

The tablet features dual 8MP cameras for photography and video recording.

1. Open the **Camera** app.
2. Tap the **Shutter** button to take a photo.
3. Tap the **Video** icon to switch to video recording mode.
4. Use the camera switch icon to toggle between front and rear cameras.

### 5.5 Bluetooth Pairing

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure the device you want to pair with is in pairing mode.
4. Select the device from the list and follow any on-screen prompts to complete pairing.

## 6. MAINTENANCE

---

### 6.1 Battery Care

- Avoid extreme temperatures, which can degrade battery life.



- Do not leave the tablet charging for extended periods after it's fully charged.
- Use only the provided charger and cable.

### 6.2 Cleaning

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.

### 6.3 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update**.

## 7. TROUBLESHOOTING

Problem	Solution
Tablet does not turn on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
Cannot connect to Wi-Fi	Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Verify the Wi-Fi password.
Apps are slow or crashing	Close unused apps. Clear app cache (Settings > Apps > [App Name] > Storage > Clear cache). Restart the tablet. Ensure sufficient storage space.
No cellular service	Ensure the Nano SIM card is correctly inserted and activated. Check your network settings and contact your service provider if necessary.
Screen is unresponsive	Restart the tablet. If the issue persists, perform a factory reset (data will be lost).

## 8. SPECIFICATIONS




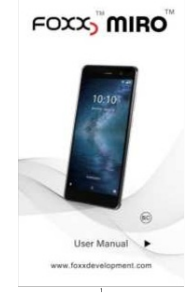 

Feature	Detail
Model Name	FOXX C10
Operating System	Android 13
Screen Size	10.1 Inches
Max Screen Resolution	800x1280 Pixels
Processor	2 GHz Quad-Core MediaTek
RAM	4 GB
Internal Storage	64 GB
Flash Memory Size	8 GB (likely referring to system partition or eMMC base)
Cameras	Dual 8MP (Front & Rear)

Feature	Detail
Battery Capacity	6000 mAh
Connectivity	4G LTE, Wi-Fi (802.11 b/g/n/ac), Bluetooth 5.0, USB-C, 3.5mm AUX
Item Weight	1.26 pounds
Product Dimensions	9.64 x 6.39 x 0.42 inches
Color	Black

## 9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact the retailer. Keep your proof of purchase for warranty claims.

### Related Documents - FOXX C10

	<a href="#">Foxx Sma A5 Smartphone: Quick Start Guide and Technical Specifications</a> Comprehensive guide for the Foxx Sma A5 smartphone, covering safety information, setup instructions, basic settings, technical specifications, and regulatory compliance.
	<a href="#">FOXX A67M Smartphone User Manual</a> User manual for the FOXX A67M smartphone, covering product safety, what's in the box, usage guidelines, getting to know the phone, basic settings, and technical specifications.
	<a href="#">FOXX T8 Quick Start Guide</a> Comprehensive guide for the FOXX T8 tablet, detailing setup, features, settings, applications, safety precautions, FCC compliance, and hearing aid compatibility information.
	<a href="#">Foxx Miro Smartphone User Manual: Setup, Features, and Troubleshooting</a> Comprehensive user manual for the Foxx Miro smartphone, detailing setup, basic operations, applications, connectivity, safety guidelines, and troubleshooting tips. Visit <a href="http://www.foxxdevelopment.com">www.foxxdevelopment.com</a> for more.
	<a href="#">FOXX A67U Smartphone - User Manual and Technical Specifications</a> Comprehensive user manual and technical specifications for the FOXX A67U smartphone. Learn about safety, setup, features, network compatibility, and FCC compliance.



### [AS65U Smartphone User Manual and Safety Information](#)

This document provides comprehensive safety information, setup instructions, and usage guidelines for the AS65U smartphone by FOXX Development Inc. Learn how to insert SIM cards, understand button functions, and follow safety precautions for optimal device use.