

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [HKOORLAMULS](#) /
- › [HKOORLAMULS G36 Pro Wireless Game Console 64G User Manual](#)

HKOORLAMULS G36 Pro

HKOORLAMULS G36 Pro Wireless Game Console 64G User Manual

Model: G36 Pro | Brand: HKOORLAMULS

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your HKOORLAMULS G36 Pro Wireless Game Console. The G36 Pro is a versatile gaming device featuring a dual operating system (EmuELEC 4.3 and Android TV 9.0), supporting over 50 emulators and a vast library of preloaded games. It offers HD 1080P output and comes with 2.4G wireless controllers for an enhanced gaming experience.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

Product List



Image: All components included in the G36 Pro package, including the console, controllers, cables, and remote.

- 1 x G36 Pro Game Console
- 2 x Wireless Controllers
- 1 x Portable Charging Cable (USB Power Cable)
- 1 x Portable HD Charging Cable (HDMI Cable)
- 1 x TV Remote Control
- 1 x USB Receiver (for wireless controllers)
- 1 x Instruction Manual (this document)
- 1 x Box (packaging)

3. SETUP GUIDE

Follow these steps to set up your G36 Pro Game Console:

1. **Connect to Power:** Connect the portable charging cable to the DCIN port on the console and plug the other end into a power source.

UPGRADE HOST JACKS

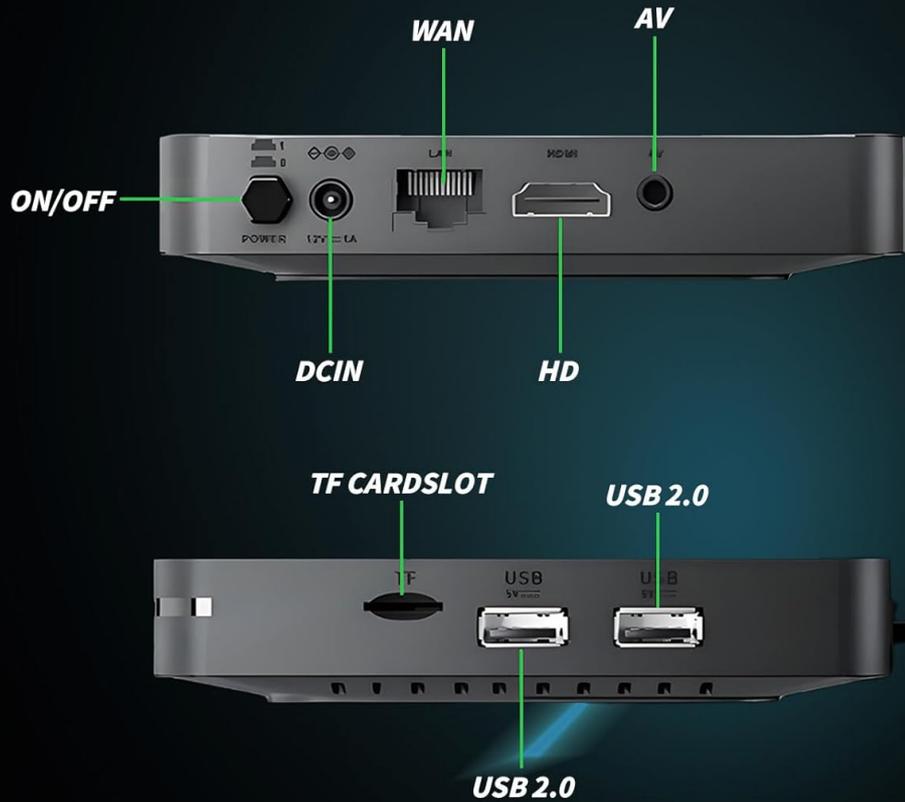


Image: Detailed view of the console's rear and side ports, indicating DCIN, HD (HDMI), LAN, AV, USB 2.0, and TF card slot.

2. **Connect to Display:** Connect one end of the portable HD charging cable (HDMI cable) to the HD port on the console and the other end to an HDMI input on your TV, monitor, or projector.

SUPPORT MULTIPLE DEVIC

OMNIDIRECTIONAL COMPATIBILITY. PLUG AND PLAY
THE BIG TV IN THE LIVING ROOM
AND THE COMPUTER MONITOR IN THE STUDY ALL SUPPORT IT



Image: The G36 Pro console demonstrating compatibility with various display devices such as TVs, desktop computers, and projectors.

3. **Insert USB Receiver:** Plug the USB receiver for the wireless controllers into one of the USB 2.0 ports on the console.
4. **Power On:** Press the ON/OFF button on the console to power it on.
5. **Controller Pairing:** The wireless controllers should automatically pair with the console once the USB receiver is connected and the console is powered on. Ensure batteries are inserted into the controllers.

4. OPERATING INSTRUCTIONS

4.1. Dual System Operation (EmuELEC & Android TV)

The G36 Pro features a dual operating system, allowing you to switch between EmuELEC 4.3 (for retro gaming) and Android TV 9.0 (for media and apps). Instructions for switching between systems will typically be displayed on-screen upon boot or accessible via a specific menu option within each system.

4.2. Navigating and Playing Games

Once in the EmuELEC system, use the wireless controllers to navigate through the game menus. The console supports over 50 emulators and comes preloaded with a large collection of games.

2.4G WIRELESS CONTROLLER GAMEPAD

Full range of immersive experience
feel immersive interaction
handy natural fun.



Image: A user actively engaging with the G36 Pro wireless controller, demonstrating its use during gameplay on a large screen.

- **Game Selection:** Browse through the emulator categories and select your desired game.
- **Saving Progress:** The console supports game progress saving. Refer to the on-screen prompts within each game or emulator for specific saving procedures.
- **Downloading Games:** The console supports downloading additional games. This functionality is typically accessed through the Android TV system or specific emulator interfaces.

4.3. Controller Functions

The 2.4G wireless controllers provide responsive input for gaming.



Image: Detailed breakdown of the wireless controller's features, including the sensitive joystick for precise control, 3D buttons for simple operation, and L1/L2 keys for directory toggling and functions.

- **Sensitive Joystick:** Provides precise control for various game types.
- **3D Buttons:** Standard action buttons for gameplay.
- **L1/L2 Keys:** Often used for specific in-game functions or menu navigation.
- **SELECT/START/MODE:** Standard buttons for game control and system functions.

5. FEATURES AND SPECIFICATIONS

5.1. Key Features

- **Storage Options:** Available in 64G, 128G, and 256G capacities, with support for TF card expansion up to 256GB.
- **Extensive Game Collection:** Preloaded with 30,000+ games (for 64G version) across various genres.
- **Dual Operating System:** Seamlessly switch between EmuELEC 4.3 for retro gaming and Android TV 9.0 for media and applications.
- **Versatile Functions:** Includes game collection features, progress saving, and support for additional game downloads.

- **Wide Compatibility:** Supports HD 1080P output for connection to various displays and uses 2.4G wireless controllers.
- **Multi-Language Support:** Supports over 20 languages.

5.2. Technical Specifications

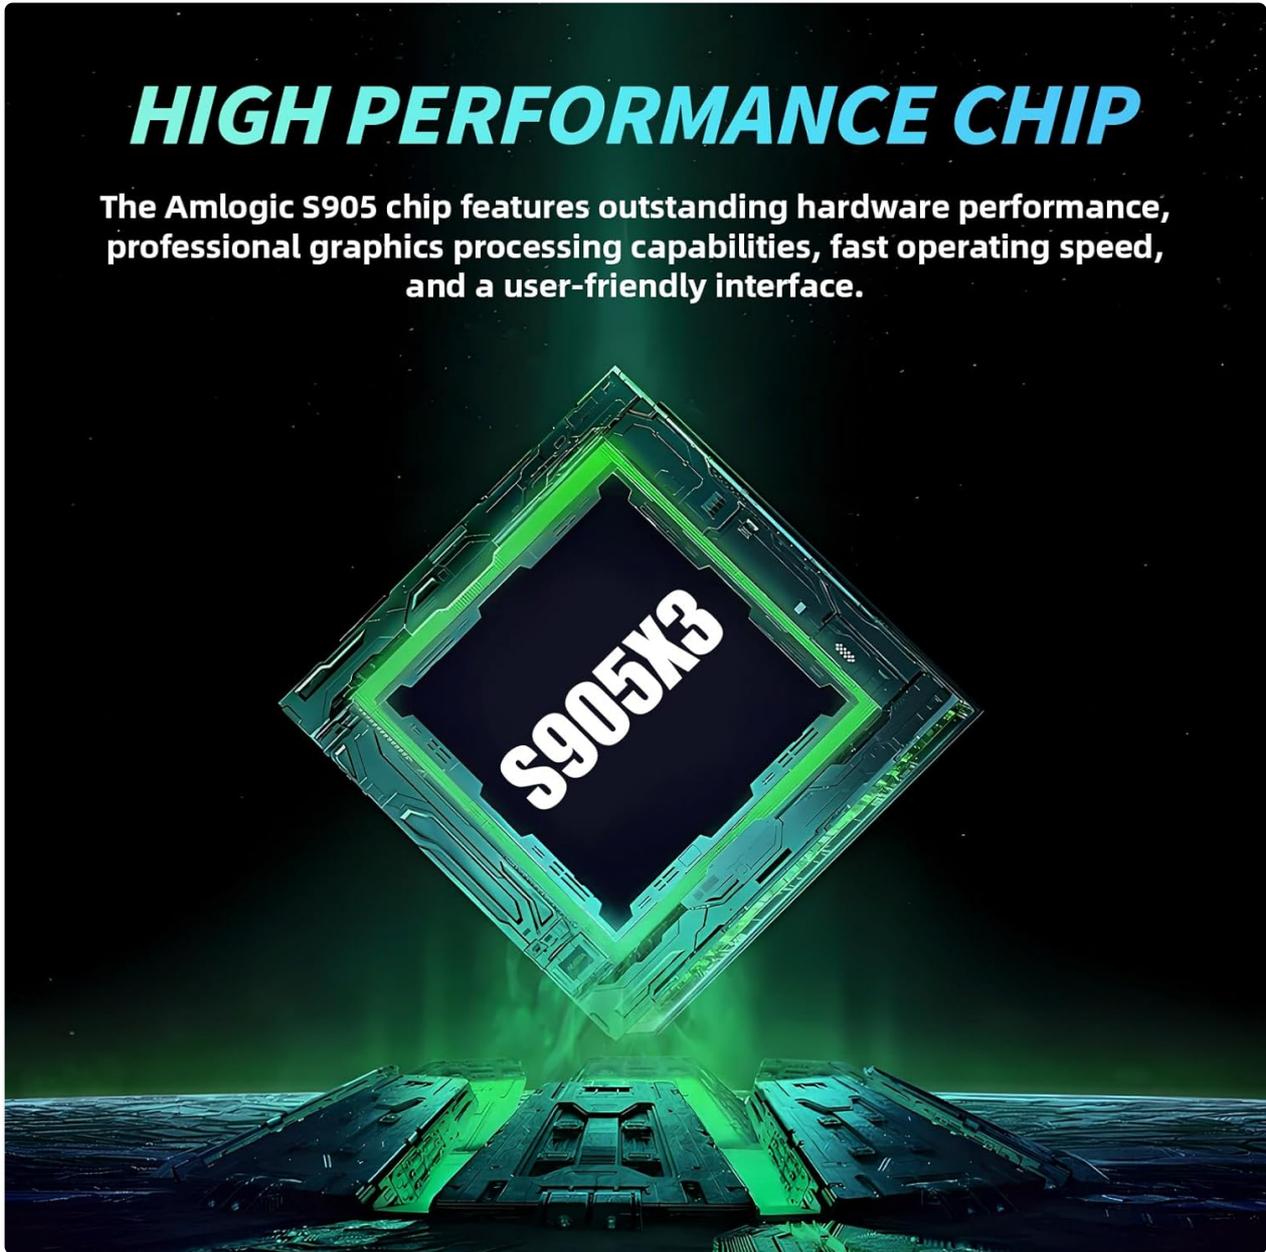


Image: Visual representation of the Amlogic S905X3 chip, highlighting its role as the console's high-performance processor.

Component	Specification
CPU	Amlogic S905X3
Memory (64G version)	64GB
Game Count (64G version)	30,000+ games
Operating System	EmuELEC 4.3 + Android TV 9.0 (Dual System)
Supported Game Types	Over 50 emulators
TV Output	HD 1080P

Languages	20+ languages
Controller	2.4G delay-free wireless control handle
TF Card Support	Up to 256GB
Product Dimensions	5.51 x 5.12 x 6.69 inches

6. MAINTENANCE

To ensure the longevity and optimal performance of your G36 Pro Game Console, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the console and controllers. Avoid liquid cleaners or abrasive materials.
- **Storage:** Store the console in a cool, dry place away from direct sunlight and extreme temperatures.
- **Ventilation:** Ensure the console's ventilation openings are not blocked during operation to prevent overheating.
- **Cable Management:** Handle cables carefully to prevent damage. Avoid bending or twisting them excessively.
- **Software Updates:** Periodically check for system updates within the Android TV or EmuELEC interface to ensure optimal performance and access to new features.

7. TROUBLESHOOTING

If you encounter issues with your G36 Pro Game Console, refer to the following common troubleshooting steps:

- **No Power:**
 - Ensure the power cable is securely connected to both the console and the power outlet.
 - Verify the power outlet is functional.
 - Check if the ON/OFF button on the console has been pressed.
- **No Display on TV:**
 - Confirm the HDMI cable is securely connected to both the console and the TV.
 - Ensure your TV is set to the correct HDMI input source.
 - Try a different HDMI cable or TV port if available.
- **Controllers Not Responding:**
 - Check if the USB receiver is properly inserted into the console's USB port.
 - Ensure the controllers have fresh batteries.
 - Try re-pairing the controllers by restarting the console and controllers.
- **Games Not Loading or Freezing:**
 - Restart the console.
 - Ensure the game file is not corrupted.
 - If using an external TF card, ensure it is properly inserted and not corrupted.

- **System Lag:**

- Close any unnecessary applications running in the Android TV system.
- Ensure adequate ventilation for the console.

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact HKOORLAMULS customer service through their official channels. Keep your proof of purchase for warranty claims.

For additional support or inquiries, you may visit the [HKOORLAMULS Store on Amazon](#).