

yoose Nano Porcelain White

yoose Nano Electric Razor for Women - IPX7 Waterproof Bikini Trimmer User Manual

Model: Nano Porcelain White

1. INTRODUCTION

Thank you for choosing the yoose Nano Electric Razor. This compact and versatile device is designed to provide a smooth and comfortable shaving experience for women, suitable for various body areas. Featuring an IPX7 waterproof rating, USB-C charging, and multiple shaving modes, your yoose Nano Electric Razor is engineered for convenience and efficiency. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using this appliance.
- Keep the appliance away from water when charging. Do not charge near a bathtub, shower, or other water-filled basin.
- This appliance is IPX7 waterproof and can be rinsed under running water or used in the shower. However, **do not immerse the appliance in water for extended periods or use it while charging.**
- Do not use the appliance if it is damaged in any way.
- Keep out of reach of children.
- Always engage the travel lock when transporting the device to prevent accidental activation.
- Use only the provided USB-C charging cable.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- yoose Nano Electric Razor
- 3.6mm Trimmer Comb
- Bucket Storage Bag
- USB-C Charging Cable
- User Manual

What's Included

- Electric Shaver
- 3.6mm Trimmer Comb
- Bucket Storage Bag
- USB-C Charging Cable
- User Manual



Image: All items included in the yoose Nano Electric Razor package.

4. PRODUCT OVERVIEW

The yoose Nano Electric Razor features a compact design with a durable alloy body. It includes an ultra-thin safety mesh and rounded guide combs for a comfortable shave.

NANO

Razors For Women



Image: Front view of the yoose Nano Electric Razor, highlighting the shaver head and power button.

Key Components:

- **Foil Shaver Head:** Designed for ultra-close hair removal.
- **Power Button:** Controls power on/off and switches between two speed settings.
- **USB-C Charging Port:** Located at the bottom for convenient charging.
- **Trimmer Comb:** An attachable accessory for trimming longer hair.

5. CHARGING THE DEVICE

Before first use, fully charge your yoose Nano Electric Razor. A full charge provides weeks of cordless shaving (up to 42 days based on average use).

Charging Steps:

1. Locate the USB-C charging port at the bottom of the razor.
2. Insert the provided USB-C cable into the port.
3. Connect the other end of the USB-C cable to a compatible USB power source (e.g., wall adapter, computer USB port).
4. The indicator light will illuminate during charging and change color or turn off when fully charged.

***Note:** Do not operate the razor while it is charging.*

6. SETUP

Attaching the Trimmer Comb:

For trimming longer hair or for sensitive areas like the bikini line, attach the 3.6mm trimmer comb.

1. Ensure the razor is turned off.
2. Align the trimmer comb with the shaver head.
3. Gently press the comb onto the shaver head until it clicks securely into place.

Removing the Trimmer Comb:

1. Ensure the razor is turned off.
2. Gently pull the trimmer comb away from the shaver head.

7. OPERATING INSTRUCTIONS

The yoose Nano Electric Razor offers versatile shaving options for various body parts.

Compact & Portable

Safe, Smooth Shaving



Image: yoose Nano Electric Razor in use on a leg.

Power On/Off and Speed Settings:

1. Press the power button once to turn on the razor at the first speed setting.
2. Press the power button a second time to switch to the higher speed setting.
3. Press the power button a third time to turn off the razor.

Travel Lock:

To prevent accidental activation during travel:

- **Activate:** With the razor off, press and hold the power button for 5 seconds until the indicator light flashes.
- **Deactivate:** Press and hold the power button for 5 seconds again until the indicator light stops flashing and the razor turns on.

Shaving Techniques:

The yoose Nano Electric Razor can be used for both wet and dry shaving. For best results, ensure your skin is clean.

- **For a Close Shave (without comb):** Gently press the shaver head against your skin and move it in circular motions or against the direction of hair growth. The ultra-thin safety mesh ensures a smooth finish without irritation.
- **For Trimming (with comb):** Attach the 3.6mm trimmer comb. Move the razor against the direction of hair growth to trim hair to a uniform length. This is ideal for bikini areas or for reducing hair length before a closer shave.

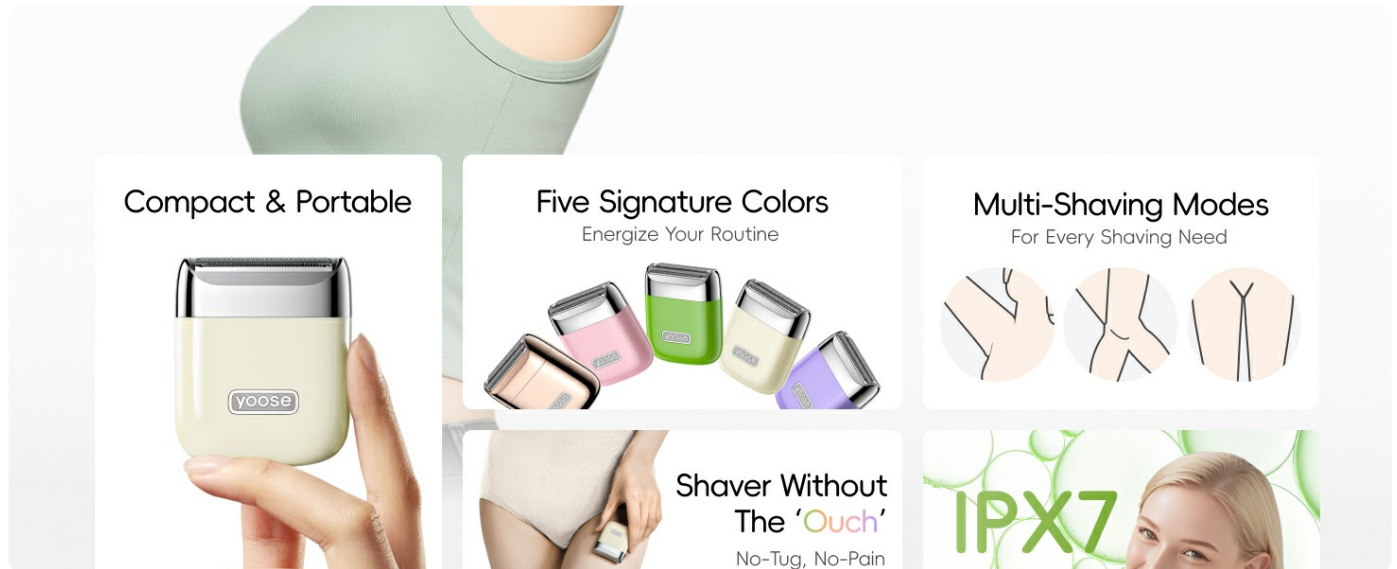


Image: yoose Nano Electric Razor used as a bikini trimmer.



Shave Without the 'Ouch'

No-Tug, No-Pain

8. MAINTENANCE & CLEANING

Regular cleaning ensures optimal performance and hygiene of your yoose Nano Electric Razor.

Cleaning Steps:

1. Ensure the razor is turned off.
2. Remove the shaver head by gently pulling it upwards.
3. Rinse the shaver head and the main body under running water. The IPX7 rating allows for full washability.
4. Use the provided cleaning brush to remove any trapped hair from the blades and foil.
5. Allow all parts to air dry completely before reattaching the shaver head.
6. Snap the shaver head back onto the body until it clicks into place.

Multi-Shaving modes

Your Body, Your Rules



Ultra-Close Foil Shaver

Root-Level Hair Removal



Guide Comb

Smoothly Shave Long, Soft Hair

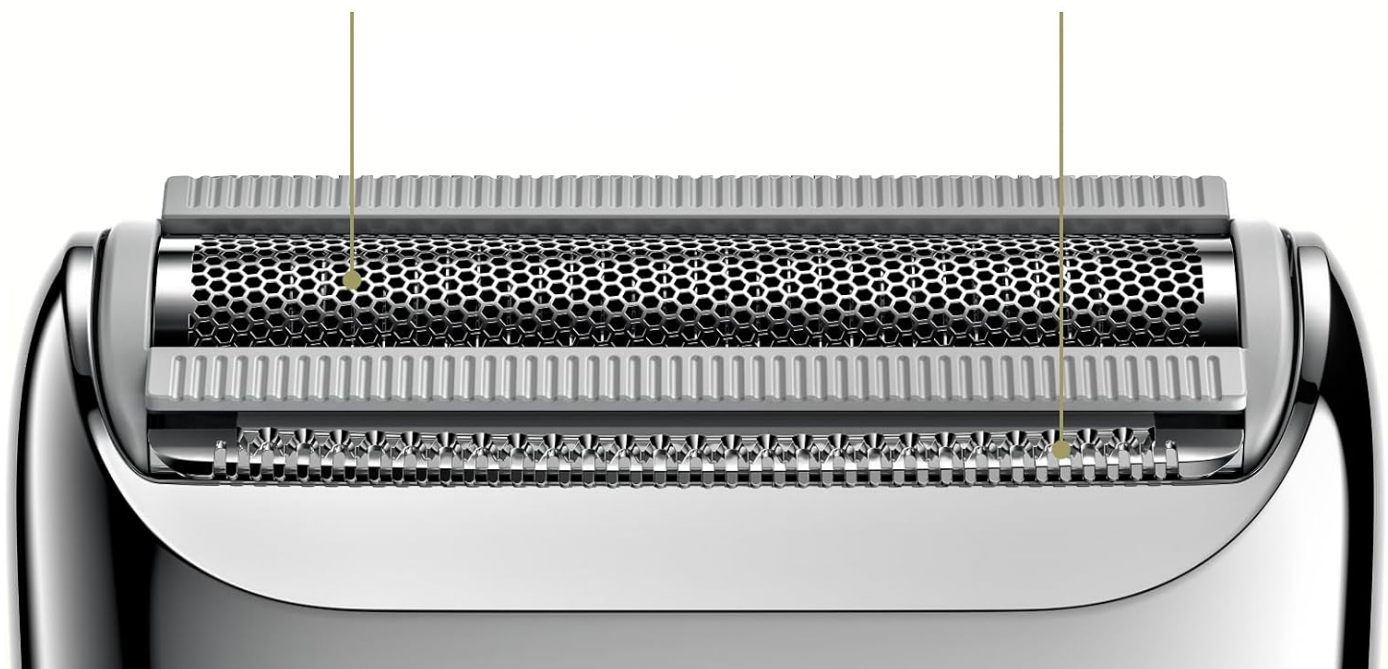


Image: yoose Nano Electric Razor being cleaned under running water.

9. TROUBLESHOOTING

- **Razor not turning on:** Ensure the device is charged. Check if the travel lock is activated (deactivate by pressing and holding the power button for 5 seconds).
- **Poor shaving performance:** Clean the shaver head thoroughly. Ensure the blades are free from hair buildup. The shaver head may need replacement after extended use.
- **Charging issues:** Ensure the USB-C cable is securely connected to both the razor and the power source. Try a different USB-C cable or power adapter.
- **Skin irritation:** Ensure the shaver head is clean. Use the razor on clean, dry skin or with shaving gel/foam. Avoid excessive pressure.

10. SPECIFICATIONS

Feature	Detail
Product Dimensions	1.89 x 0.83 x 2.28 inches
Item Weight	2.4 ounces (68 Grams)
Model Number	Nano Porcelain White
Waterproof Rating	IPX7
Power Source	Battery Powered (USB-C Rechargeable)
Battery Type	1 Lithium Ion battery (included)
Battery Average Life	42 days
Head Type	Foil Arc
Blade Material	Stainless Steel

11. WARRANTY & SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official yoose website. Keep your purchase receipt as proof of purchase.

© 2026 yoose. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question