

[Manuals.plus](#) /

› [KEDSUM](#) /

› KEDSUM 2-in-1 Stair Climbing Cart Instruction Manual (Model DY25E144D-DY25E144D)

KEDSUM DY25E144D-DY25E144D

KEDSUM 2-in-1 Stair Climbing Cart Instruction Manual

Model: DY25E144D-DY25E144D

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your KEDSUM 2-in-1 Stair Climbing Cart. Designed for convenience and durability, this cart features an upgraded 6-wheel system, an adjustable handle, and a foldable aluminum frame, making it ideal for transporting groceries, laundry, and other items up and down stairs with ease. Please read this manual thoroughly before first use to ensure safe and efficient operation.

SAFETY INSTRUCTIONS

To prevent injury or damage to the cart, please observe the following safety guidelines:

- Do not exceed the maximum weight capacity of 300 lbs (136 kg).
- Ensure all parts are securely assembled before loading the cart.
- Always maintain a firm grip on the handle when ascending or descending stairs.
- Distribute weight evenly within the bag to maintain balance.
- Avoid using the cart on extremely uneven or slippery surfaces.
- Keep hands and fingers clear of moving parts, especially during folding and unfolding.
- Store the cart in a dry, safe place when not in use.

PARTS LIST

Please verify that all components are present before beginning assembly:

- Aluminum Frame with 6-Wheel Assembly
- Removable Shopping Bag (60L capacity)
- Adjustable Handle
- Extendable Base Plate

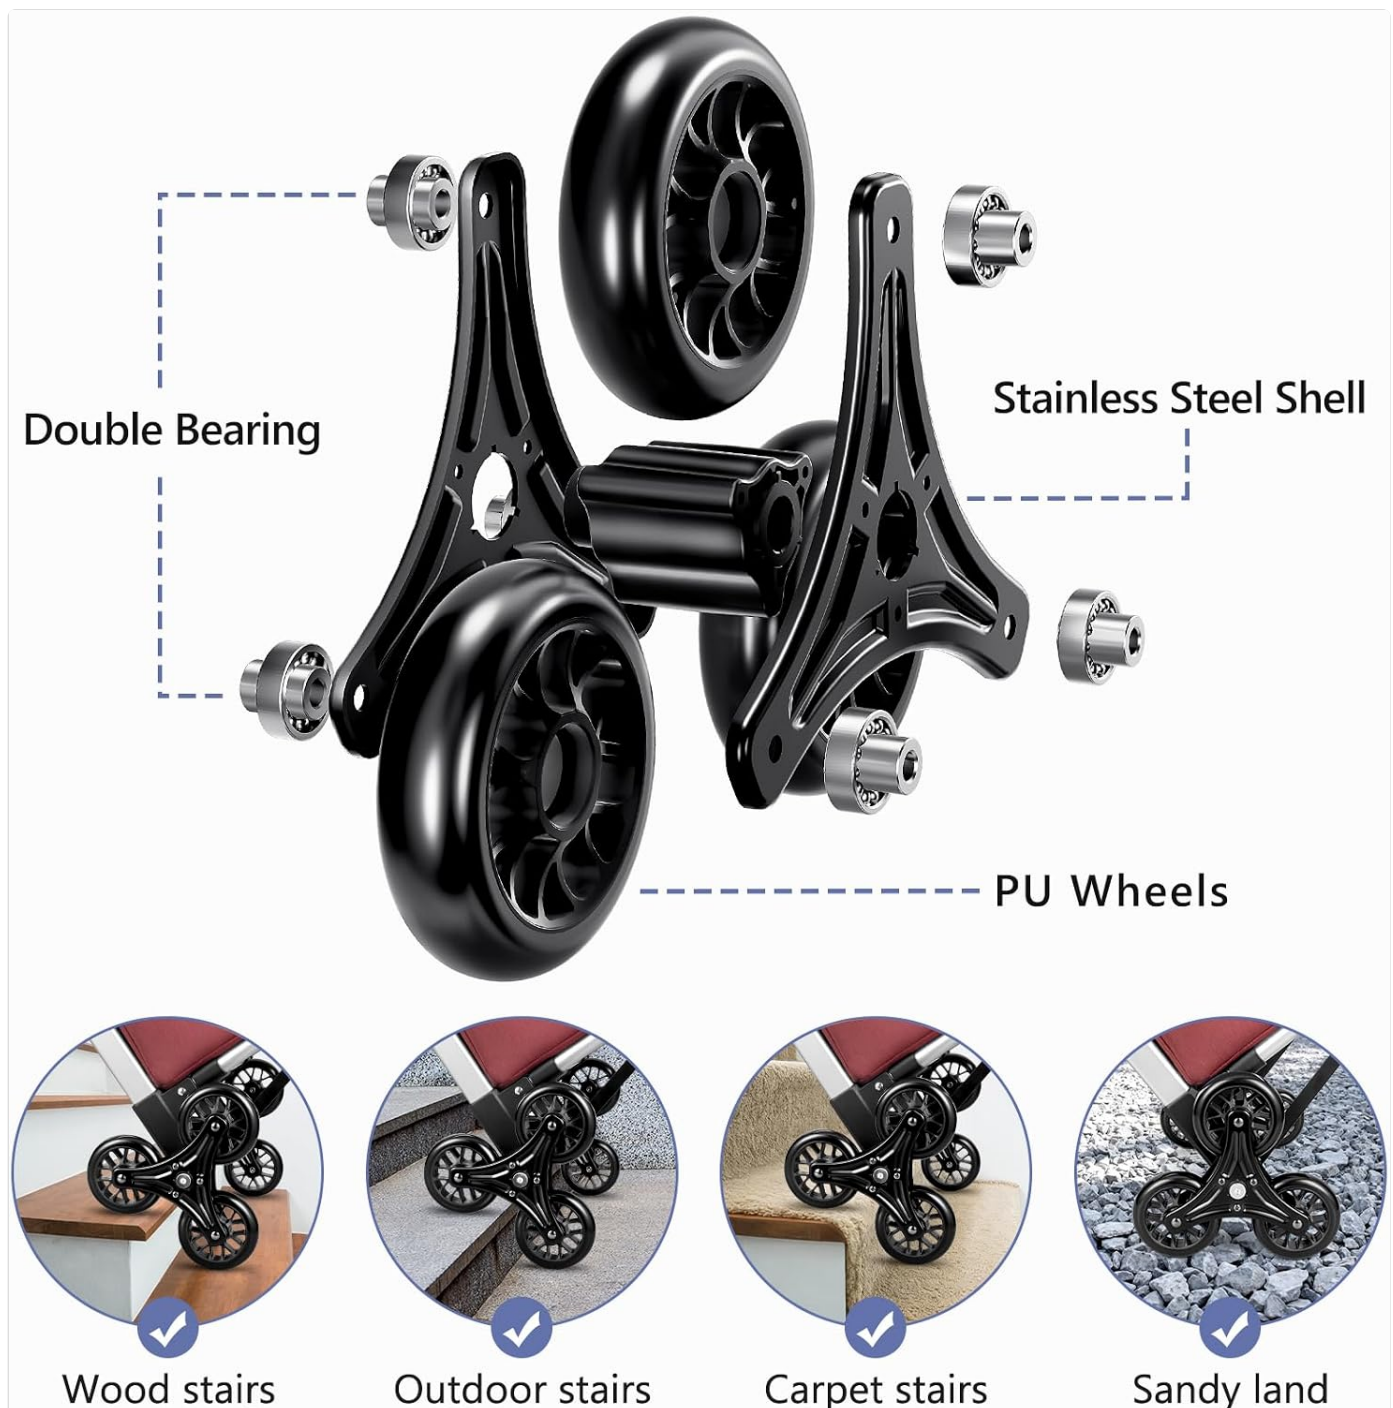


Image: Detailed view of the upgraded 6-wheel system, highlighting the double bearings and stainless steel shell for durability and smooth operation.

SETUP AND ASSEMBLY

The KEDSUM Stair Climbing Cart requires minimal assembly. Follow these steps:

1. **Unfold the Frame:** Gently pull the frame apart until it locks into its open position. Ensure the base plate is fully extended.
2. **Attach the Bag:** Place the removable shopping bag onto the frame. Secure it using any integrated straps or fasteners provided.
3. **Adjust the Handle:** Press the release button on the handle and extend it to your desired height. Ensure it clicks into place. The handle is adjustable up to 150 degrees for ergonomic use.

Folds Fast, Stores Easily

Easy to fold & compact storage



Before folding



Folding



After folding



Image: Visual guide demonstrating the quick folding mechanism of the cart for compact storage.

OPERATING INSTRUCTIONS

Loading the Cart

Open the top flap of the shopping bag. Place items inside, distributing weight evenly. Close the flap to secure contents during transport.

Using on Flat Surfaces

Simply pull the cart behind you using the adjustable handle. The smooth-rolling wheels are designed for easy maneuverability.

Stair Climbing Operation

The unique 6-wheel design allows the cart to "walk" up and down stairs. Approach the stairs with the cart tilted slightly backward. As you pull or push, the rotating wheel clusters will engage with each step, reducing the effort required. Maintain a steady pace and firm grip.

100% Aluminum Stair Climbing Cart



Easy stair climbing



Effort-saving design



Strong load capacity



Fits all stairs



Image: A user demonstrating the ease of pulling the cart up stairs, showcasing the stair-climbing wheel mechanism.

Perfect for various occasions



**SUPERMARKET
SHOPPING**



**UP AND DOWN
STAIRS**



**PUBLIC
LAUNDRY**

Image: Examples of the cart's versatility in various environments, including supermarket aisles, staircases, and laundry facilities.

Folding for Storage

To fold the cart, first empty the bag. Retract the handle to its lowest position. Release any locking mechanisms on the frame (if present) and gently push the sides of the frame together until it collapses into a compact form. The extendable base plate can also be folded up.

MAINTENANCE

- **Cleaning:** The removable bag can be spot cleaned with a damp cloth and mild detergent. The aluminum frame can be wiped clean with a damp cloth. Do not use abrasive cleaners.
- **Wheel Inspection:** Periodically check the wheels for debris or wear. Remove any tangled hair or string from the wheel axles to ensure smooth rotation.
- **Storage:** Store the folded cart in a dry place away from direct sunlight to prolong its lifespan.

TROUBLESHOOTING

- **Cart is difficult to pull/push:** Check for overloaded weight, uneven weight distribution, or debris in the wheels. Ensure the handle is fully extended and locked.
- **Wheels are noisy:** This can be normal during stair climbing. For flat surfaces, check for debris or loose components.
- **Cart does not fold easily:** Ensure the handle is fully retracted and any locking mechanisms are disengaged. Do not force the frame.

SPECIFICATIONS

Brand	KEDSUM
Model Number	DY25E144D-DY25E144D
Material	100% Thickened Aluminum Alloy (Frame), PU Wheels
Product Dimensions (Open)	44D x 33W x 15H Centimetres (approx. 17.3"D x 13"W x 5.9"H)
Product Dimensions (Folded)	Approx. 16.14"W x 7.68"D x 20"H
Product Volume	60 Liters
Weight Capacity	300 Pounds (136 kg)
Item Weight	9.44 Pounds (4.28 kg)
Number of Wheels	6 (Stair Climbing Design)
Special Features	Adjustable Handle (150°), Collapsible, Foldable, Lightweight, Extendable Base Plate

Dimension



Product Volume
60L



Weight Capacity
300LBS



Product Weight
9.44LBS



Image: Detailed dimension diagram of the KEDSUM cart, illustrating its open and folded sizes, product volume, weight capacity, and item weight.

WARRANTY AND SUPPORT

KEDSUM provides a warranty service for this product. For specific warranty details, claims, or technical support, please refer to the warranty card included with your purchase or contact KEDSUM customer service directly through their official website or the retailer where the product was purchased. Please have your model number (DY25E144D-DY25E144D) ready when contacting support.

© 2026 KEDSUM. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question