

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Midea](#) /

› [Midea 5,000 BTU EasyCool Window Air Conditioner MAW05R1JWT-B User Manual](#)

### Midea MAW05R1JWT-B

## Midea 5,000 BTU EasyCool Window Air Conditioner User Manual

Model: MAW05R1JWT-B

### 1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before installing and operating your air conditioner. Keep this manual for future reference. Your safety and the safety of others are very important. Follow all safety messages outlined in this manual.

#### Electrical Safety

- This appliance must be properly grounded.
- Do not operate the air conditioner with a damaged power cord or plug.
- Do not use an extension cord or an adapter plug with this unit.
- Ensure the power supply matches the rating label on the unit.

#### Installation Safety

- Install the unit securely according to the installation instructions to prevent it from falling.
- Ensure the window frame is strong enough to support the unit's weight.
- Do not block the air inlets or outlets of the unit.

### 2. PRODUCT OVERVIEW

The Midea 5,000 BTU EasyCool Window Air Conditioner is designed to cool, dehumidify, and circulate air in spaces up to 150 sq. ft. This unit features intuitive controls and a reusable filter.


#### Unit Components



Image 2.1: Front view of the Midea EasyCool Window Air Conditioner, showing the control panel on the left and the air vents.

The front panel includes the main control interface with buttons for temperature adjustment, mode selection, fan speed, timer, filter reset, and power. The air outlet louvers are located at the top front of the unit.

### Remote Control

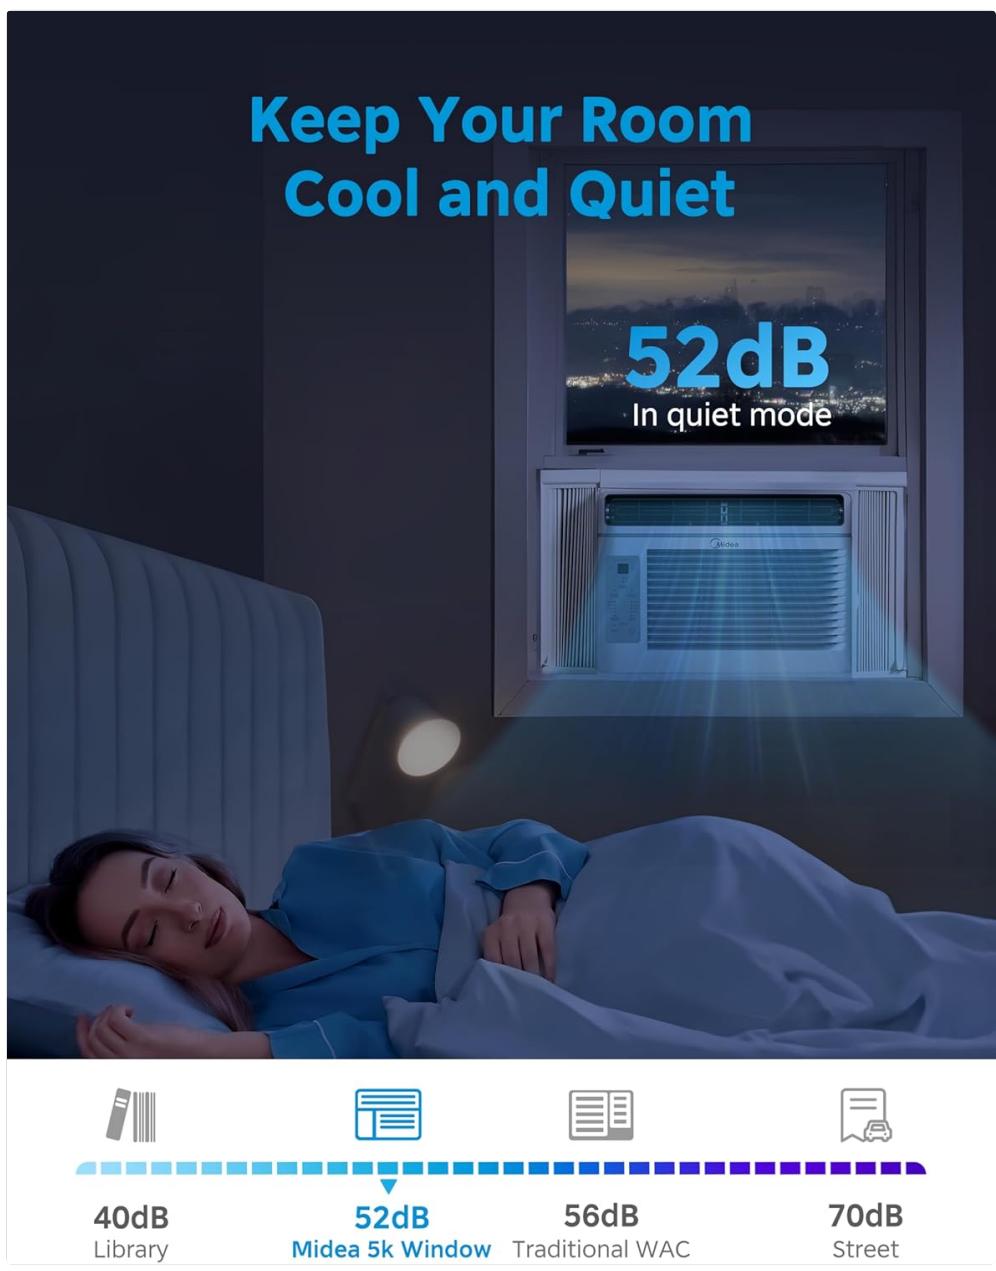

**Image 2.2:** The remote control for the Midea EasyCool Window Air Conditioner, featuring buttons for power, mode, fan speed, temperature, timer, and special functions like Eco and Sleep.

The included remote control allows for convenient adjustment of settings from a distance. It features buttons for power, mode selection (Cool, Fan, Dry), fan speed (Auto, Low, Med, High), temperature adjustment, timer settings, and special functions such as EcoSave and SleepWell modes.

### 3. INSTALLATION INSTRUCTIONS

This section provides a general guide for installing your Midea EasyCool Window Air Conditioner. All mounting accessories are included. A screwdriver is required for installation (not included).

#### Included Accessories and Parts



**Image 3.1:** A visual representation of all included accessories and parts: side panels, top rail, reusable filter, remote control with batteries, various screws, and window sash seal foam.

Before beginning installation, ensure all parts listed in Image 3.1 are present. These typically include side panels, a top rail, a reusable filter, a remote control, mounting screws, and window sash seal foam.

#### Window Requirements and Unit Dimensions

# Easy Installation

with included installation kit



**Image 3.2:** Diagram illustrating the air conditioner's dimensions (13.19"D x 15.98"W x 12.05"H) and indicating compatibility with window frames 23-36 inches wide.

The unit is designed for installation in standard double-hung windows with openings between 23 and 36 inches wide. Refer to Image 3.2 for detailed dimensions. Ensure your window can accommodate these measurements and support the unit's weight (approximately 35.5 pounds).

## Step-by-Step Installation

- 1. Prepare the Window:** Clean the window sill and frame. For some window frames, pilot holes are recommended before installing screws.
- 2. Attach Side Panels:** Slide the accordion side panels into the side channels of the air conditioner.
- 3. Secure Top Rail:** Attach the top rail to the top of the unit using the provided screws.
- 4. Place Unit in Window:** Carefully lift the unit and place it in the window opening, ensuring the bottom rail rests on the window sill.
- 5. Extend Side Panels:** Extend the side panels to fill the window opening and secure them to the window frame with screws.
- 6. Seal Gaps:** Apply the window sash seal foam to seal any gaps between the window sashes and the unit to prevent air leakage.
- 7. Test Operation:** Plug in the unit and test its basic functions to ensure proper installation.

## 4. OPERATING INSTRUCTIONS

Your Midea EasyCool Window Air Conditioner offers multiple modes and settings for optimal comfort. The unit can cool, dehumidify, and circulate air.



Image 4.1: Visual representation of the three primary functions: cooling with snowflake icon, fan operation with fan icon, and dehumidification with water droplet icon, demonstrating the unit's versatility.

### Control Panel and Remote Functions

Image 4.2: A detailed diagram highlighting the electronic control panel buttons and their functions, including temperature increase/decrease, timer, filter reset, sleep mode, mode selection, fan speed adjustment, ECO mode, and power ON/OFF. It also shows the reusable filter being removed.

Refer to Image 4.2 for a detailed understanding of the electronic control panel and its functions. All these functions can also be accessed via the remote control.

### Operating Modes

- Cool Mode:** Provides cooling to the room. Adjust the temperature using the up/down arrows.
- Fan Mode:** Circulates air without cooling. Select from Low, Med, or High fan speeds.
- Dry Mode (Dehumidifier):** Reduces humidity in the room. The fan speed is automatically controlled in this mode.
- Auto Mode:** The unit automatically selects the operating mode (Cool or Fan) and fan speed based on the set temperature and current room temperature.

### Special Features

- EcoSave Mode:** Optimizes energy consumption by cycling the compressor and fan to maintain the set temperature efficiently.
- SleepWell Mode:** Gradually increases the set temperature over several hours to provide comfortable sleeping conditions while saving energy.
- EasyTimer:** Allows you to program the unit to turn on or off at a specific time within a 24-hour period.
- Auto Restart:** In the event of a power outage, the unit will automatically restart with the last used settings once power is restored.

## 5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your air conditioner. The primary maintenance task is cleaning the air filter.

## Cleaning the Reusable Air Filter

The air filter should be cleaned regularly, typically every two weeks, or when the 'Clean Filter' warning indicator illuminates on the control panel.

- 1. Remove the Filter:** Gently pull the front panel open and slide out the air filter. Refer to Image 4.2 for visual guidance on filter removal.
- 2. Clean the Filter:** Wash the filter with warm, soapy water. Rinse thoroughly. For heavy dust accumulation, a vacuum cleaner can be used before washing.
- 3. Dry the Filter:** Allow the filter to air dry completely before reinserting it. Do not expose it to direct sunlight or high heat.
- 4. Reinstall the Filter:** Slide the dry filter back into its slot and close the front panel.
- 5. Reset Filter Indicator:** Press the 'FILTER' button on the control panel to reset the filter cleaning reminder.

## General Cleaning

- Wipe the exterior of the unit with a soft, damp cloth. Do not use harsh cleaners or abrasives.
- Ensure the air intake and exhaust vents are free from obstructions.

## 6. TROUBLESHOOTING

This section addresses common issues you might encounter with your air conditioner. If the problem persists after attempting these solutions, please contact customer support.

Problem	Possible Cause	Solution
Unit does not turn on	No power; circuit breaker tripped; power cord damaged.	Check power connection; reset circuit breaker; inspect power cord for damage.
Insufficient cooling	Dirty air filter; blocked air vents; room too large; temperature setting too high.	Clean air filter; clear obstructions; ensure unit is appropriate for room size; lower temperature setting.
Excessive noise	Loose installation; foreign object in fan; unit not level.	Re-secure unit; check for obstructions; ensure unit is level.
Water dripping outside	Normal operation (condensation).	This is normal during cooling operation. Ensure proper drainage.
Remote control not working	Dead batteries; obstruction between remote and unit.	Replace batteries; remove obstructions; ensure remote is pointed at the unit.

## 7. SPECIFICATIONS

Technical specifications for the Midea 5,000 BTU EasyCool Window Air Conditioner, Model MAW05R1JWT-B.

Feature	Specification
Model Number	MAW05R1JWT-B
Cooling Power	5,000 BTU
Coverage Area	Up to 150 sq. ft.
Product Dimensions (D x W x H)	13.19" x 15.98" x 12.05"
Item Weight	35.5 pounds
Voltage	115 Volts
Noise Level (Low Mode)	52 Decibels
Form Factor	Window

Feature	Specification
Special Features	Dehumidifier, Dust Filter, Eco Mode, Fast Cooling, Remote Controlled
Included Components	Window Bracket
Batteries Required	Yes (for remote control)

## 8. WARRANTY INFORMATION

This Midea product is backed by a **One-Year Limited Warranty** from the original purchase date. This warranty covers parts and labor for defects in materials or workmanship under normal use.

For specific warranty terms and conditions, please refer to the warranty card included with your product or contact Midea customer support.

## 9. CUSTOMER SUPPORT


For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Midea customer support.

You can find more information and support resources by visiting the official Midea store:

[Visit the Midea Store on Amazon](#)

### Related Documents - MAW05R1JWT-B

The thumbnail shows the front cover of the 'Midea Ductless Split Unit System Owner's Manual' for models MAW08V1JWT, MAW10V1JWT, and MAW12V1JWT. The cover is white with the Midea logo and product details.	<p><a href="#">Midea Ductless Split Unit System Owner's Manual</a></p> <p>Comprehensive owner's manual for Midea Ductless Split Unit Systems (9,000-24,000 BTU). Covers safety, operation modes, remote control usage, features, cleaning, maintenance, and troubleshooting.</p>
The thumbnail shows the front cover of the 'Midea Ductless Split Unit System Owner's Manual: Operation, Maintenance, and Troubleshooting' for models MAW08V1JWT, MAW10V1JWT, and MAW12V1JWT. The cover is white with the Midea logo and product details.	<p><a href="#">Midea Ductless Split Unit System Owner's Manual: Operation, Maintenance, and Troubleshooting</a></p> <p>Comprehensive owner's manual for Midea Ductless Split Unit Systems (9,000-24,000 BTU). Covers remote control operation, features, cleaning, maintenance, and troubleshooting for optimal performance. Includes safety warnings and energy-saving tips.</p>
The thumbnail shows the front cover of the 'Midea Window Air Conditioner Installation Guide' for models MAW08V1QWT, MAW10V1QWT, and MAW12V1QWT. The cover features an image of the window air conditioner unit.	<p><a href="#">Midea Window Air Conditioner Installation Guide</a></p> <p>Comprehensive installation guide for Midea Window Type Air Conditioners, including models MAW08V1QWT, MAW10V1QWT, and MAW12V1QWT. Covers tools, hardware, window requirements, support bracket installation, unit securing, and sealing.</p>
The thumbnail shows the front cover of the 'Midea Window Type Air Conditioner Installation Guide' for models MAW08V1QWT, MAW10V1QWT, and MAW12V1QWT. The cover features an image of the window air conditioner unit.	<p><a href="#">Midea Window Type Air Conditioner Installation Guide</a></p> <p>Detailed installation guide for Midea Window Type Air Conditioners, including models MAW08V1QWT, MAW10V1QWT, and MAW12V1QWT. Covers tools, hardware, bracket installation, unit securing, sealing, and FAQs.</p>
The thumbnail shows the front cover of the 'Midea MAW Window Air Conditioner User Manual: Operation, Installation, and Care' for models MAW12V1DWT, MAW10V1DWT, and MAW08V1DWT. The cover features an image of the window air conditioner unit.	<p><a href="#">Midea MAW Window Air Conditioner User Manual: Operation, Installation, and Care</a></p> <p>Your guide to the Midea MAW series window air conditioners (MAW12V1DWT, MAW10V1DWT, MAW08V1DWT). Find detailed instructions on safe operation, installation, maintenance, troubleshooting, and warranty information.</p>

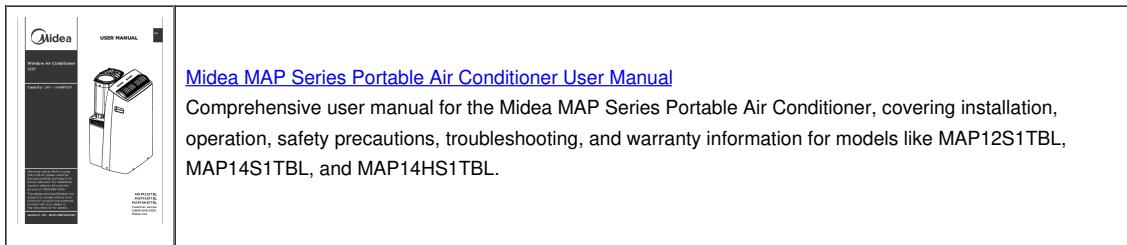

Documents - Midea – MAW05R1JWT-B



[\[pdf\] User Manual Instructions](#)

MAW 05k 10k Midea Sams User Manual 2023 P01 NT indd octav user manual 11 ore fa — Be sure the air conditioner has been securely and installed according to installation instructions in this Save for possible mencykphqb images webfronts cache |||

Window Air Conditioner MAW USER MANUAL **MAW05R1JWT-B/MAW06R1JWT-B/ MAW08S1JWT-B/MAW12S1.**

Warning notices: Before using this product, please read this manual carefully and keep it for future reference.

7KHGHVLJQDQGVSHFLFDWLRQVDUHVXEMHFWWRFKDQJHZLWKRXWSULRUQRWLFIHRSURGXFWLPS  
RQVXOWZLWK RX...

lang:en score:35 filesize: 39.04 M page\_count: 40 document date: 2023-11-20



[\[pdf\] User Manual Instructions](#)


MAW 05k 10k Midea Sams User Manual 2023 P01 NT indd octav user manual Retailer Web ServicesBefore using your new product please r thoroughly to ensure that you know how operate the features and functions airmdeplfbfxspmomedpfbfxspmoimages webfronts cache medpfb medpfbfxspmo airmeilfgqdoiveimages meilfgqdoive airmexxaevhoeilimages mexxaevhoeilimages ||| ||| Window Air Conditioner MAW USER ! MAW05R1JWT-B/MAW06R1JWT-B/ MAW08S1JWT-B/MAW12S1JWT-B Warning notices: Before using this product, please read this manu keep it for future reference. 7KHGHVLJQDQGVSHFLFDWLRQVDUHVXEMHFWWR ||| Window Air Conditioner MAW USER MANUAL MAW B/MAW06R1JWT-B/ MAW08S1JWT-B/MAW12S1JWT-B Warning notices: Before using this product, please read this manual carefully and k reference. 7KHGHVLJQDQGVSHFLFDWLRQVDUHVXEMHFWWR

Window Air Conditioner MAW USER MANUAL **MAW05R1JWT-B/MAW06R1JWT-B/ MAW08S1JWT-B/MAW12S1.**

Warning notices: Before using this product, please read this manual carefully and keep it for future reference.

7KHGHVLJQDQGVSHFLFDWLRQVDUHVXEMHFWWRFKDQJHZLWKRXWSULRUQRWLFIHRSURGXFWLPS  
RQVXOWZLWK RX...

lang:en score:33 filesize: 38.94 M page\_count: 40 document date: 2023-11-20

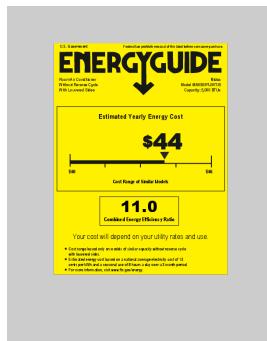

[\[pdf\] Label](#)

MAW05R1JWT B Federal Trade Commission Download Midea 5 000 BTU Window AC 3 in 1 Cools Dehumidifies and Circulates Washable Fi Control up to 150 Sq Ft midea content dam aem us air conditioners window btu ac cools dehumidifies circulates washable filter remote contr U.S. Government Federal law prohibits removal of this label before consumer purchase. Room Air Conditioner Wit Cycle With Louvered Sides Midea Model **MAW05R1JWT-B** Capacity: 5,000 BTUs Estimated Yearly Energy Cost 4 Range of Similar Models 11.0 Combined Energy Effici...

lang:en score:30 filesize: 163.39 K page\_count: 1 document date: 2023-11-03



[\[pdf\]](#) User Manual Instructions

MAW 05k 10k Midea Sams User Manual 2023 P01 NT indd octav Download Smart 8 000 BTU Window AC 3 in 1 Cools Dehumidifies and Circulates Air. Filter Remote Control up to 550 Sq Ft BJs WAC final midea content dam aem us air conditioners smart btu window ac cools dehumidifies circulates air filter remote control 350 sq ft |||

Window Air Conditioner MAW USER MANUAL **MAW05R1JWT-B/MAW06R1JWT-B/ MAW08S1JWT-B/MAW12S1JWT-B**

Warning notices: Before using this product, please read this manual carefully and keep it for future reference.

Design and specifications are subject to change without prior notice for product improvement. ©2023 Midea. All rights reserved. Midea reserves the right to change the appearance of the actual product at the discretion of Midea.

lang:en score:21 filesize: 38.99 M page\_count: 40 document date: 2023-11-20