

Microsoft Xbox 360 S

Xbox 360 S Slim Console Bundle User Manual

Model: Xbox 360 S

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Xbox Microsoft 360 S (Slim) Console Bundle. Please read this guide thoroughly to ensure proper use and longevity of your gaming system.

The Xbox 360 S console offers a classic gaming experience, supporting physical Xbox 360 disc games and select original Xbox titles. This bundle includes the console, a wireless controller, an HDMI cable, and a power adapter, providing everything needed to begin playing.

1. SETUP GUIDE

1.1 Unpacking and Inspection

Carefully remove all components from the packaging. Verify that you have the Xbox 360 S console, one wireless controller, an HDMI cable, and a power adapter. Inspect all items for any visible damage before proceeding with setup.

1.2 Connecting the Console

Follow these steps to connect your Xbox 360 S console:

1. **Power Connection:** Connect the power adapter to the console's power port, then plug the power cord into a wall outlet.
2. **HDMI Connection:** Connect one end of the HDMI cable to the HDMI OUT port on the back of the console and the other end to an available HDMI input on your television or monitor.



Image: The Xbox 360 S Slim console, a black wireless controller, the power adapter with its cable, and an HDMI cable laid out on a white surface. This image displays all the main components included in the bundle.

1.3 Connecting the Wireless Controller

To prepare and connect your wireless controller:

1. **Install Batteries:** Open the battery compartment on the back of the controller and insert two AA batteries (not included), ensuring correct polarity.
2. **Pairing the Controller:** Turn on the console. Press and hold the Guide button (Xbox logo) on the controller until it turns on. Press the connect button on the console (small circular button near the memory unit slots) and then press the connect button on the controller (small button between the shoulder buttons). The lights around the console's power button and the controller's Guide button will flash and then become solid when paired.



Image: A close-up view of the black Xbox 360 wireless controller, showing its buttons, joysticks, and the central Xbox Guide button. This image highlights the primary input device for the console.

2. OPERATING INSTRUCTIONS

2.1 Powering On/Off

To turn on the console, press the power button on the front of the console or the Guide button on a connected controller. To turn off, press and hold the Guide button on the controller and select 'Turn Off Console' from the menu, or press the power button on the console.

2.2 Inserting and Ejecting Discs

To insert a game disc, gently push the disc into the disc drive slot on the front of the console with the label facing up. The console will automatically pull the disc in. To eject, press the eject button located next to the disc drive slot.



Image: A direct front view of the black Xbox 360 S Slim console, highlighting the disc drive slot and the power/eject buttons. This image helps users locate the disc insertion point.

2.3 Navigating the Dashboard

Once powered on, the Xbox 360 Dashboard provides access to your games, media, and system settings. Use the controller's directional pad or left analog stick to navigate through menus and the A button to select options.

2.4 Online Features and Limitations

While the Xbox 360 supports online play and downloads for users with pre-2024 Xbox accounts, please note that the Xbox 360 digital store was discontinued in 2024. New digital purchases are no longer possible through the console's store. Disc-based games remain fully functional.

3. MAINTENANCE

3.1 Cleaning the Console

To keep your console in optimal condition:

- Regularly wipe the exterior of the console with a soft, dry, lint-free cloth.
- Use a vacuum cleaner with a brush attachment to gently remove dust from the ventilation grilles to prevent overheating.
- Do not use liquid cleaners or abrasive materials.

3.2 Proper Storage

Store the console in a cool, dry, and well-ventilated area, away from direct sunlight, heat sources, and excessive dust. Ensure adequate space around the console for airflow.

4. TROUBLESHOOTING

If you encounter issues with your Xbox 360 S console, refer to the common solutions below:

4.1 No Power

- Ensure the power adapter is securely connected to both the console and a working wall outlet.
- Check if the power outlet is functional by plugging in another device.
- Verify the power adapter's indicator light is on (green or orange).

4.2 No Video/Audio Output

- Confirm the HDMI cable is securely connected to both the console and the TV/monitor.
- Ensure your TV/monitor is set to the correct HDMI input source.
- Try a different HDMI cable or a different HDMI port on your TV.

4.3 Controller Not Connecting

- Replace the batteries in the controller.
- Repeat the pairing process (press connect button on console, then on controller).
- Ensure no strong wireless interference is present.

4.4 Disc Read Errors

- Ensure the disc is clean and free of scratches or smudges. Wipe gently with a soft cloth from the center outwards.
- Try a different game disc to determine if the issue is with the console or the disc.
- Ensure the console is placed on a stable, flat surface.

5. PRODUCT SPECIFICATIONS







Feature	Detail
Model Number	Xbox 360 S
Internal Storage	4GB (additional storage not included)
Manufacturer	Microsoft
Connectivity	HDMI, USB, Ethernet, Wi-Fi (built-in)
Disc Compatibility	Xbox 360 game discs, select original Xbox titles
Controller	Wireless (requires 2x AA batteries, not included)

6. WARRANTY AND SUPPORT

This Xbox 360 S Slim Console Bundle is a renewed product. For specific warranty details and support, please refer to the information provided by the seller, Amazon Renewed, or the specific third-party seller from whom you purchased the item. Renewed products typically come with a separate warranty provided by the refurbisher or seller, not the original manufacturer.

For technical assistance or questions regarding your renewed console, it is recommended to contact the seller directly through your purchase platform.

Related Documents - Xbox 360 S

	<p>Xbox 360 Chatpad User Manual and Guide</p> <p>Comprehensive user guide for the Microsoft Xbox 360 Chatpad. Learn about its features, setup, connecting to your controller, using the keyboard, troubleshooting common issues, and important safety information. Compatible with Xbox 360 consoles and controllers.</p>
	<p>Xbox 360 Controller User Manual and Safety Guide</p> <p>Official user manual and safety guide for the Microsoft Xbox 360 Controller, covering setup, usage, health warnings, and troubleshooting.</p>
	<p>Xbox 360 Wireless Controller User Manual</p> <p>Official user manual for the Xbox 360 Wireless Controller, detailing setup, connection, usage, safety precautions, and troubleshooting. Learn how to connect and use your controller for an optimal gaming experience.</p>
	<p>Xbox One X Project Scorpio Edition Motherboard Replacement Guide</p> <p>A detailed guide from iFixit on how to replace the motherboard of the Xbox One X Project Scorpio Edition, manufactured by Microsoft in 2017. Includes step-by-step instructions and tool requirements.</p>
	<p>Project Gotham Racing 3 (PGR3) Xbox 360 Game Manual</p> <p>Official game manual for Project Gotham Racing 3 on Xbox 360, detailing game controls, modes, features, career progression, online play, cities, cars, and technical information.</p>
	<p>Xbox 360 Wireless Controller Front Case Replacement Guide</p> <p>A step-by-step guide to replacing the front case of an Xbox 360 Wireless Controller, including tools and parts needed for the repair.</p>

