

[Manuals.plus](#) /

> [Aroepurt](#) /

> Aroepurt Case for Tecno Spark 40C Km4K Phone - Instruction Manual

Aroepurt CPT11

Aroepurt Case for Tecno Spark 40C Km4K Phone - Instruction Manual

Model: CPT11

INTRODUCTION

This manual provides comprehensive instructions for the proper installation, use, and care of your Aroepurt CPT11 phone case, designed specifically for the Tecno Spark 40C Km4K smartphone. The package includes one phone case and one tempered glass screen protector.

SETUP AND INSTALLATION

1. Phone Case Installation

1. Ensure your Tecno Spark 40C Km4K phone is clean and free of dust or debris.
2. Gently align your phone with the soft silicone frame of the case.
3. Press the phone firmly into the case, ensuring all edges are securely seated within the frame.
4. Verify that all ports, buttons, and camera lenses are correctly aligned with the case cutouts.

2. Tempered Glass Screen Protector Installation

The included tempered glass screen protector offers enhanced display protection. Follow these steps for optimal application:

1. **Clean the Screen:** Use the provided cleaning wipes (if any) or a microfiber cloth to thoroughly clean your phone's screen. Ensure no dust, smudges, or fingerprints remain.
2. **Remove Protective Film:** Carefully peel off the protective film from the adhesive side of the tempered glass. Avoid touching the adhesive surface.
3. **Align the Protector:** Align the screen protector precisely with your phone's screen, paying attention to the edges, camera, and speaker cutouts.
4. **Apply:** Once aligned, gently lower the screen protector onto the screen. It will begin to adhere automatically.
5. **Remove Bubbles:** If air bubbles appear, gently push them towards the edges of the screen using a soft cloth or squeegee.



Scratch Proof

Scratch proof screen effectively avoids sharp objects scratching or abrasion



Image: Features of the tempered glass screen protector, highlighting its 9H hardness, shatterproof design, and anti-fingerprint coating.



Image: The screen protector's scratch-proof design, effectively preventing damage from sharp objects.

OPERATING INSTRUCTIONS AND FEATURES

1. Magnetic Closure

The case features a built-in magnetic closure to keep the front flap securely closed. This helps protect your phone screen and keeps any stored cards or money safely inside.

2. Kickstand Feature

To use the kickstand, simply fold the back of the case to create a triangular support. This allows for adjustable viewing angles, ideal for watching videos or reading hands-free.



Image: The case's magnetic closure and integrated kickstand feature for convenient media viewing.

3. Card Storage

The interior of the front flap includes dedicated slots for storing cards and cash. This design combines a card package and phone frame into one functional unit, allowing you to carry essential items conveniently.

- The case is designed to carry up to 2 cards.
- Insert cards gently into the designated slots.

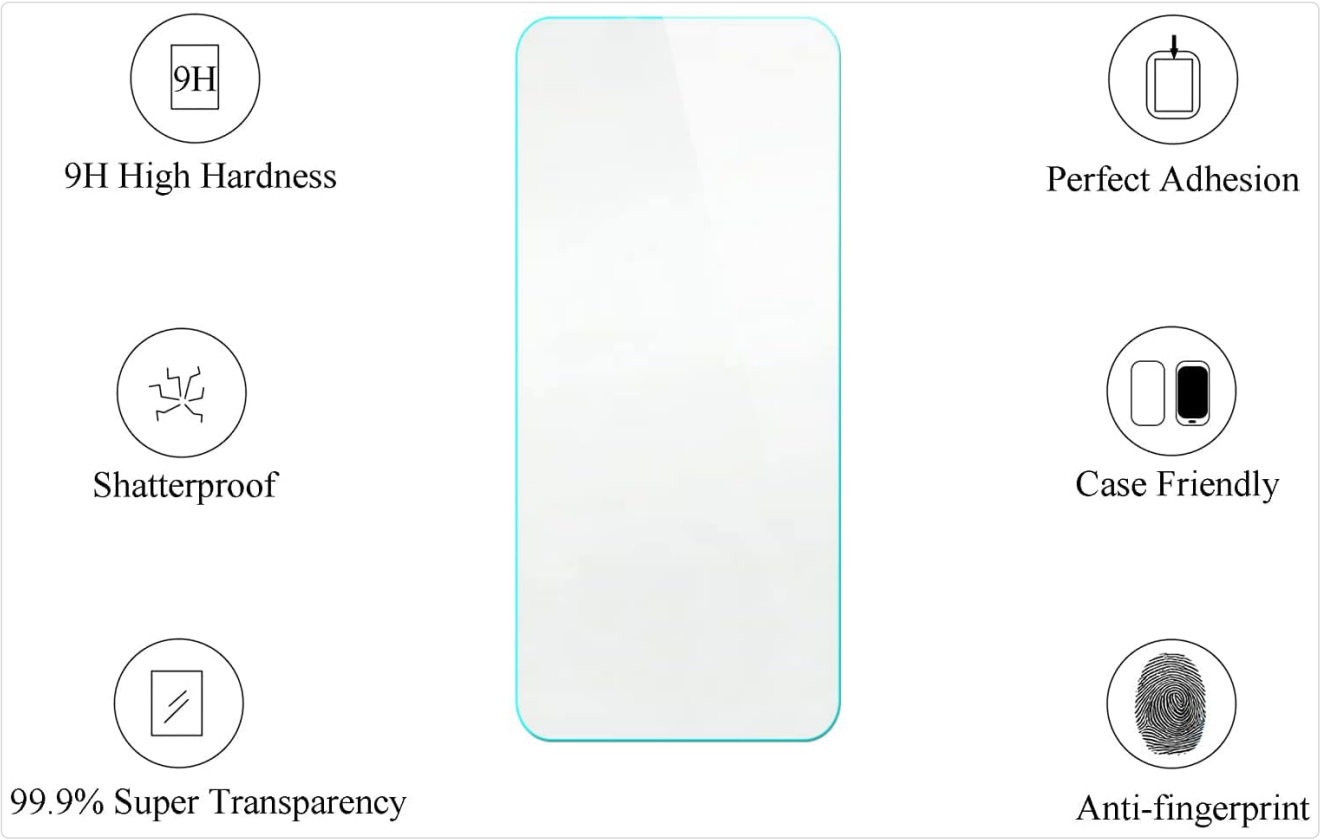


Image: Interior view of the case, showcasing the card storage slots.

MAINTENANCE

- **Cleaning the Case:** Wipe the PU leather surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the material.
- **Cleaning the Screen Protector:** Use a microfiber cloth to gently wipe the tempered glass. For stubborn smudges, a screen cleaner spray designed for electronics can be used.
- **Avoid Extreme Conditions:** Do not expose the case to extreme heat, direct sunlight for prolonged periods, or excessive moisture.
- **Inspect Regularly:** Periodically check the case for any signs of wear or damage, especially around the edges and corners, to ensure continued protection.

TROUBLESHOOTING

- **Case does not fit:** Ensure you have the correct phone model (Tecno Spark 40C Km4K). If the model is correct, try re-aligning the phone carefully into the silicone frame.
- **Screen protector bubbles:** If bubbles persist after installation, gently lift the nearest edge of the protector and re-apply, pushing bubbles out with a soft cloth. Small bubbles may disappear over 24-48 hours.
- **Magnetic closure not holding:** Check if there are too many cards or items stored in the wallet section, which might prevent the magnet from engaging properly. Remove excess items.

SPECIFICATIONS

Feature	Detail
Model	CPT11
Compatible Phone Model	Tecno Spark 40C Km4K
Material	PC hard back panel + soft silicone frame + metal support finger ring (PU Leather exterior)
Product Dimensions	0.39 x 0.39 x 0.39 inches
Item Weight	2.46 ounces
Special Features	Card insertion, Finger ring + support + car bracket magnetic suction, Stash the change
Form Factor	Solid protection with support
Included Items	1*Phone Case, 1*Tempered Glass Screen Protector

WARRANTY INFORMATION

Specific warranty details for this product are typically provided at the point of purchase or within the product packaging. Please refer to your purchase receipt or contact the retailer for information regarding warranty coverage and terms.

SUPPORT

For further assistance, technical support, or inquiries regarding your Aroepurt CPT11 phone case, please contact the seller or retailer from whom you purchased the product. You may also visit the Aroepurt brand website for general product information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FJZ5P1SJ>

More documents and user manuals: <https://manuals.plus/>