

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [NBCP](#) /
- › [NBCP Wireless Guitar Controller X615W Instruction Manual](#)

## NBCP X615W

# NBCP Wireless Guitar Controller X615W Instruction Manual

Model: X615W

## 1. PRODUCT OVERVIEW

The NBCP Wireless Guitar Controller is designed to enhance your rhythm gaming experience on Xbox Series X|S, Xbox One, and PC. It features a 2.4G wireless connection for seamless gameplay and an authentic design for immersive performance.

### Key Features:

- **Exclusive Game Compatibility:** Designed for Rock Band 4 (Xbox Series X|S & Xbox One) and Fortnite Festival (PC). Not compatible with Guitar Hero, Clone Hero, or Rock Band 1.
- **Easy 2.4G Guided Connection:** Utilizes a 2.4G USB dongle for stable, lag-free wireless connection.
- **Authentic Performance Design:** Equipped with 5 responsive fret buttons, a smooth strum bar, whammy bar, and motion tilt for Star Power activation.
- **Portable & Lightweight Build:** Features a detachable neck for easy storage and transport, along with an adjustable strap for comfort.
- **Long-Lasting Battery:** Powered by 4 AA batteries (not included) with a low-battery alert LED.



Image: The NBCP Wireless Guitar Controller is compatible with Rock Band 4 on Xbox Series X|S and Xbox One consoles.



Image: The NBCP Wireless Guitar Controller is ready for Fortnite Festival on PC, offering epic rhythm battles.

## 2. SETUP AND CONNECTION

---

### 2.1 Component Identification

- Wireless Guitar Controller
- 2.4G USB Dongle
- Adjustable Strap

### 2.2 Battery Installation

1. Locate the battery compartment on the back of the guitar controller.
2. Open the battery compartment cover.
3. Insert 4 AA batteries (not included), ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

### 2.3 Wireless Connection (Xbox Series X|S / Xbox One)

1. Ensure your Xbox console is powered on.
2. Plug the 2.4G USB dongle firmly into an available USB port on your Xbox Series X|S or Xbox One console.
3. Turn on your existing Xbox controller and ensure it is connected to the console.
4. Press the sync button on the guitar controller (usually a small button near the connection indicator lights).
5. The indicator lights on the guitar and dongle will flash and then become solid when successfully paired.
6. If connection fails, ensure the dongle is fully inserted and check battery levels. Avoid using a PC dongle by mistake.

### 2.4 Wireless Connection (PC)

1. Ensure your PC is powered on.
2. Plug the 2.4G USB dongle firmly into an available USB port on your PC.
3. The PC should automatically recognize the device.
4. Turn on the guitar controller.
5. The indicator lights on the guitar and dongle will flash and then become solid when successfully paired.
6. If connection fails, ensure the dongle is fully inserted and check battery levels.



Image: Guided 2.4G Pairing System illustrating how to connect the dongle to the console and pair via an Xbox controller.



Image: A three-step guide demonstrating the connection process: plug in the dongle, link an Xbox controller, then pair the guitar.

### 3. OPERATING INSTRUCTIONS

#### 3.1 Basic Controls

- **Fret Buttons:** Five colored buttons on the neck for playing notes. Press the corresponding button and strum simultaneously.
- **Strum Bar:** Located on the body of the guitar, used to play notes by moving it up or down.
- **Whammy Bar:** Use during sustained notes to alter the pitch for special effects.
- **Motion Tilt Sensor:** Tilt the guitar upwards to activate Star Power in compatible games.
- **Navigation Buttons:** Standard Xbox/PC controller buttons (e.g., A, B, X, Y, D-pad, Start, Select) for menu navigation and in-game actions.

# Every Note Feels Real

Precision fret buttons & responsive strum bar design



## Key press

Crisp and bouncy, a perfect touch experience



## Strum Bar

Play the rhythm pattern of the guitar easily



## Whammy

Using Whammy in a guitar solo creates a very cool sound effect.



## Tilt

Tilt the guitar backward and the sound will automatically take on a vibrato

Image: A player's hand on the fret buttons and strum bar, demonstrating the responsive design for an authentic feel.



Image: An illustration detailing the functionality of the key press, strum bar, whammy bar, and tilt sensor for realistic gameplay.

### 3.2 Detachable Neck

The guitar controller features a detachable neck for convenient storage and transport. To detach, locate the unlock switch on the rear of the guitar body, press it, and carefully slide the neck out. To reattach, align the neck with the body and slide it in until it clicks securely into place.

## Detachable Neck • Easy Storage Travel-friendly design for any setup



Image: A close-up view of the detachable neck mechanism, showing the rear unlock switch for easy assembly and disassembly.

### 3.3 Audio Output

The guitar controller includes a 3.5mm audio jack. Connect wired headphones to this jack for private audio playback, allowing you to play without disturbing others. This jack also supports microphone input for compatible headsets.

# SILENT GAMING, MAXIMUM FUN

Private Audio playback- Rock Without Disturbing Others!



Image: An illustration demonstrating the use of the 3.5mm audio jack for private audio playback with headphones.

## 4. CARE AND MAINTENANCE

---

- **Cleaning:** Wipe the controller with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the guitar controller in a cool, dry place away from direct sunlight and extreme temperatures. The detachable neck allows for more compact storage. An anti-oxidation sponge is included for safe storage.
- **Battery Care:** Remove batteries if the controller will not be used for an extended period to prevent leakage.

## 5. TROUBLESHOOTING

---

- **Controller Not Connecting:**
  - Ensure the 2.4G USB dongle is fully inserted into the console/PC.
  - Verify that the guitar controller has fresh batteries installed. Low batteries can cause connection failure.
  - For Xbox, ensure your existing Xbox controller is connected and functioning before attempting to pair the guitar.
  - Confirm you are using the correct dongle for your system (Xbox/PC specific dongles may exist, though this model is advertised for both).
  - Try restarting your console/PC and the guitar controller.
- **Lag or Input Delay:**
  - Ensure there are no obstructions between the guitar controller and the USB dongle.
  - Minimize interference from other wireless devices operating on the 2.4GHz frequency.
  - Check battery levels; low batteries can affect performance.
- **Buttons Not Responding:**
  - Check battery levels.
  - Ensure the neck is securely attached if it was previously detached.
  - Clean any debris around the buttons or strum bar.
- **Game Compatibility:**
  - Remember, this controller is specifically designed for Rock Band 4 (Xbox) and Fortnite Festival (PC). It is not compatible with Guitar Hero, Clone Hero, Rock Band 1, or microphone-based games.

## 6. PRODUCT SPECIFICATIONS

---

<b>Model Number</b>	X615W
<b>Manufacturer</b>	NBCP
<b>Item Weight</b>	2.86 pounds
<b>Package Dimensions</b>	17.44 x 13.58 x 3.46 inches
<b>Connectivity</b>	2.4G Wireless (USB Dongle)
<b>Power Source</b>	4 x AA Batteries (not included)

## 7. WARRANTY AND SUPPORT

---

NBCP is committed to providing responsive after-sales support for all users of the X615W Wireless Guitar Controller.

### 7.1 Return Policy

This product is subject to a 30-day return policy for refund or replacement, as per standard retail terms.

### 7.2 Customer Support

For any questions, troubleshooting assistance, or warranty claims, please contact NBCP customer support through the retailer's platform or visit the official NBCP store page for contact information.

Visit the [NBCP Store](#) for more information.