

[manuals.plus](#) /› [MAVOKIS](#) /› [MAVOKIS M337 Portable Karaoke Machine User Manual](#)

## MAVOKIS M337

# MAVOKIS M337 Portable Karaoke Machine User Manual



## INTRODUCTION

Thank you for choosing the MAVOKIS M337 Portable Karaoke Machine. This device is designed to provide high-quality audio entertainment with its powerful speaker, dynamic LED lights, and dual wireless microphones. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new karaoke machine, ensuring you get the most out of your product.



The MAVOKIS M337 Portable Karaoke Machine features a compact design with a front-facing speaker, dynamic LED lights, and a top panel for controls and smartphone docking. It is designed for portability and ease of use.

## PACKAGE CONTENTS

Please inspect the package contents carefully. If any items are missing or damaged, contact customer support.

- 1 x MAVOKIS M337 Karaoke Machine
- 2 x Wireless Microphones
- 1 x Shoulder Strap
- 1 x USB Charging Cable
- 1 x AUX Cable
- 1 x Remote Control
- Batteries for Microphones (9V, included)



This image displays all items included in the MAVOKIS M337 Portable Karaoke Machine package: the main speaker unit, two wireless microphones, a detachable shoulder strap, USB charging cables, an AUX cable, and a remote control. Batteries for the microphones are also included.

## PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your MAVOKIS M337 Karaoke Machine.

### Control Panel and Ports



This image highlights the control panel of the MAVOKIS M337 Karaoke Machine. It includes rotary knobs for adjusting microphone volume, echo effect, bass, treble, and master volume. Buttons are present for recording, mode selection (Bluetooth, USB, AUX, TF Card), LED light control, and track navigation. Various input ports such as USB, TF Card slot, AUX IN, and two MIC IN ports are also visible.

- **MIC VOL:** Adjusts the volume of the microphones.
- **ECHO:** Controls the echo effect for the microphones.
- **BASS:** Adjusts the low-frequency audio output.
- **TREBLE:** Adjusts the high-frequency audio output.
- **MASTER:** Controls the overall volume of the speaker.
- **REC:** Initiates recording (requires USB or TF card).
- **MODE:** Switches between input modes (Bluetooth, USB, AUX, TF Card).
- **LED/TWS:** Controls LED light modes and activates True Wireless Stereo (TWS) pairing.
- **USB Port:** For USB drive input or charging.
- **TF Card Slot:** For TF (MicroSD) card input.
- **AUX IN:** 3.5mm audio input for external devices.
- **MIC IN 1/2:** 6.35mm inputs for wired microphones (if used).

## SETUP

### Charging the Karaoke Machine

1. Connect the USB charging cable to the machine's charging port.
2. Plug the other end into a standard USB power adapter (not included) or a computer USB port.
3. The charging indicator will illuminate. Allow 5-6 hours for a full charge.
4. A full charge provides approximately 10-20 hours of playing time, depending on usage.

### Microphone Setup

1. Unscrew the bottom cap of each wireless microphone.
2. Insert the provided 9V battery, ensuring correct polarity.
3. Screw the cap back on securely.
4. Turn on the microphone using the power switch located on the microphone body.

## OPERATING INSTRUCTIONS

## Power On/Off

Press and hold the power button on the karaoke machine to turn it on or off. The display will light up.

## Bluetooth Connection

1. Turn on the karaoke machine. It will automatically enter Bluetooth pairing mode, indicated by 'BLUE' flashing on the display.
2. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices and select 'MAVOKIS M337' (or similar name).
4. Once connected, 'BLUE' will stop flashing and remain solid. You can now play audio from your device through the karaoke machine.

Your browser does not support the video tag.

This video demonstrates the process of connecting a device to the MAVOKIS M337 Karaoke Machine via Bluetooth, showcasing the ease of wireless pairing.

## Microphone Operation

1. Ensure microphones have batteries and are powered on.
2. Adjust the 'MIC VOL' knob on the karaoke machine to control the microphone volume.
3. Use the 'ECHO' knob to add or reduce the echo effect for vocals.

## LED Light Control

Press the 'LED/TWS' button to cycle through 12 different dynamic LED light modes. Press and hold to turn the lights off or on.

## USB/TF Card/AUX Input

1. Insert a USB drive or TF card into the corresponding port, or connect an external device via the AUX IN port.
2. Press the 'MODE' button to switch to the desired input mode. The display will show 'USB', 'TF', or 'AUX'.
3. Use the track control buttons (previous/next) to navigate through your media.

## Recording Function

To record your performance, ensure a USB drive or TF card is inserted. Press the 'REC' button to start recording. Press it again to stop. Recordings will be saved to the inserted storage device.

Your browser does not support the video tag.

This video illustrates the MAVOKIS M337 Karaoke Machine in use, demonstrating singing with the wireless microphones and the dynamic LED lights.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the machine and microphones. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the karaoke machine and accessories in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the microphones will not be used for an extended period, remove the batteries to prevent leakage.

## TROUBLESHOOTING

Problem	Solution
No power	Ensure the machine is charged. Check the power button.
No sound from speaker	Check master volume. Ensure correct input mode is selected. Verify source device volume.
Microphones not working	Check microphone batteries and power switch. Adjust MIC VOL knob.
Bluetooth not connecting	Ensure the machine is in Bluetooth mode. Turn off and on Bluetooth on your device. Move closer to the machine.
LED lights not working	Press the LED/TWS button to cycle modes or turn them on.

## SPECIFICATIONS

Feature	Detail
Model Number	M337
Item Weight	9.02 pounds
Package Dimensions	15.79 x 11.65 x 7.17 inches
Speaker Count	1
Battery Type (Main Unit)	Lithium Ion
Microphone Batteries	1 x 9V batteries required (included)
Power Source	Battery Powered
Special Feature	Portable, LED Lights, Wireless Microphones
Connectivity	Bluetooth, USB, AUX, TF Card
Recommended Uses	Home, Parties, Outdoor Events

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official MAVOKIS website. Keep your purchase receipt for warranty claims.

