

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Furmax](#) /
- › [Furmax Electric Standing Desk User Manual - Model MY0250840-A](#)

## Furmax MY0250840-A

# Furmax Electric Standing Desk User Manual

Model: MY0250840-A

## 1. PRODUCT OVERVIEW

---

The Furmax Electric Standing Desk is designed to enhance your workspace with its versatile sit-stand functionality. Featuring an electric height adjustment system and memory presets, this desk allows for seamless transitions between sitting and standing positions, promoting better posture and comfort throughout your workday. Its robust construction ensures stability and durability for various office setups.



Figure 1: The Furmax Electric Standing Desk in a typical office setup, showcasing its spacious desktop and integrated accessories.

## 2. SAFETY INFORMATION

---

- Read all instructions carefully before assembly and use.
- Keep children and pets away from the desk during operation to prevent injury.
- Ensure all screws and bolts are securely tightened before use. Periodically check for loose connections.
- Do not overload the desk. The maximum weight capacity is 154 lbs (70 kg).
- Keep the area around the desk clear of obstructions during height adjustments.
- Do not sit or stand on the desk.
- Disconnect power before cleaning or maintenance.

## 3. PACKAGE CONTENTS

---

Verify that all components listed below are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Desktop (Splice Board)
- Leg Frames (Left and Right)
- Leg Bases
- Control Panel with USB Port
- Power Adapter
- Transmission Rod
- Side Plates
- Crossbar
- Mobile Phone Stand
- Headphone Hooks (2)
- Cable Hole Cover
- Assembly Hardware (Screws, Allen Keys, Cable Clips, Wood Tips)



Figure 2: Key components and features of the Furmax Electric Standing Desk, including dimensions and accessories.

## 4. SETUP AND ASSEMBLY

---

Follow these steps to assemble your Furmax Electric Standing Desk. It is recommended to have two people for certain steps to ensure stability and ease of assembly.

### Assembly Video Guide

Your browser does not support the video tag.

Video 1: Official Furmax Electric Standing Desk assembly guide. This video provides a visual walkthrough of the entire assembly process, from unboxing to final setup.

### Step-by-Step Instructions

- 1. Assemble the Frame:** Attach the side plates to the leg frames using the provided screws and Allen key. Ensure all screws are finger-tightened to 80% initially, then fully tighten once all components are in place.
- 2. Attach Leg Bases:** Secure the leg bases to the bottom of the leg frames. Pay attention to the correct order of screw installation as indicated in the manual to ensure stability.
- 3. Install Crossbar:** Connect the crossbar between the two leg frames. This provides structural integrity to the desk.
- 4. Insert Transmission Rod:** Loosen the knob on the transmission rod. Insert the rod into the hex hole and turn it clockwise until the left leg reaches its lowest position. Secure the rod by tightening the pre-assembled set screw using the small Allen key, then tighten the knob.
- 5. Join Desktop Sections:** If your desktop comes in multiple pieces, use the wood tips (dowels) to align and join them.
- 6. Attach Desktop to Frame:** Carefully place the assembled desktop onto the frame. Ensure the motor and cable holes on the desktop align with the corresponding side of the frame. Secure the desktop to the frame using the remaining screws.
- 7. Install Accessories:** Attach the headphone hooks and the control panel to the underside of the desktop using the provided screws.
- 8. Connect Wiring:** Connect the control panel to the motor and the power adapter. Use the provided cable clips to manage and secure all cables neatly, preventing clutter.
- 9. Final Touches:** Insert the cable hole cover into the designated opening on the desktop to manage cables from your devices. Place the mobile phone stand as desired.

## 5. OPERATING INSTRUCTIONS

---

The Furmax Electric Standing Desk features an intuitive control panel for easy height adjustment and memory functions.

### Control Panel Functions

# Multi-Function Control Panel

Control whatever you want

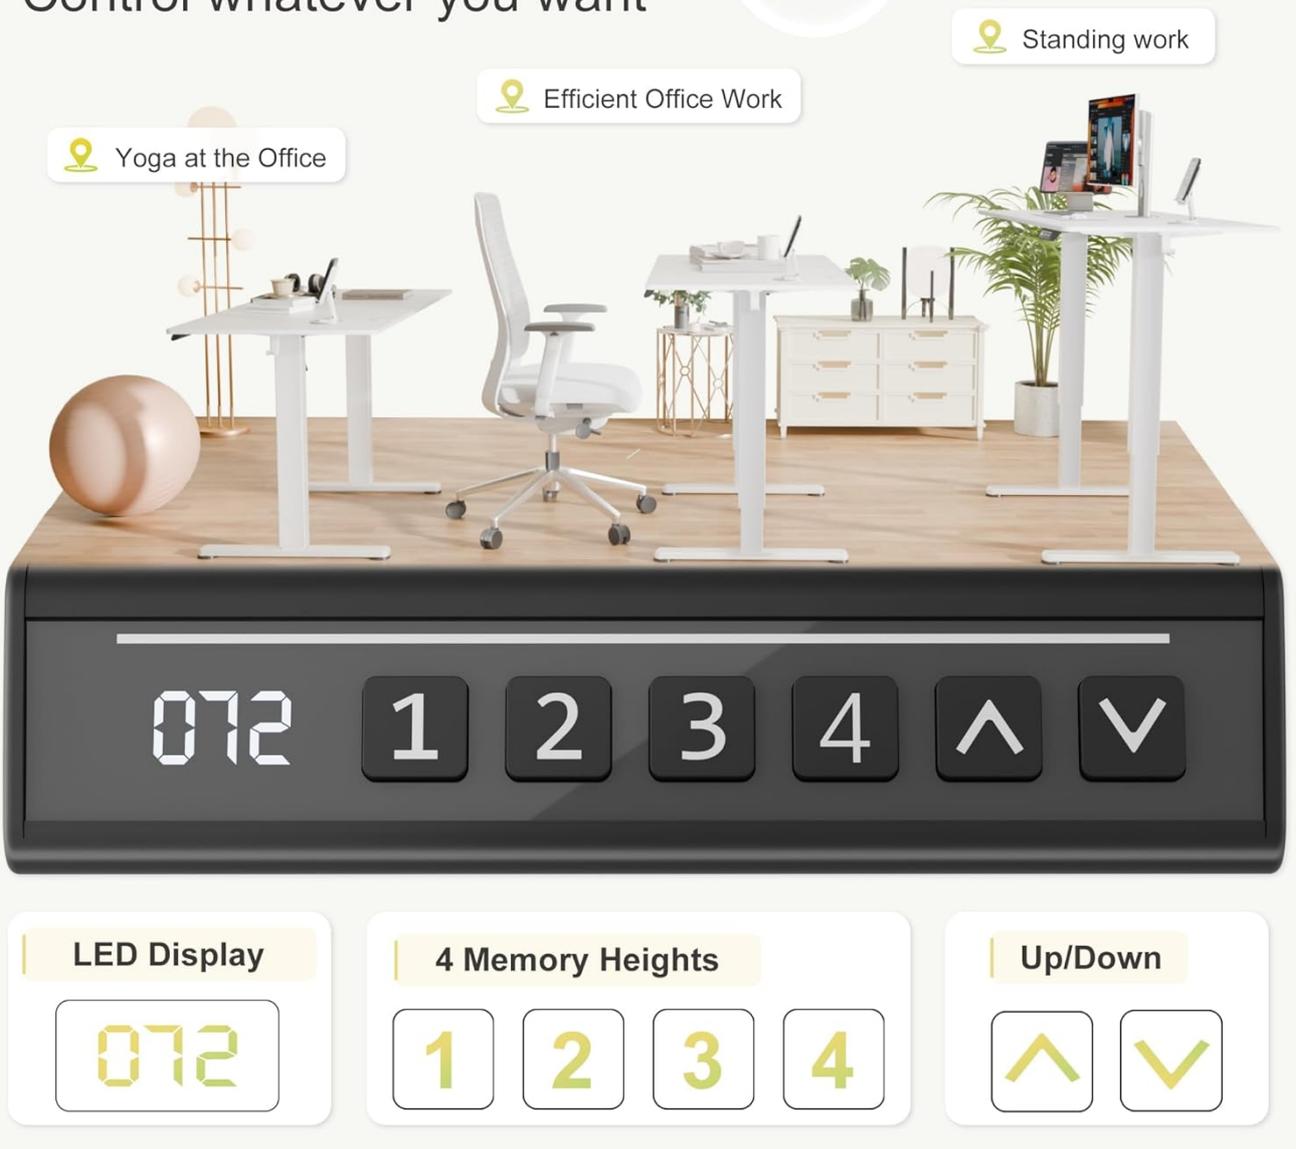


Figure 3: The multi-function control panel with LED display, memory presets (1-4), and up/down adjustment buttons.

- **Up/Down Arrows (▲ / ▼):** Press and hold these buttons to manually adjust the desk height. Release the button to stop at your desired height.
- **LED Display:** Shows the current height of the desk in inches.
- **Memory Presets (1, 2, 3, 4):** The desk has four programmable memory positions.

## Setting Memory Positions

1. Adjust the desk to your desired height using the Up/Down arrows.
2. Press the "M" button (or similar memory set button, if present, otherwise assume direct press on 1-4). The display may flash.
3. Immediately press one of the number buttons (1, 2, 3, or 4) to save the current height to that preset. The display will confirm the setting.

## Using Memory Positions

- Simply press the desired number button (1, 2, 3, or 4) to automatically move the desk to the saved height.

## USB Charging Port

- The integrated USB port allows you to conveniently charge your electronic devices such as smartphones or headphones directly from the desk.

## 6. MAINTENANCE

---

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Regular Checks:** Periodically inspect all screws and connections to ensure they remain tight. Tighten any loose hardware as needed.
- **Cable Management:** Ensure cables are properly routed and secured to prevent entanglement or damage during height adjustments.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your Furmax Electric Standing Desk, refer to the following common problems and solutions:

- **Desk not moving:**
  - Check if the power adapter is securely plugged into both the desk and a working wall outlet.
  - Ensure all cables between the control panel, motor, and power adapter are correctly connected.
- **Uneven height adjustment:**
  - Verify that the transmission rod is correctly installed and tightened.
  - Check if the desk is overloaded or if weight is unevenly distributed.
- **Unusual noises during operation:**
  - Ensure all screws are tightened. Loose connections can cause noise.
  - Check for any obstructions under or around the desk legs.
- **Memory presets not working:**
  - Re-program the memory positions following the "Setting Memory Positions" instructions.

If the problem persists, please contact Furmax customer support for further assistance.

## 8. SPECIFICATIONS

---

Feature	Detail
Brand	Furmax
Model Number	MY0250840-A
Desktop Material	Engineered Wood
Frame Material	Commercial-grade Steel
Product Dimensions (D x W x H)	22.8"D x 47.2"W x 60.5"H (Note: 45x24 inches mentioned in title refers to desktop surface, 60.5H is max height)
Height Adjustment Range	30.71" (sitting) to 46.46" (standing)
Weight Capacity	Up to 154 lbs (70 kg)
Noise Level	<55dB during operation

<b>Memory Presets</b>	4 programmable height positions
<b>Included Accessories</b>	Mobile Phone Stand, Headphone Hooks, Cable Management Tray, Casters
<b>Assembly Required</b>	Yes

## 9. WARRANTY AND SUPPORT

---

Furmax products are designed for quality and durability. For specific warranty details regarding your Electric Standing Desk, please refer to the warranty card included in your package or visit the official Furmax website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Furmax customer service through their official channels. Contact information can typically be found on the product packaging or the brand's website.