

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Qaba](#) /

> [Qaba 3-in-1 Kids Art Easel with Paper Roll \(Model 3B0-011V80GY\) Instruction Manual](#)

## Qaba 3B0-011V80GY

# Qaba 3-in-1 Kids Art Easel with Paper Roll Instruction Manual

Model: 3B0-011V80GY

## INTRODUCTION

---

Thank you for choosing the Qaba 3-in-1 Kids Art Easel. This versatile easel is designed to inspire creativity in children aged 3-8, offering a blackboard, whiteboard, and a paper roll for various artistic activities. It also includes convenient storage baskets to keep art supplies organized. Please read this manual carefully before assembly and use to ensure safe and proper operation.

## SAFETY INFORMATION

---

Please observe the following safety guidelines to prevent injury and damage:

- Adult assembly is required.
- Always supervise children during use of the easel.
- Ensure all screws and fasteners are securely tightened before use. Periodically check for loose parts.
- Keep small parts away from children under 3 years old to avoid choking hazards.
- Use only appropriate writing tools: chalk for the blackboard, water-based markers for the whiteboard.
- Do not climb on or hang from the easel.
- Place the easel on a flat, stable surface to prevent tipping.

## PACKAGE CONTENTS

---

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.



Image showing a Qaba branded package, indicating the product comes in one box.

## SETUP AND ASSEMBLY

---

Assembly is required for this easel. Follow the instructions provided in the separate assembly guide for detailed steps. Ensure all parts are correctly oriented and securely fastened.

### Key Assembly Features:

- The easel features a stable A-frame structure.
- The paper roll holder is integrated at the top for easy access.
- Two storage baskets are designed to fit into the lower frame for art supplies.



A child drawing on the whiteboard side of the assembled Qaba art easel, demonstrating its use.

## OPERATING INSTRUCTIONS

---

### 1. Using the Whiteboard:

The white side of the easel is designed for use with water-based dry-erase markers. Draw and write freely, then wipe clean with a soft cloth or whiteboard eraser.

## 2. Using the Blackboard:

The black side of the easel is for use with chalk. Create drawings and writings, then erase with a damp cloth or blackboard eraser.

## 3. Using the Paper Roll:

Unroll paper from the integrated holder over either the whiteboard or blackboard surface for painting or drawing with crayons, pencils, or other art mediums. Tear off used sections as needed.




Visual representation of the easel's three functions: whiteboard, blackboard, and paper roll, with examples of use.

## 4. Storage Baskets:

Utilize the two included storage baskets located at the base of the easel to keep art supplies such as markers, chalk, erasers, and small toys organized and easily accessible.


## STORAGE BASKET

Keep art supplies organized and within reach

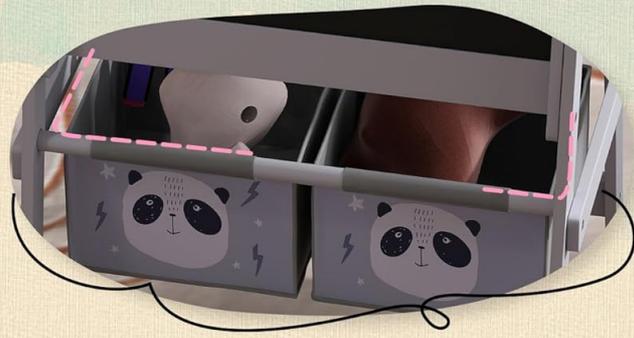

## SMOOTH EDGES

Ensure children's safety

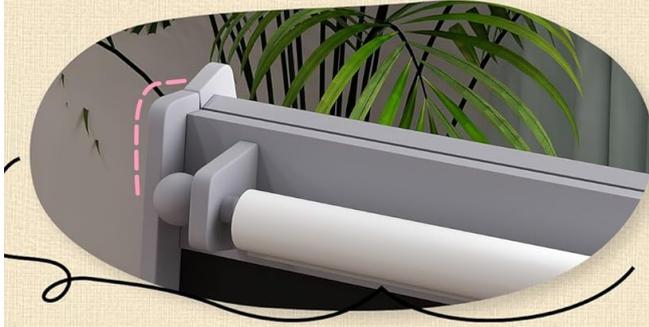

## ANIMAL DESIGN

Add a vibrant touch to your home decoration



Detailed view highlighting the storage baskets with panda design and the smooth, child-safe edges of the easel.

## MAINTENANCE AND CARE

- **Cleaning the Whiteboard:** Use a soft, damp cloth or a specialized whiteboard cleaner for stubborn marks. Avoid abrasive cleaners.
- **Cleaning the Blackboard:** Wipe with a damp cloth. For a deeper clean, use a blackboard cleaner.
- **General Cleaning:** Wipe the wooden frame and plastic parts with a soft, damp cloth and mild soap if necessary. Dry thoroughly.
- **Storage:** Store the easel in a dry environment away from direct sunlight or extreme temperatures to prevent material degradation.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight and secure.

## TROUBLESHOOTING


- **Easel is wobbly:** Ensure all assembly screws are tightened. Check that the easel is placed on a flat, even surface.
- **Whiteboard marks are difficult to erase:** Ensure only water-based dry-erase markers are used. Try a whiteboard cleaner or a damp cloth with a small amount of rubbing alcohol for stubborn ghosting.
- **Blackboard marks are difficult to erase:** Ensure only standard chalk is used. Wipe with a damp cloth.

- **Paper roll does not dispense smoothly:** Check for any obstructions in the paper roll holder. Ensure the paper roll is correctly seated.

## SPECIFICATIONS

---

Feature	Detail
Model Name	Kids Easel
Model Number	3B0-011V80GY
Overall Dimensions	21.3" L x 18" W x 37" H (54.1 cm L x 45.7 cm W x 94 cm H)
Board Size	18.5" L x 15" W (47 cm L x 38.1 cm W)
Single Basket Dimensions	10.6" L x 9.4" W x 5.7" H (26.9 cm L x 23.9 cm W x 14.5 cm H)
Material	Engineered Wood, Pine
Color	Gray, Panda
Item Weight	13 Pounds (5.9 kg)
Recommended Age	3-8 Years Old

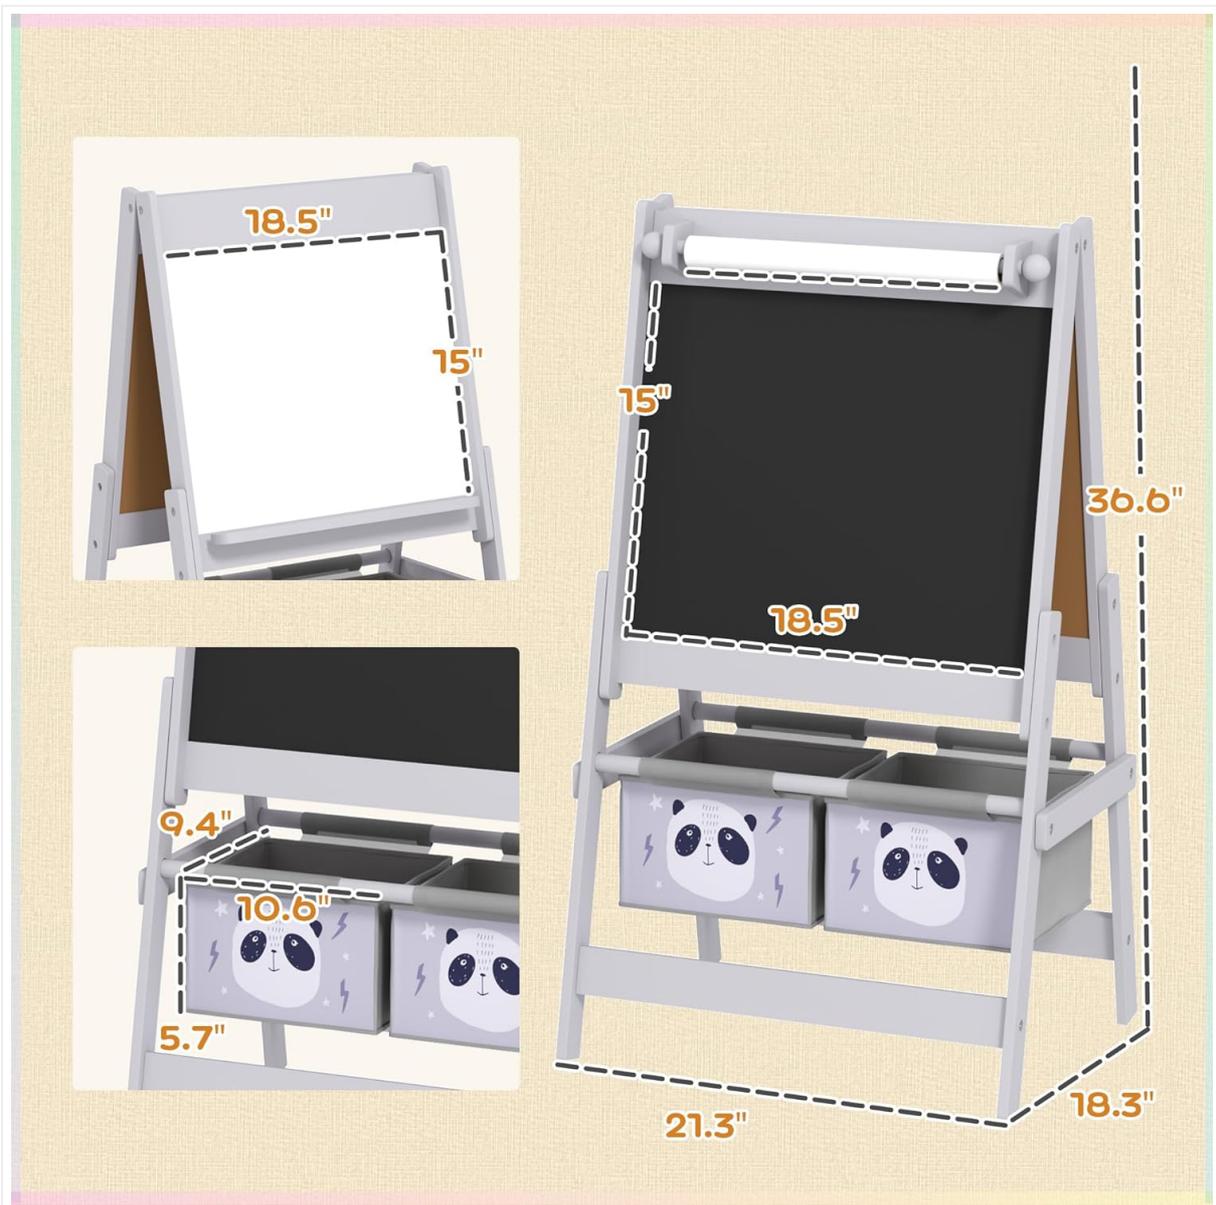

Detailed diagram illustrating the overall dimensions and specific board and basket measurements of the easel.

## WARRANTY AND SUPPORT

This product is manufactured by Aosom LLC under the Qaba brand. For warranty information, missing parts, or customer support, please refer to the contact information provided at the point of purchase or visit the official Qaba brand store online. Keep your purchase receipt for warranty claims.

You can visit the Qaba store at: [Qaba Store on Amazon](#)