

MICBNIB M8 Pro

MICBNIB M8 Pro Karaoke Machine Instruction Manual

Model: M8 Pro

INTRODUCTION

Thank you for purchasing the MICBNIB M8 Pro Karaoke Machine. This all-in-one portable system is designed to provide an immersive audio-visual experience with its 14.1-inch touchscreen, powerful sound, and wireless microphones. This manual will guide you through the setup, operation, and maintenance of your device to ensure optimal performance and enjoyment.

PRODUCT OVERVIEW

Key Features

- **14.1" HD Touchscreen:** Integrated display running Android 12 for app access and control.
- **Studio-Grade Sound:** 10" woofer, 3" midrange, and 3" tweeter in a solid wood cabinet for balanced audio.
- **Connectivity:** Wi-Fi, Bluetooth, HDMI, USB for versatile media playback and external device connection.
- **Internal Storage:** 32GB built-in storage for offline song libraries.
- **Portability:** Heavy-duty retractable handle and 360° wheels for easy transport.
- **Wireless Microphones:** Includes two UHF professional wireless microphones.

Components

The MICBNIB M8 Pro Karaoke Machine package typically includes:

- MICBNIB M8 Pro Karaoke Machine unit
- 2 Wireless Microphones
- Power Adapter
- USB-C Charging Cable (for microphones)
- User Manual (this document)

Professional Wireless Karaoke Machine

Access YouTube song videos via WiFi connection
No need for download, no memory occupation



Image: MICBNIB M8 Pro Karaoke Machine with included accessories.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
2. **Power Connection:** Connect the provided power adapter to the DC 15V input port on the back panel of the karaoke machine. Plug the adapter into a standard electrical outlet.
3. **Initial Charge:** For first-time use, it is recommended to fully charge the unit. The charging indicator will show status.
4. **Microphone Setup:**
 - Insert rechargeable batteries into the wireless microphones.
 - Charge microphones using the provided USB-C cable if needed.
 - Turn on the microphones using their respective power buttons. They should automatically pair with the karaoke machine.
5. **Power On:** Locate the POWER switch on the control panel and switch it to the "ON" position. The touchscreen

display will illuminate.

Essential Home Karaoke System

Professional karaoke equipment, suitable for various party scenarios, with powerful sound effects and high-definition vocals.



Image: Rear view of the karaoke machine, highlighting power input and various connectivity ports.

OPERATING INSTRUCTIONS

Navigating the Touchscreen

The MICBNIB M8 Pro features a 14.1-inch HD touchscreen running Android 12. Navigate the interface similar to a tablet or smartphone. Tap icons to open applications, swipe to scroll, and use the on-screen keyboard for input.

Go Anywhere Sing Everywhere

Equipped with a large-capacity battery and a handle design, it is convenient for outdoor carrying.



Image: The 14.1-inch touchscreen interface showing available applications.

Connecting to Wi-Fi

1. From the home screen, tap the "Settings" icon.
2. Select "Network & Internet".
3. Toggle Wi-Fi "On" and select your desired network from the list.
4. Enter the password if prompted and tap "Connect".

Once connected, you can access online streaming services like YouTube, Spotify, and download apps from the Google Play Store.

Using Applications

The system comes pre-installed with popular applications. Tap on the app icon (e.g., YouTube, Spotify) to launch it. Follow the on-screen instructions to search for songs, create playlists, and enjoy your karaoke experience.

Your browser does not support the video tag.

CONNECTIVITY

Bluetooth Connection

1. Ensure Bluetooth is enabled on your external device (smartphone, tablet).
2. On the karaoke machine, navigate to "Settings" and then "Bluetooth".
3. Select "MICBNIB M8 Pro" from the list of available devices on your external device.
4. Once paired, audio from your external device will play through the karaoke machine.

Your browser does not support the video tag.

Video: Guide on connecting a mobile phone via Bluetooth to the karaoke machine.

HDMI Output to TV

Connect an HDMI cable (not included) from the HDMI port on the karaoke machine to an HDMI input on your television. This allows you to display the karaoke machine's screen content, including lyrics, on a larger display.

Karaoke connected to TV

Connect the TV via HDMI cable to watch movies, videos and sing songs



Image: Karaoke machine connected to a TV via HDMI, showing the display mirrored.

USB and TF Card Playback

Insert a USB drive or TF card into the respective ports on the control panel. The system will detect the media and allow you to play audio or video files stored on it. Supported formats may vary.

MICROPHONE USAGE

Wireless Microphones

- Ensure microphones are charged and powered on.
- Adjust microphone volume using the "MIC VOL" knob on the control panel.
- The microphones feature a display for battery level, signal strength, and frequency.
- Long press the power button on the microphone to turn it on/off.

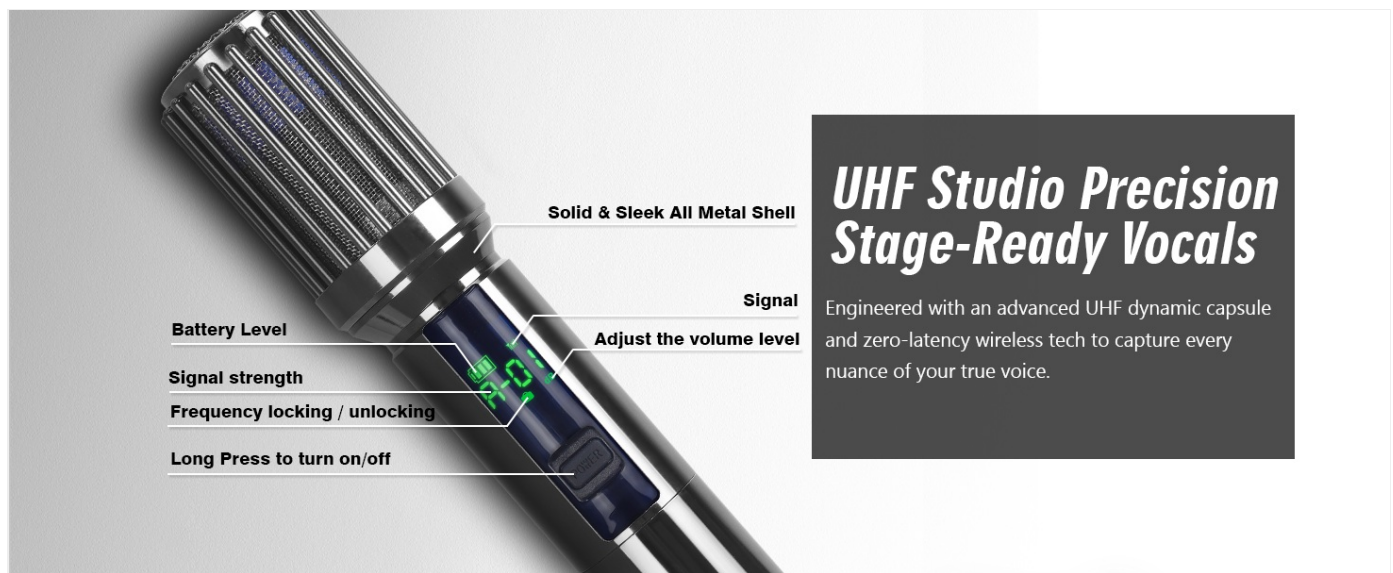


Image: Detailed view of the wireless microphone display and controls.

External Microphone/Instrument Input

The unit includes a 6.35mm "MIC IN" port for an additional wired microphone and a "GUITAR IN" port for connecting an instrument like a guitar or keyboard.

SOUND ADJUSTMENT

The control panel provides several knobs for fine-tuning the audio output:

- **MIC VOL:** Adjusts the volume of the microphones.
- **M.BASS / M.TREBLE:** Adjusts bass and treble for the microphones.
- **ECHO:** Controls the echo effect for vocals.
- **BASS / TREBLE:** Adjusts bass and treble for the main music output.
- **VOLUME:** Master volume control for the entire system.

Professional and Easy to Use

Professional audio equalizer, with the ability to adjust the bass and treble according to personal preference



Image: Close-up of the control panel, showing knobs for microphone volume, bass, treble, echo, and master volume.

PORTABILITY

The MICBNIB M8 Pro is designed for easy transport. It features a retractable handle and two smooth-rolling 360° wheels. Extend the handle and tilt the unit to roll it to your desired location. The built-in high-capacity battery provides 6-12 hours of playtime, depending on usage.





Image: The karaoke machine being transported using its retractable handle and wheels.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit and the touchscreen. Do not use abrasive cleaners or solvents.

- **Storage:** Store the karaoke machine in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the unit frequently. Charge the unit regularly, even if not in use for extended periods.
- **Microphone Care:** Keep microphones dry and clean. Store them in a protective case when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power switch off, battery drained, power adapter not connected.	Ensure power switch is ON. Connect power adapter and charge. Check power outlet.
No sound from speaker	Volume too low, incorrect input source, muted.	Increase master VOLUME. Check selected input source on screen. Ensure system is not muted.
Microphones not working	Microphones off, batteries low, MIC VOL too low, not paired.	Turn on microphones. Charge microphone batteries. Increase MIC VOL. Re-pair microphones if necessary (refer to microphone instructions).
Wi-Fi connection issues	Incorrect password, out of range, router issues.	Verify Wi-Fi password. Move closer to router. Restart router.
Bluetooth pairing failure	Bluetooth off on device/karaoke machine, device too far.	Ensure Bluetooth is enabled on both devices. Keep devices within range (approx. 10 meters).

SPECIFICATIONS

Feature	Detail
Brand	MICBNIB
Model Number	M8 Pro
Display	14.1-inch HD Touchscreen
Operating System	Android 12
Storage	32GB Internal
Speaker Configuration	10" Woofer, 3" Midrange, 3" Tweeter
Connectivity	Bluetooth, HDMI, USB, Wi-Fi
Microphones	2 UHF Wireless Microphones
Item Weight	15 Kilograms
Manufacturer	BNIB

WARRANTY & SUPPORT

The MICBNIB M8 Pro Karaoke Machine comes with a **1 Year Warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

For technical support, warranty claims, or further assistance, please contact MICBNIB customer service through the retailer where the product was purchased or visit the official MICBNIB website for contact information.

© 2026 MICBNIB. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question