

[Manuals.plus](#) /

› [FunFanso](#) /

› FunFanso 6 FT Christmas Inflatable Candle User Manual - Model CH25171-180

FunFanso CH25171-180

FunFanso 6 FT Christmas Inflatable Candle User Manual

Model: CH25171-180

1. INTRODUCTION

Thank you for choosing the FunFanso 6 FT Christmas Inflatable Candle. This product is designed to enhance your holiday decorations with its festive design and built-in LED lights. This manual provides essential information for safe setup, operation, and maintenance to ensure optimal performance and longevity of your inflatable decoration.



Image: The FunFanso 6 FT Christmas Inflatable Candle, featuring a 'Merry Christmas' message and a glowing flame, stands illuminated in a snowy yard at night, complementing the festive house decorations.

2. SAFETY INFORMATION

Please read and understand all safety instructions before operating this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** This product is FCC and CPC certified, with an ETL-approved motor. Always ensure the power adapter is connected to a suitable outdoor-rated electrical outlet when used outdoors. Do not overload electrical circuits.
- **Water Resistance:** The inflatable is crafted from IP44 waterproof 190T high-density polyester material. While designed for outdoor use, avoid submerging the product in water or operating it during heavy rainfall to prevent damage to electrical components.
- **Wind Stability:** The inflatable candle is equipped with grounding stakes and ropes for stability. Always use these accessories to secure the inflatable, especially in windy conditions, to prevent it from being blown away.
- **Placement:** Position the inflatable on a flat, clear surface, away from sharp objects, heat sources, and open flames. Ensure adequate clearance from walls, fences, and other structures to allow for full inflation.

- **Children and Pets:** Keep children and pets away from the inflatable during inflation and deflation to prevent entanglement or injury.



Image: Visual representation of the inflatable's durability, highlighting its IP44 waterproof rating, wind-proof design, and resistance to snow and sun exposure.

3. PACKAGE CONTENTS

Verify that all items are present in the package before proceeding with setup:

- 1 x FunFanso 6 FT Christmas Inflatable Candle
- 1 x Power Adapter (10 FT Cable)
- 2 x Grounding Ropes
- 4 x Grounding Stakes



Image: A visual guide to the package contents, showing the inflatable candle, power adapter, two grounding ropes, and four grounding stakes.

4. SETUP INSTRUCTIONS

Follow these steps to set up your FunFanso Christmas Inflatable Candle:

1. **Unpack:** Carefully remove the inflatable and all accessories from the packaging.
2. **Position:** Place the inflatable on a clean, level surface in your desired outdoor or indoor location. Ensure the blower fan is clear of obstructions.
3. **Close Zipper:** Locate the zipper at the bottom of the inflatable and ensure it is fully closed. This is crucial for proper inflation.
4. **Connect Power:** Plug the power adapter into the inflatable's power input, then plug the adapter into a standard electrical outlet.
5. **Inflate:** The built-in powerful blower will begin to inflate the candle automatically. It typically inflates fully within 1 minute.
6. **Secure:** Once fully inflated, use the provided grounding ropes and stakes to secure the inflatable to the ground. Hook the ropes to the designated loops on the inflatable and secure the stakes firmly into the soil.




Installation Steps



1 Zip up the bottom zipper



2 Plug in power adapter

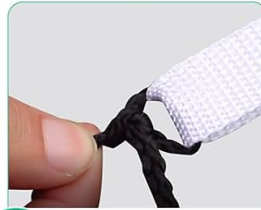

3 Hook the inflatable with ropes



4 Secure the stakes to the ground

Image: Step-by-step visual guide for installation, detailing how to close the bottom zipper, connect the power adapter, attach the ropes, and secure the stakes into the ground.



Image: A detailed view of the integrated blower fan, located at the base of the inflatable candle, responsible for rapid inflation.

5. OPERATING INSTRUCTIONS

Operating your FunFanso inflatable candle is straightforward:

- **Power On:** Once the power adapter is plugged into an active electrical outlet, the inflatable will automatically inflate, and the built-in LED lights will illuminate.
- **Power Off/Deflate:** To turn off the inflatable and deflate it, simply unplug the power adapter from the electrical outlet. The inflatable will deflate quickly via the back zipper.
- **LED Lights:** The integrated LED lights provide a bright and festive glow, enhancing visibility and ambiance during nighttime.

Your browser does not support the video tag.

Video: This video demonstrates the FunFanso 6 FT Christmas Inflatable Candle illuminated at night in an outdoor setting, showcasing its festive glow and overall appearance.

6. MAINTENANCE

Proper maintenance ensures the longevity and appearance of your inflatable decoration.

- **Cleaning:** If the inflatable becomes dirty, gently wipe it with a damp cloth. Do not use harsh chemicals or abrasive cleaners, as these can damage the material or printed design.
- **Drying:** Ensure the inflatable is completely dry before storing to prevent mold or mildew growth.
- **Storage:** Deflate the inflatable completely, fold it neatly, and store it in its original packaging or a suitable storage bag in a cool, dry place, away from direct sunlight and pests. This will help preserve the material for use in subsequent years.
- **Inspection:** Periodically inspect the inflatable for any tears, punctures, or damage to the fabric, stitching, or electrical components. Address any issues promptly to prevent further damage.

7. TROUBLESHOOTING

If you encounter issues with your inflatable candle, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Inflatable does not inflate fully or at all.	Power not connected; zipper open; blower obstructed; small tear.	Check power connection; ensure zipper is fully closed; clear any obstructions from the blower fan; inspect for and repair small tears with a patch kit (not included).
Inflatable falls over or is unstable.	Insufficient anchoring; strong winds.	Ensure all grounding stakes and ropes are properly installed and taut. Consider adding additional weights (e.g., sandbags) to the base in very windy conditions.
LED lights are not working.	Power issue; damaged wiring.	Verify power connection. If the issue persists, contact customer support. Do not attempt to repair electrical components yourself.
Blower makes unusual noise or stops working.	Obstruction in blower; motor malfunction.	Unplug and check for debris in the blower intake/exhaust. If the problem continues, discontinue use and contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	FunFanso
Model Number	CH25171-180
Dimensions (L x W x H)	36 x 36 x 72 inches (6 FT Tall)
Material	190T High-Density Polyester
Water Resistance	IP44 Waterproof
Special Features	Built-in LED Lights, Durable, Easy Setup, Easy Deflate, Long Lasting
Certifications	FCC, CPC, ETL-approved motor
Item Weight	12.8 ounces

9. WARRANTY AND SUPPORT

FunFanso products are designed for quality and reliability. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims. For technical assistance, troubleshooting beyond this guide, or inquiries regarding your product, please contact FunFanso customer support through the retailer where the product was purchased or visit the official FunFanso website for contact information.

We are committed to providing satisfactory products and support.