

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [YESHOMY](#) /

› [YESHOMY Farmhouse TV Stand \(Model YH-0845KL\) Instruction Manual](#)

## YESHOMY YH-0845KL

# YESHOMY Farmhouse TV Stand Instruction Manual

Model: YH-0845KL

## 1. IMPORTANT SAFETY INFORMATION

---

Please read and understand all instructions before beginning assembly and use. Failure to follow these instructions may result in injury or product damage. Keep this manual for future reference.

- **Assembly:** We recommend two people for the safest and most efficient installation experience.
- **Weight Limit:** Do not exceed the maximum load capacity of **180 pounds (81.6 kg)** on the top surface. Overloading can cause instability and potential collapse.
- **Stability:** Always ensure the TV stand is placed on a flat, level surface. Securely mount the cabinet to the floor or wall if anti-tip hardware is provided, to prevent tipping or accidents, especially in households with children.
- **Material:** This product is constructed from engineered wood. Avoid exposure to excessive moisture or direct sunlight to prevent warping or damage.
- **Children:** Do not allow children to climb on or play with the TV stand.

# SUITABLE FOR TV SIZE UP TO 70"



Figure 1.1: The top surface of the TV stand can support up to 180 pounds.

## 2. PRODUCT OVERVIEW

The YESHOMY Farmhouse TV Stand is designed to accommodate televisions up to 65 inches, offering a blend of rustic style and practical storage. It features sliding barn doors, four storage drawers, and adjustable shelving.

### Key Features:

- **Sliding Barn Doors:** Two doors slide smoothly on metal rails, allowing you to conceal side cabinets or reveal the central display area.
- **Ample Storage:** Includes four slide-out drawers for smaller items and cabinet space with adjustable shelves for media devices or other belongings.
- **Cable Management:** Integrated back-panel cutouts are provided to route wires efficiently, helping to keep your entertainment setup organized and free of tangles.
- **Sturdy Construction:** Crafted from high-grade wood, ensuring durability and stability.

### Dimensions:

- **Overall:** 58 inches (L) x 15.5 inches (W) x 27.6 inches (H)
- **Drawer (internal):** Approximately 14 inches (L) x 13 inches (W) x 6.6 inches (H)



Figure 2.1: Product dimensions and individual drawer dimensions.

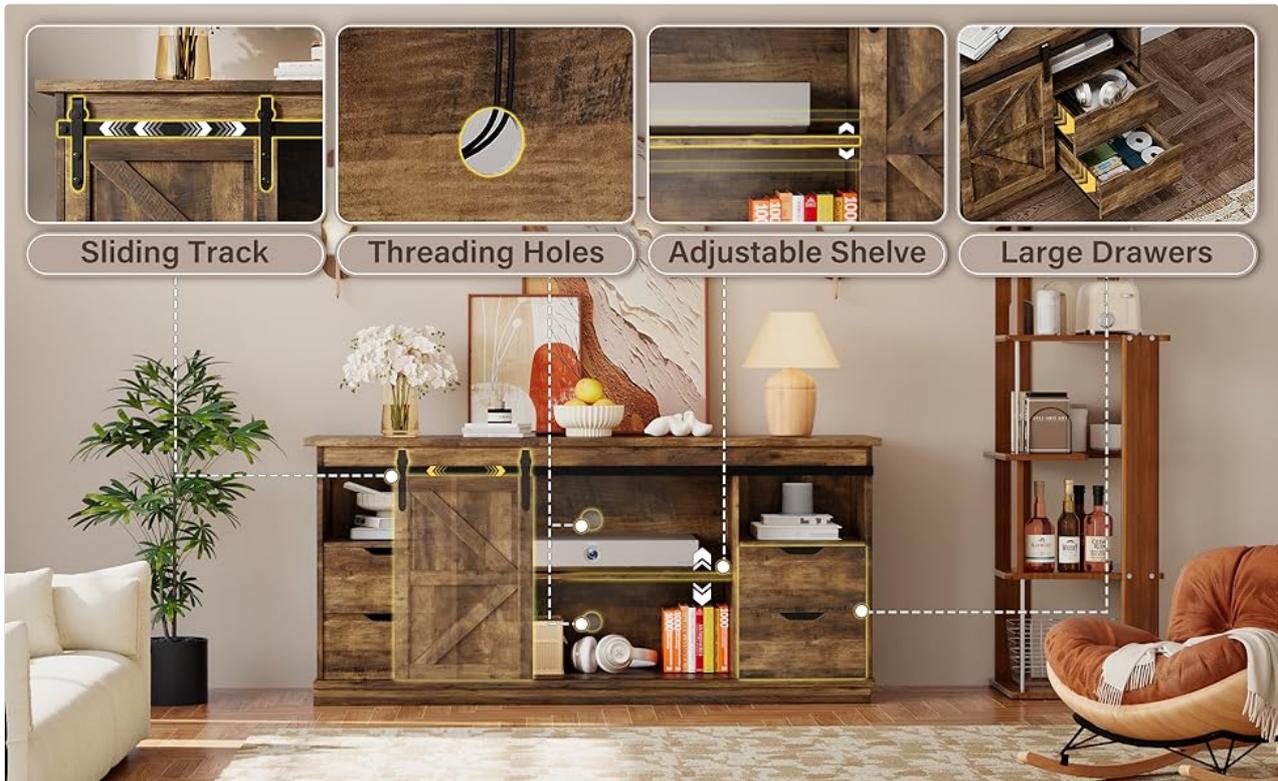


Figure 2.2: View of the ample storage space provided by the drawers.

# MULTI-SCENARIO APPLICATION

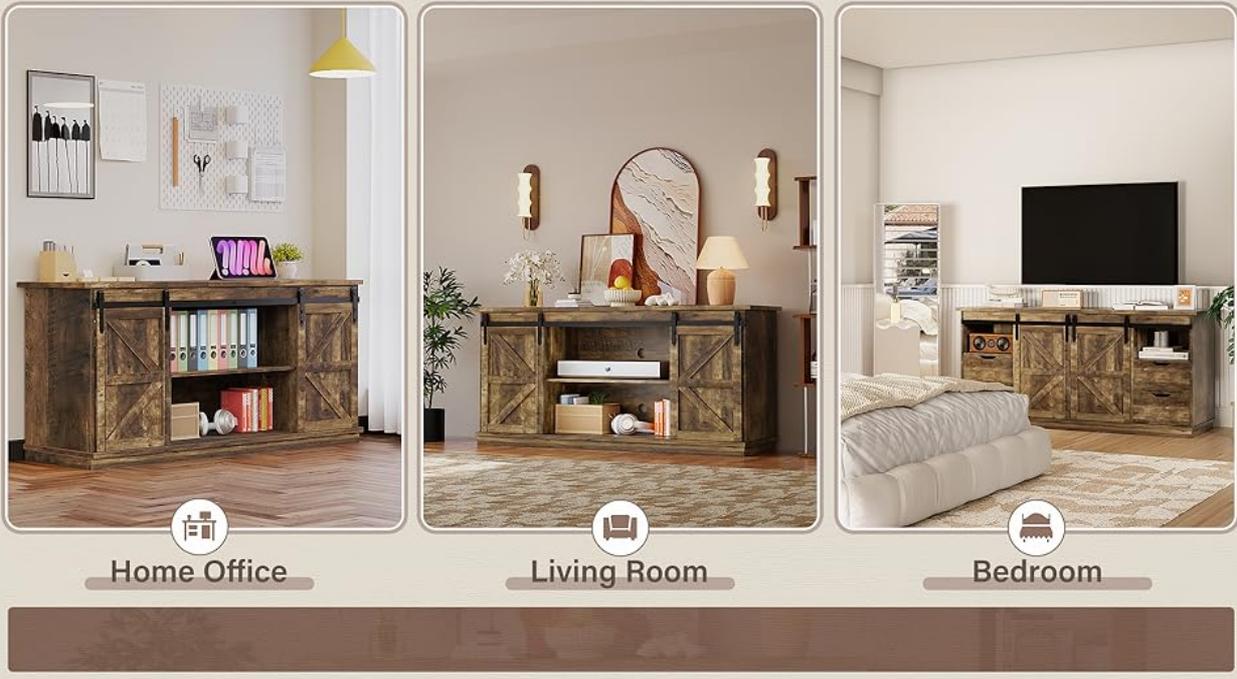


Figure 2.3: Detail of the sliding barn door design and adjustable shelf levels.

## 3. PACKAGE CONTENTS

Before assembly, ensure all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- TV Stand components (various wood panels, hardware)
- Assembly Tool Kit (includes necessary tools for assembly)
- Installation and Usage Manual (this document)

## 4. ASSEMBLY INSTRUCTIONS

This TV stand is designed for straightforward assembly. Follow the step-by-step instructions provided in the included manual. We recommend having two people for the assembly process to ensure safety and ease.

1. **Unpack:** Carefully unpack all components and hardware. Lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Refer to the parts list in the separate assembly manual to identify each component.
3. **Assemble Frame:** Begin by assembling the main frame of the TV stand according to the diagrams.
4. **Install Shelves:** Insert and secure the adjustable shelves into the desired positions.
5. **Assemble Drawers:** Construct the four storage drawers and install their slides.
6. **Attach Doors:** Mount the sliding barn doors onto their rails. Ensure they slide smoothly.
7. **Final Checks:** Tighten all screws and ensure the stand is stable.

*Note: The detailed assembly instructions with diagrams are provided in a separate manual included with your product.*

## 5. OPERATION

---

### Sliding Barn Doors:

The barn doors are designed to slide horizontally along the top rail. Gently push or pull the doors to open or close the cabinet sections. This allows you to either display items in the central compartment or conceal items in the side compartments.

### Storage Drawers:

The four drawers provide enclosed storage. Pull the handles to open and push to close. Ensure items are placed evenly to prevent jamming.

### Adjustable Shelves:

The shelves within the cabinets are adjustable to three different levels. To adjust, remove any items, lift the shelf, and reposition the shelf pins into the desired holes. Ensure the shelf is securely seated on all four pins before placing items on it.

### Cable Management:

Utilize the pre-drilled cutouts on the back panel to route power cords and audio/video cables. This helps maintain a tidy appearance and prevents cable tangles.

## 6. CARE AND MAINTENANCE

---

- **Cleaning:** Wipe surfaces with a soft, dry cloth. For stubborn marks, use a slightly damp cloth with mild soap and dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust the surfaces to prevent buildup.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood finish.
- **Avoid Heat/Moisture:** Do not place hot items directly on the surface. Protect from direct sunlight and excessive humidity.
- **Hardware:** Periodically check and tighten all hardware to ensure the stand remains stable.

## 7. TROUBLESHOOTING

---

### **Problem: Sliding doors are difficult to move.**

**Solution:** Check the metal rails for any obstructions or debris. Ensure the doors are properly seated on the track. A small amount of silicone lubricant can be applied to the rails if needed.

### **Problem: Drawers do not close smoothly or are bent.**

**Solution:** Inspect the drawer slides for any bends or misalignment. Ensure all screws are tight. If a slide is bent, it may need to be carefully straightened or replaced. Ensure the drawer is not overloaded.

**Problem: Stand feels wobbly or unstable.**

**Solution:** Verify that all assembly hardware is securely tightened. Ensure the stand is on a flat, level surface. If necessary, use shims under the legs to level it. Consider using anti-tip hardware to secure it to a wall.

**Problem: Missing parts or damaged components.**

**Solution:** Do not proceed with assembly. Contact YESHOMY customer support immediately for assistance and replacement parts.

## 8. SPECIFICATIONS

Feature	Detail
Brand	YESHOMY
Model Name	Farmhouse TV Stand
Model Number	YH-0845KL
Color	Barnwood
Material	Engineered Wood
Product Dimensions (L x W x H)	58" x 15.5" x 27.6"
Recommended TV Size	Up to 65 inches (fits up to 70 inches with minimal overhang)
Weight Limit (Top Surface)	180 Pounds (81.6 kg)
Number of Drawers	4
Number of Shelves	3 (adjustable)
Mounting Type	Floor Mount
Assembly Required	Yes

## 9. WARRANTY AND SUPPORT

This product is typically covered by a standard return policy. For specific warranty details, return procedures, or technical support, please refer to your purchase documentation or contact the seller directly.

- **Returns:** Generally, a 30-day return policy applies from the date of purchase.
- **Customer Support:** For any questions, missing parts, or assistance, please contact the seller, Pioneer Choicest, through the platform where the purchase was made.

