

- Manuals.plus /
- > YESHOMY /
- > YESHOMY TV Stand Instruction Manual

YESHOMY YH-0845WM

YESHOMY TV Stand Instruction Manual

Model: YH-0845WM | Brand: YESHOMY

1. PRODUCT OVERVIEW

The YESHOMY TV Stand is a versatile media console designed to accommodate televisions up to 65 inches. Featuring a farmhouse aesthetic with sliding barn doors and ample storage, it is an ideal addition to living rooms, bedrooms, or home offices. This manual provides essential information for assembly, operation, and maintenance of your new TV stand.



Image 1.1: The YESHOMY TV Stand in Milk White, featuring sliding barn doors and open shelving, suitable for various room settings.

Key Features:

- **Farmhouse Design:** A versatile media console with a rustic charm, perfect for displaying decor and accommodating TVs up to 65 inches.
- **Silent Sliding Barn Doors:** Smooth-gliding doors on high-quality steel tracks allow for easy access to storage while maintaining a clean aesthetic.
- **Sturdy Construction:** Crafted from high-grade, certified wood with a durable laminate top, ensuring stability and longevity.
- **Generous Storage:** Includes two hidden drawers on each side (total of 4 drawers) for organizing DVDs, consoles, and other media accessories.
- **Cable Management:** Features pre-drilled holes to easily manage electronic equipment power supplies and cables.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- Always unplug and turn off electronic equipment before accessing power supplies or making connections.
- Use appropriate safety gear, such as gloves, during assembly to prevent cuts or pinches.
- Follow all assembly instructions carefully and ensure all fasteners are securely tightened before use.
- Keep the area around the TV stand clear of flammable materials.
- Ensure the stand is stable and level on a flat surface before placing any heavy items, especially a television, on it.
- Do not exceed the maximum weight capacity of the top surface (180 lbs) or shelves.
- Keep small parts and packaging materials away from children to prevent choking hazards.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- YESHOMY TV Stand components
- Assembly Tool Kit (includes necessary hardware)
- Installation and Usage Manual (this document)

4. SPECIFICATIONS



Image 4.1: Detailed product dimensions for the YESHOMY TV Stand and its internal drawers.

Attribute	Value
Brand	YESHOMY
Model Name	TV Stand
Model Number	YH-0845WM
Color	Milk White
Material	Wood, Metal (for rails)
Product Dimensions (L x W x H)	58 x 15.5 x 27.6 inches
Item Weight	90 Pounds

Attribute	Value
Recommended TV Size	Up to 65 Inches (fits up to 70 inches)
Number of Shelves	3 (adjustable)
Number of Drawers	4
Assembly Required	Yes
Mounting Type	Floor Mount
Top Material Type	Laminate



Image 4.2: The TV stand is designed to accommodate televisions up to 70 inches in width.

Well-Made Board



Image 4.3: The sturdy top board of the TV stand can support up to 180 lbs, providing a reliable surface for your television and other items.

5. ASSEMBLY INSTRUCTIONS

Assembly of the YESHOMY TV Stand is designed to be straightforward. Please follow the detailed step-by-step instructions provided in the separate installation manual included in your package. All parts are numbered, and the necessary tools are provided in the tool kit.

General Assembly Tips:

- **Read First:** Before starting, read through the entire assembly manual to familiarize yourself with the steps and components.
- **Clear Workspace:** Assemble the unit in a spacious, clean area to prevent loss of small parts and to protect the furniture from scratches.
- **Two-Person Assembly:** For the fastest and safest results, it is highly recommended to assemble this TV stand with two people.

- **Do Not Overtighten:** Tighten screws and fasteners firmly, but avoid overtightening to prevent damage to the wood.
- **Check Stability:** Once assembled, gently shake the unit to ensure all connections are secure and the stand is stable.

6. OPERATING INSTRUCTIONS

Using the Sliding Barn Doors:

The TV stand features smooth-gliding barn doors that can be moved along the metal tracks to cover either the central open shelves or the side storage compartments. Simply grasp the handle and slide the door horizontally to your desired position.



Image 6.1: The sliding barn door mechanism allows for flexible concealment of storage areas, while the adjustable shelf provides customizable space.

Utilizing Storage Drawers:

The TV stand includes four spacious drawers, two on each side, providing concealed storage for various items. Pull the drawers out gently to access their contents and push them back in until they are flush with the unit.



Image 6.2: The deep drawers offer ample storage for a variety of household items, helping to keep your living space organized.

Adjusting Shelves:

The internal shelves are adjustable, allowing you to customize the storage space to fit your media devices, books, or decorative items. Refer to the assembly manual for specific instructions on how to adjust shelf height.

Cable Management:

The back panel of the TV stand features pre-drilled holes to facilitate easy routing and organization of cables for your electronic devices. This helps maintain a tidy appearance and prevents cable clutter.

7. MAINTENANCE

Proper care and maintenance will help prolong the life and appearance of your YESHOMY TV Stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Immediately wipe up any spills with a dry cloth to prevent staining or water damage.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the finish.
- **Heat:** Do not place hot items directly on the surface. Use coasters or protective pads.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.

8. TROUBLESHOOTING

If you encounter any issues with your TV stand, please refer to the following common solutions:

- **Wobbling/Instability:** Ensure the TV stand is placed on a flat, level surface. Check all assembly hardware to confirm they are securely tightened.
- **Drawers/Doors Sticking:** Ensure the tracks are clean and free of debris. Check that the drawers/doors are properly aligned on their respective tracks.
- **Missing Parts:** If you discover any missing parts during assembly, do not proceed. Contact customer support immediately for assistance.
- **Damage:** If the product arrived damaged, please document the damage with photos and contact customer support before attempting assembly.

For issues not covered here, or if troubleshooting steps do not resolve the problem, please contact YESHOMY customer support.

9. WARRANTY AND SUPPORT

YESHOMY is committed to providing high-quality products. For information regarding product warranty, please refer to the terms and conditions provided at the time of purchase or visit the official YESHOMY website.

Customer Support:

If you have any questions, require assistance with assembly, or need to report a problem, please contact YESHOMY customer support. You can typically find contact information on the packaging, the original purchase platform, or the official YESHOMY brand store.

For returns, a 30-day easy return policy is typically available through your purchase platform.

Visit the [YESHOMY Store](#) for more products and information.

© 2025 YESHOMY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FK5BYK3R>

More documents and user manuals: **<https://manuals.plus/>**