



[Manuals.plus](#) /

› [HAPPYGRILL](#) /

› HAPPYGRILL 360 Degree Swivel Hunting Chair Instruction Manual

HAPPYGRILL HG1631New

HAPPYGRILL 360 Degree Swivel Hunting Chair Instruction Manual

Model: HG1631New

INTRODUCTION

Thank you for choosing the HAPPYGRILL 360 Degree Swivel Hunting Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new hunting chair. Please read these instructions thoroughly before use and retain them for future reference.

SAFETY INFORMATION

- Ensure the chair is set on a stable, level surface before use to prevent tipping.
- Do not exceed the maximum weight capacity of 330 lbs (150 kg). Overloading can cause damage or injury.
- Use caution while assembling and operating the adjustable seat height and swivel mechanisms to avoid pinching or other injuries.
- Keep hands and fingers clear of moving parts during adjustment.
- Regularly inspect all components for wear, damage, or loose fasteners. Do not use the chair if any parts are damaged or missing.
- This chair is designed for outdoor use. Avoid prolonged exposure to extreme weather conditions to extend product life.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- 1 x HAPPYGRILL 360 Degree Swivel Hunting Chair (Seat and Base Assembly)

- Instruction Manual
- Necessary hardware for assembly (pre-attached or in a separate bag)



Image 1: Main components of the HAPPYGRILL 360 Degree Swivel Hunting Chair.

SETUP AND ASSEMBLY

The HAPPYGRILL hunting chair is designed for quick and easy assembly. Follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface.
2. **Attach Seat to Base:** The chair typically comes in two main parts: the seat and the leg base. Align the swivel mechanism on the seat with the top of the leg base. Secure them using the provided screws or locking mechanism. Refer to the detailed instructions and diagrams included in your package for specific attachment points.
3. **Adjust Armrests:** If the armrests are not pre-attached, secure them to the sides of the seat using the side screws. Ensure they are firm and stable.
4. **Unfold and Adjust Legs:** Extend the telescopic legs to your desired height. Each leg features a lock system to secure it in place. Ensure all legs are locked at an even height for stability.

5. **Verify Stability:** Before sitting, gently test the chair's stability by applying downward pressure. Ensure all connections are secure and the chair does not wobble.

Swivel Hunting Chair with 5 Adjustable Heights

Keep an eye on all directions and prevent disturbing animals



Rotate Base



Telescopic Legs



Lock System



Silent



Flexible



Smooth



Image 2: Illustration of the swivel base, telescopic legs, and lock system for height adjustment.

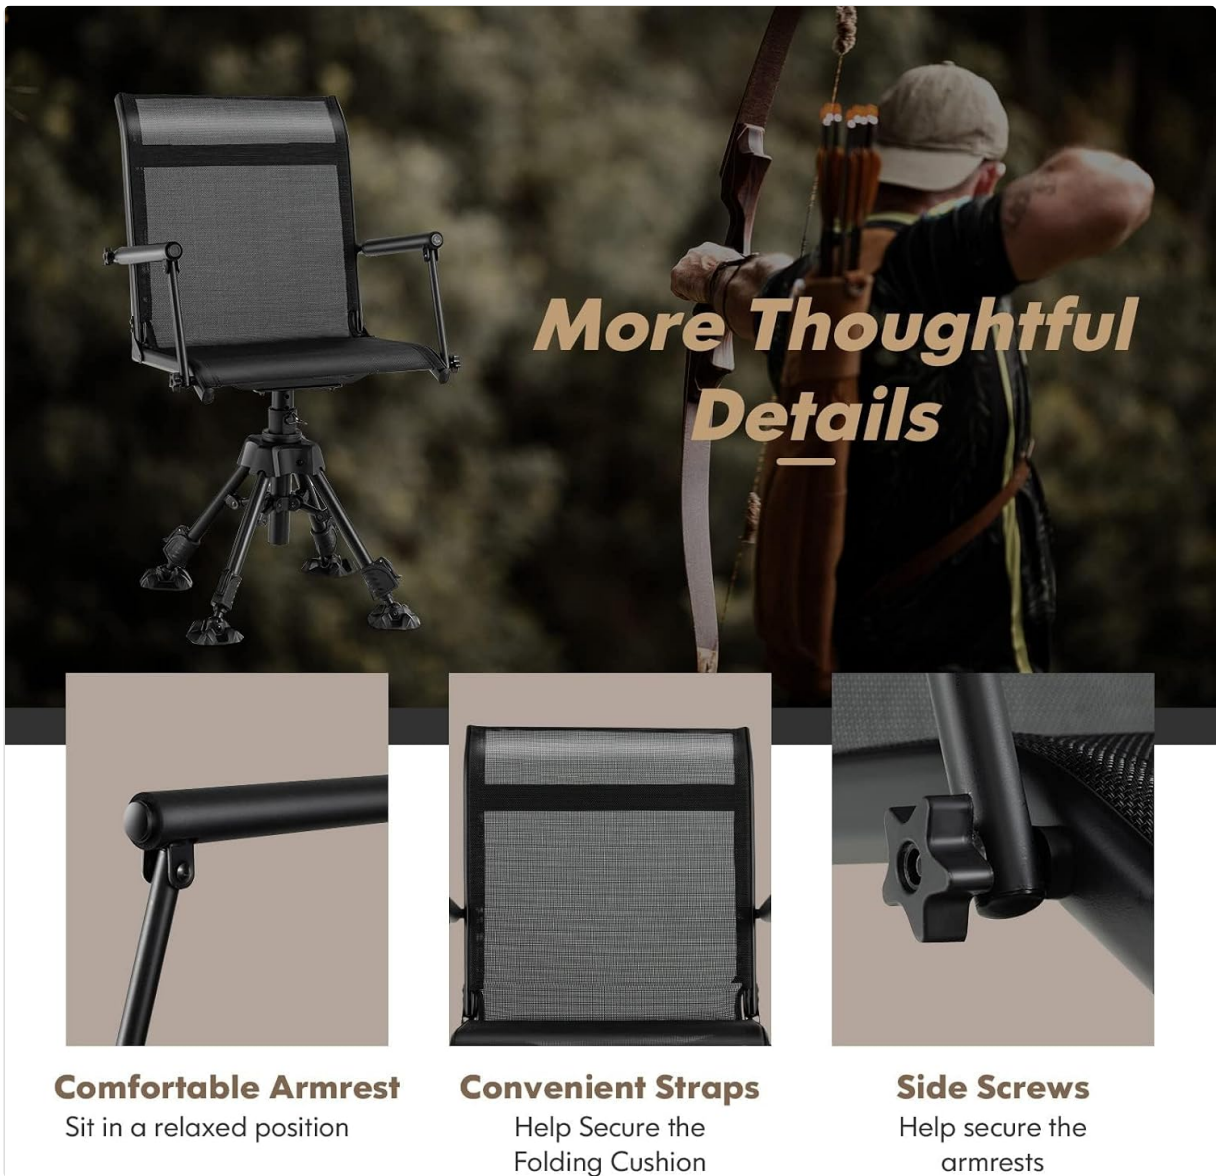 


Image 3: Details of armrest attachment and folding straps.

OPERATING INSTRUCTIONS

1. Adjusting Seat Height

The chair features telescopic legs with 8.5 inches of height adjustment. To adjust the height:

1. Ensure no one is sitting in the chair.
2. Locate the lock system on each leg.
3. Unlock the mechanism, extend or retract the leg to the desired height, and then firmly lock it back into place.
4. Repeat for all legs, ensuring they are adjusted evenly to maintain stability.

2. Using the 360 Degree Swivel Function

The chair's 360-degree swivel base allows for quiet and smooth rotation, providing an expanded field of view without repositioning the entire chair.

- Simply rotate the seat gently in any direction. The mechanism is designed to be silent to avoid disturbing wildlife.
- Avoid sudden, forceful rotations to prevent wear on the swivel mechanism.



Image 4: The 360-degree swivel feature allows for flexible positioning during use.

3. All-Terrain Foot Pads

The large 4-inch flat rotating duck feet are designed to provide superior grip and stability on various surfaces.

- These foot pads prevent the chair from sinking into soft ground like mud or sand.
- They adapt well to uneven terrain, including gravel roads and rocky surfaces, ensuring a stable seating experience.

Upgraded All-terrain Foot Pads

Larger contact area and stronger grip
Adapt to a variety of grounds

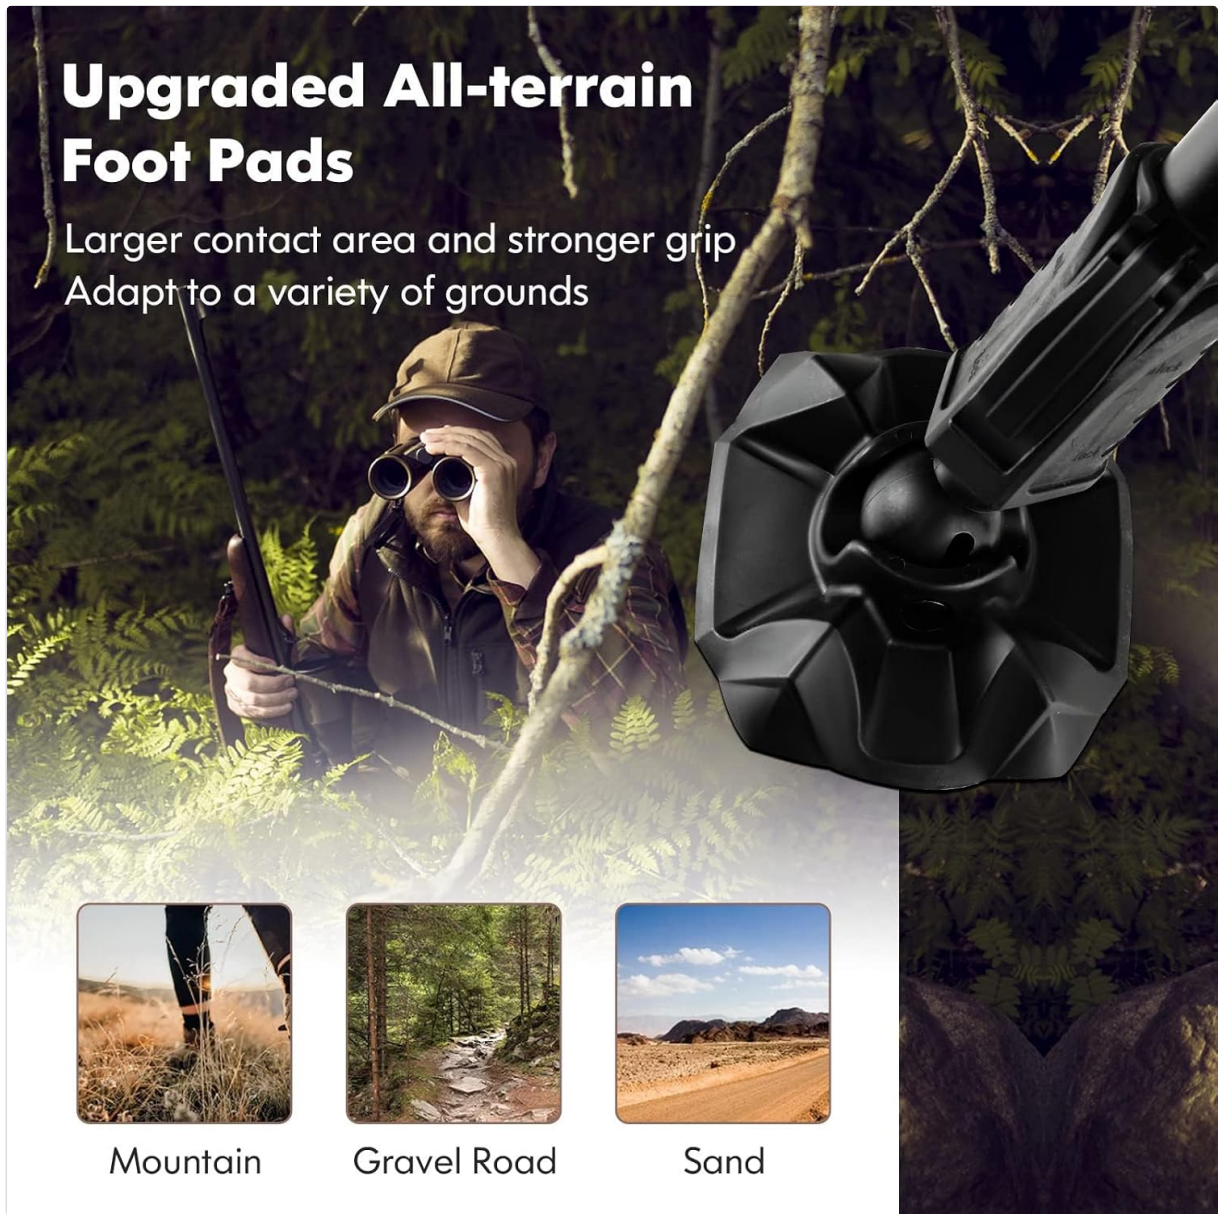


Image 5: The all-terrain foot pads provide stability on diverse ground conditions.

4. Folding and Storage

The chair can be quickly folded into two separate parts for convenient storage and transportation.

1. Ensure the chair is empty.
2. Collapse the telescopic legs to their shortest setting and lock them.
3. Follow the specific folding instructions provided with your chair to detach the seat from the base or fold the entire unit.
4. Use the handy strap to secure the armrest when the seat is folded, keeping the unit compact.

MAINTENANCE


- **Cleaning:** Wipe down the metal frame with a damp cloth and mild soap. The breathable mesh fabric can be cleaned with a soft brush and water. Allow to air dry completely before storing.
- **Lubrication:** Periodically apply a silicone-based lubricant to the swivel mechanism and leg adjustment points to ensure smooth operation and prevent rust.
- **Inspection:** Before each use, inspect all bolts, screws, and connections to ensure they are tight. Check the mesh fabric for any tears or damage.

- **Storage:** Store the chair in a dry, protected area when not in use to prevent rust and prolong its lifespan.




Excellent Durability & Stability

- High Strength
- Waterproof
- Wear-resistant
- Rust-resistant

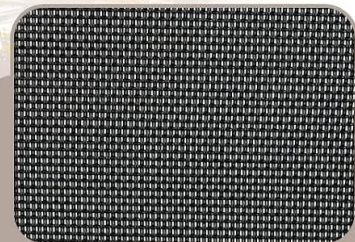

Breathable Mesh

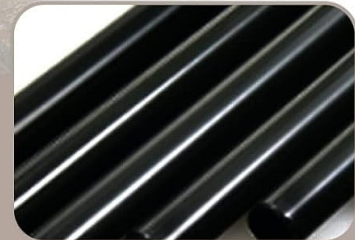

Robust Steel Frame

Image 6: The chair features a breathable mesh and robust steel frame for durability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair wobbles or is unstable.	Uneven leg adjustment; loose fasteners; uneven ground.	Ensure all legs are adjusted to the same height and locked. Tighten all screws and bolts. Move the chair to a more level surface.
Swivel mechanism is stiff or noisy.	Lack of lubrication; dirt or debris in the mechanism.	Clean the swivel base and apply a silicone-based lubricant.
Legs do not adjust smoothly.	Dirt or debris in telescopic tubes; lack of lubrication.	Clean the telescopic leg sections. Apply a silicone-based lubricant to the inner and outer tubes.

Problem	Possible Cause	Solution
Chair does not fold easily.	Mechanism misaligned; obstruction.	Ensure all parts are correctly aligned according to assembly instructions. Check for any obstructions.

SPECIFICATIONS

Model Name	Hunting Chair
Part Number	HG1631New
Brand	HAPPYGRILL
Color	Black
Material	Alloy Steel, Nylon, Polypropylene
Item Weight	15 Pounds (6.8 kg)
Maximum Weight Capacity	330 LBS (150 kg)
Item Dimensions (LxWxH)	21.5 x 21.5 x 33.5 inches (54.6 x 54.6 x 85.1 cm)
Adjustable Height Range	Approximately 8.5 inches (21.6 cm)
Foot Pad Size	4 inches (10.2 cm) flat rotating duck feet

Product Size

Max Weight: **330 LBS**

Net Weight: **15.5 LBS**



Image 7: Detailed product dimensions.

WARRANTY INFORMATION

Specific warranty details for the HAPPYGRILL 360 Degree Swivel Hunting Chair are not provided in this manual. Please refer to the product packaging or contact HAPPYGRILL customer support for warranty terms and conditions.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your HAPPYGRILL 360 Degree Swivel Hunting Chair, please contact HAPPYGRILL customer service. Contact information can typically be found on the product packaging or the official HAPPYGRILL website.