

KODAK RCF-1561P

Kodak 15.6-inch Digital Photo Frame RCF-1561P User Manual

Model: RCF-1561P

[Introduction](#) [Safety Information](#) [Package Contents](#) [Product](#)
[Overview](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the Kodak 15.6-inch Digital Photo Frame RCF-1561P. This digital photo frame features a 15.6-inch Full HD (1920x1080) IPS display, 32GB of internal storage, and Wi-Fi connectivity for easy sharing of photos, videos, and music. This manual provides detailed instructions for the proper setup, operation, and maintenance of your device to ensure optimal performance and longevity.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the device. Keep this manual for future reference.

- **Power Source:** Use only the provided power adapter. Using unauthorized adapters may damage the device and void the warranty.
- **Water and Moisture:** Do not expose the device to water, rain, or excessive moisture. Do not operate with wet hands.
- **Heat:** Keep the device away from heat sources such as radiators, heat registers, stoves, or other heat-producing appliances. Avoid direct sunlight for extended periods.
- **Ventilation:** Ensure proper ventilation. Do not block ventilation openings.
- **Cleaning:** Disconnect the power adapter before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Placement:** Place the device on a stable, flat surface. Avoid placing it in areas with high vibration or dust.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Kodak 15.6-inch Digital Photo Frame (RCF-1561P)
- Power Adapter
- User Manual (this document)
- Quick Start Guide

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your digital photo frame.

Front View



Image: The digital photo frame shown in both vertical and horizontal orientations, displaying different family pictures. This illustrates the versatile display options.

Rear View and Ports



Image: A detailed view of the back of the digital photo frame, highlighting the power button, various input ports (SD card, USB, DC IN), and the adjustable stand. An inset shows the magnetic power connector being attached.

- **Power Button:** Press and hold to turn on/off. Short press to enter/exit sleep mode.
- **SD/MMC Card Slot:** Insert an SD or MMC memory card for additional storage or media playback.
- **USB Port:** Connect a USB flash drive for media playback or to transfer files.
- **DC IN Port:** Connect the provided power adapter.
- **Stand:** Adjustable stand for horizontal or vertical placement.

5. SETUP

5.1 Initial Power On

1. **Connect Power:** Plug the power adapter into the DC IN port on the back of the frame, then plug the adapter into a wall outlet.
2. **Power On:** Press and hold the power button on the back of the frame until the screen lights up.
3. **Initial Settings:** Follow the on-screen prompts to select your preferred language, time zone, and date format.

5.2 Wi-Fi Connection

Connecting to Wi-Fi enables real-time photo sharing and access to online features.

1. From the main menu, navigate to **Settings**.
2. Select **Wi-Fi** and turn it on.
3. Choose your Wi-Fi network from the list and enter the password.
4. Once connected, a Wi-Fi icon will appear on the screen.



Image: The digital photo frame displaying a family photo, with a smartphone nearby also showing the same image and a Wi-Fi symbol, illustrating the wireless sharing capability.

5.3 App Installation and Pairing

To share photos and videos from your smartphone, download the dedicated app.

1. Search for the "Kodak Photo Frame" app in your smartphone's app store (Google Play Store or Apple App Store).
2. Install and open the app.
3. Create an account or log in.
4. On your digital photo frame, navigate to [Settings](#) > [Account](#) or [Device Binding](#) to find a unique device code.
5. In the smartphone app, enter this device code to pair your phone with the frame.



Image: A smartphone screen showing a photo being uploaded to a cloud service, with arrows indicating the transfer to the digital photo frame. Icons for the Kodak app and Google Photos are displayed above, suggesting integration with photo services.

5.4 Transferring Photos and Videos

- **Via App:** Open the Kodak Photo Frame app on your smartphone, select the photos/videos you wish to share, and send them to your paired frame. The frame will automatically display new content.
- **Via USB Drive/SD Card:** Insert a USB flash drive or SD card containing your media files into the respective port on the frame. The frame will detect the storage and allow you to browse and play files, or copy them to the internal 32GB storage.



Image: Several hands holding smartphones, each displaying a different image, surrounding a central digital photo frame that is also displaying an image. This visually represents the ease of sharing photos from multiple devices to the frame.

6. OPERATING THE DIGITAL PHOTO FRAME

6.1 Basic Navigation

The frame features a touchscreen interface. Swipe left/right to navigate through photos, tap to access options, and use the back button (if available on-screen) to return to the previous menu.

6.2 Photo and Video Playback

- **Slideshow:** The frame automatically starts a slideshow of all stored photos upon startup. You can customize slideshow intervals and transition effects in the settings.
- **Individual View:** Tap on a photo during a slideshow to view it individually. Swipe to move to the next or previous photo.

- **About:** View device information, firmware version, and check for updates.

7. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your digital photo frame.

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution designed for electronics. Do not spray liquids directly onto the screen.
- **Cleaning the Frame:** Use a soft, dry cloth to wipe the frame's exterior.
- **Storage:** If storing the frame for an extended period, disconnect it from power and store it in a cool, dry place, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Refer to this section for solutions to common issues.

Problem	Possible Cause	Solution
Frame does not turn on.	No power, faulty adapter, or device malfunction.	Ensure the power adapter is securely connected to both the frame and the power outlet. Try a different outlet. If the issue persists, contact support.
Wi-Fi connection fails.	Incorrect password, out of range, or network issue.	Verify the Wi-Fi password. Move the frame closer to the router. Restart your router and the photo frame.
Photos are not displaying.	Unsupported file format, no photos loaded, or storage issue.	Ensure photos are in supported formats (e.g., JPEG, PNG). Verify photos are successfully transferred to the frame's internal storage or connected external storage. Check storage capacity.
Screen is unresponsive.	Temporary software glitch.	Perform a soft reset by pressing and holding the power button for 10-15 seconds until the frame restarts. If unresponsive, disconnect power for a few minutes, then reconnect.

9. SPECIFICATIONS

Feature	Detail
Brand	KODAK
Model	RCF-1561P
Display Size	15.6 inches
Display Type	IPS LCD Panel
Resolution	1920 x 1080 (Full HD)
Internal Storage	32GB

Feature	Detail
Connectivity	Wi-Fi
Supported Media	Photos, Videos, Music
Product Dimensions	40 cm (Width) x 25 cm (Length)

10. WARRANTY AND SUPPORT

10.1 Warranty Information

This Kodak Digital Photo Frame RCF-1561P comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

10.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Kodak customer support. Refer to the contact information provided with your product packaging or visit the official Kodak website for support details.

Online Resources: For additional FAQs, software updates, and product registration, please visit the official Kodak support website.

