

[Manuals.plus](#) /

› [Max Build More](#) /

› MAX Build More Retro Series 2: Walkman & Guitar Building Kit Instruction Manual

Max Build More 83230B

MAX Build More Retro Series 2: Walkman & Guitar Building Kit Instruction Manual

Brand: Max Build More | Model: 83230B

INTRODUCTION

Welcome to the MAX Build More Premium Retro Series 2-Pack instruction manual. This special edition set allows you to construct two iconic retro designs: a classic cassette player with headphones and an electric guitar with an amplifier. With a total of 334 premium pieces, this kit offers a satisfying building experience and results in stylish display models. MAX Premium bricks are compatible with leading brick brands, making them a versatile addition to any collection. This set is designed for ages 8 and up, providing detailed construction and creative play.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small pieces. Not for children under 3 years.

Always ensure all small pieces are kept away from young children to prevent choking. Adult supervision is recommended during assembly.

WHAT'S INCLUDED

Your MAX Build More Premium Retro Series 2-Pack contains 334 premium building pieces to create two distinct models:

- One (1) Cassette Player with Headphones (approximately 175 pieces)
- One (1) Electric Guitar with Amplifier (approximately 159 pieces)
- One (1) Detailed Instruction Manual for each model

SETUP

Before beginning assembly, please follow these steps:

1. Carefully unbox the product and remove all plastic packaging.
2. Separate the building pieces into their respective bags for each model.

3. Lay out all pieces on a clean, flat surface to ensure easy access and prevent loss.
4. Refer to the included instruction booklets for step-by-step guidance specific to each model.

Video: Quick overview of the MAX Build More Retro Series 2 unboxing and assembly process.

BUILDING INSTRUCTIONS

Each model comes with its own detailed, step-by-step instruction booklet. Please refer to these booklets for precise assembly guidance. The instructions feature clear illustrations, piece counts for each step, and directional arrows to ensure correct placement.

1. Cassette Player with Headphones

Assemble the cassette player and its accompanying headphones by following the dedicated instruction booklet. Pay close attention to the details for the cassette tape, which can be inserted into the player.



Image: The completed MAX Build More Retro Series 2 Cassette Player with Headphones.

2. Electric Guitar with Amplifier

Construct the electric guitar and its amplifier using the separate instruction booklet. The guitar includes a display stand for showcasing your finished model.



Image: The completed MAX Build More Retro Series 2 Electric Guitar with Amplifier.

General Building Tips:

- Sort pieces by color and size before starting.
- Follow the steps sequentially to avoid errors.
- Ensure pieces are firmly connected for stability.



Image: An example page from the detailed instruction manual, illustrating assembly steps.

OPERATING

Cassette Player

- The cassette player features an opening door to insert the miniature cassette tape.
- The headphones are adjustable and can be connected to the player.
- Some internal components of the cassette player are designed to rotate, mimicking the function of a real cassette player.

Electric Guitar

- The electric guitar can be placed on its included display stand.
- The guitar can be connected to the amplifier model via a small cable.

MAINTENANCE

To ensure the longevity and appearance of your MAX Build More models:

- Keep the models clean by gently wiping them with a dry, soft cloth.
- Avoid exposing the models to direct sunlight or extreme temperatures, which can cause discoloration or warping.
- Store unused pieces in a secure container to prevent loss.

TROUBLESHOOTING

If you encounter any issues during assembly or with your completed models, consider the following:

- **Missing Pieces:** Double-check all packaging and the building area. If a piece is genuinely missing, contact ZURU customer support.
- **Assembly Difficulty:** Review the instruction booklet carefully. Ensure you are using the correct pieces and following the directional arrows. Sometimes, re-examining a previous step can resolve the issue.
- **Loose Connections:** Ensure all bricks are pressed firmly together. MAX Premium bricks are designed for a secure fit.

SPECIFICATIONS

- **Product Dimensions:** 4.53 x 4.53 x 4.53 inches
- **Item Weight:** 1.21 pounds
- **ASIN:** B0FK8K8JWC
- **Item Model Number:** 83230B
- **Manufacturer Recommended Age:** 8 years and up
- **Release Date:** December 2, 2025
- **Manufacturer:** ZURU

WARRANTY & SUPPORT

For any questions, concerns, or support regarding your MAX Build More Premium Retro Series 2-Pack, please refer to the manufacturer's official website or contact their customer service directly. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question