

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [ETOE](#) /
- › [ETOE Google TV Streaming Device \(Model D2861\) User Manual](#)

## ETOE D2861

# ETOE Google TV Streaming Device User Manual

Model: D2861 | Brand: ETOE

## 1. INTRODUCTION

This manual provides detailed instructions for the ETOE Google TV Streaming Device. This device transforms any compatible TV into a smart TV, offering access to a wide range of streaming services, apps, and smart features powered by Google TV. Please read this manual thoroughly before use to ensure proper setup and operation.



Image: The ETOE Google TV Streaming Device connected to a television, showcasing its streaming capabilities.

## 2. PACKAGE CONTENTS

Verify that all items are present in your package:

- ETOE Google TV Streaming Device (T2 Stick) x1
- Remote Control x1
- Power Cable (Micro USB) x1
- HDMI Extension Cable x1
- User Manual x1



*Image: All components included in the ETOE Google TV Streaming Device package.*

### 3. SETUP GUIDE

---

Follow these steps to set up your ETOE Google TV Streaming Device:


#### 3.1. Connect the Device

1. **Power Connection:** Connect one end of the USB cable to the TV stick and the other end to a power adapter (not included). Plug the power adapter into a nearby power outlet. Alternatively, you can connect

the USB cable directly to a USB port on your TV or monitor for power.

2. **HDMI Connection:** Insert the TV stick into an available HDMI port on your television. If the HDMI port is difficult to access, use the included HDMI extension cable.

## Google TV を選ぶ理由

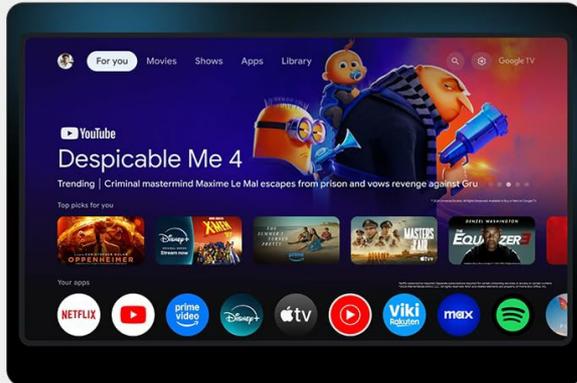


### アプリの切り替えは不要

ストリーミング、ライブテレビ、音楽などのコンテンツが、ユーザーに合わせて自動的に整理されます。




### 厳選されたおすすめ

お好みの映画やテレビ番組が見つかります。

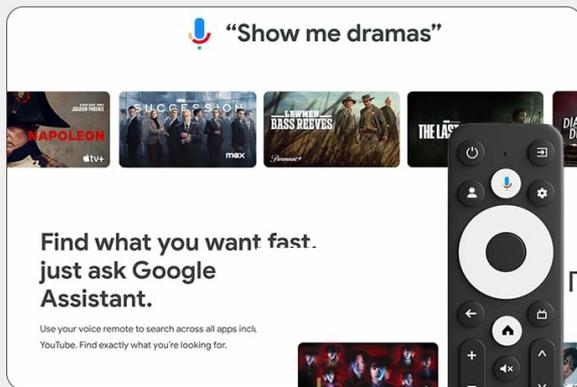

### Google アシスタントに聞くだけ

音声で複数のアプリを検索して、探しているものを見つけることができます。

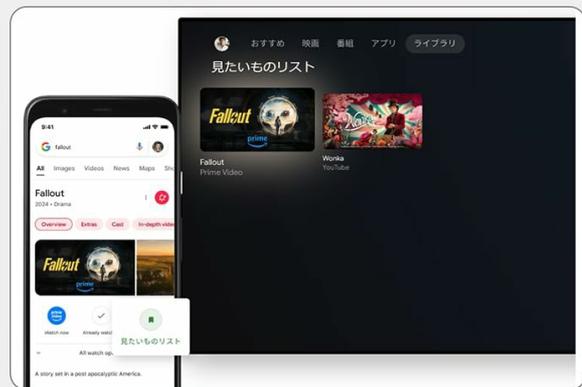

### 見たいものリストを活用

テレビ、スマートフォン、Google 検索から映画や番組を直接追加できます<sup>1</sup>。

Image: Connection diagram for the ETOE Google TV Streaming Device.

## 3.2. Initial Setup and Remote Pairing

Turn on your TV and select the correct HDMI input. The device will boot up, and you will see a welcome screen. Follow the on-screen instructions to complete the initial setup, which includes pairing your remote control.

To pair the remote, press and hold the **Home** and **Back** buttons simultaneously for approximately 5 seconds, or until the LED on the remote blinks green. Keep the remote within 3 feet of the streaming device during pairing.

## 3.3. Video Guide: Unboxing and Setup

Your browser does not support the video tag.

Video: A short demonstration of unboxing the ETOE Google TV Streaming Device and performing the initial setup steps, including remote pairing and language selection.

## 4. OPERATING INSTRUCTIONS

Once set up, navigate the Google TV interface using your remote control.

### 4.1. Navigating the Interface

- Use the directional pad (D-pad) on the remote to move between menu items.
- Press the **Center** button to select an item.
- Press the **Back** button to return to the previous screen.
- Press the **Home** button to go to the Google TV home screen.



Image: The ETOE Google TV interface with the remote control.

### 4.2. Voice Control with Google Assistant

The ETOE Google TV Streaming Device supports Google Assistant for hands-free control. Press the **Google**

**Assistant** button on your remote or say "OK Google" (if enabled) to activate voice commands.

- Search for movies and TV shows.
- Open applications.
- Control playback (play, pause, skip).
- Adjust volume.



*Image: Using voice commands with the ETOE Google TV remote.*

### 4.3. Streaming Applications

Access a vast library of content from popular streaming services like Netflix, YouTube, Prime Video, Disney+, and many more. The Google TV interface organizes content from all your subscriptions, making it easy to discover new shows and movies.

**1万以上のアプリに簡単にアクセスできます。  
すべてが1か所にあります。**



映画と番組



ライブテレビとスポーツ



フィットネス



音楽



*Image: Overview of popular streaming applications accessible on the device.*

#### **4.4. Google Cast / Screen Mirroring**

The device supports Google Cast, allowing you to mirror content from your smartphone or tablet directly to your TV screen. This feature is ideal for sharing photos, videos, or presentations.

**Google Cast 内蔵により、スマートモバイル  
端末のコンテンツを大画面にミラーリング表示可能で、  
没入感のある映像体験を実現します。**




Phone



Tablet



PC

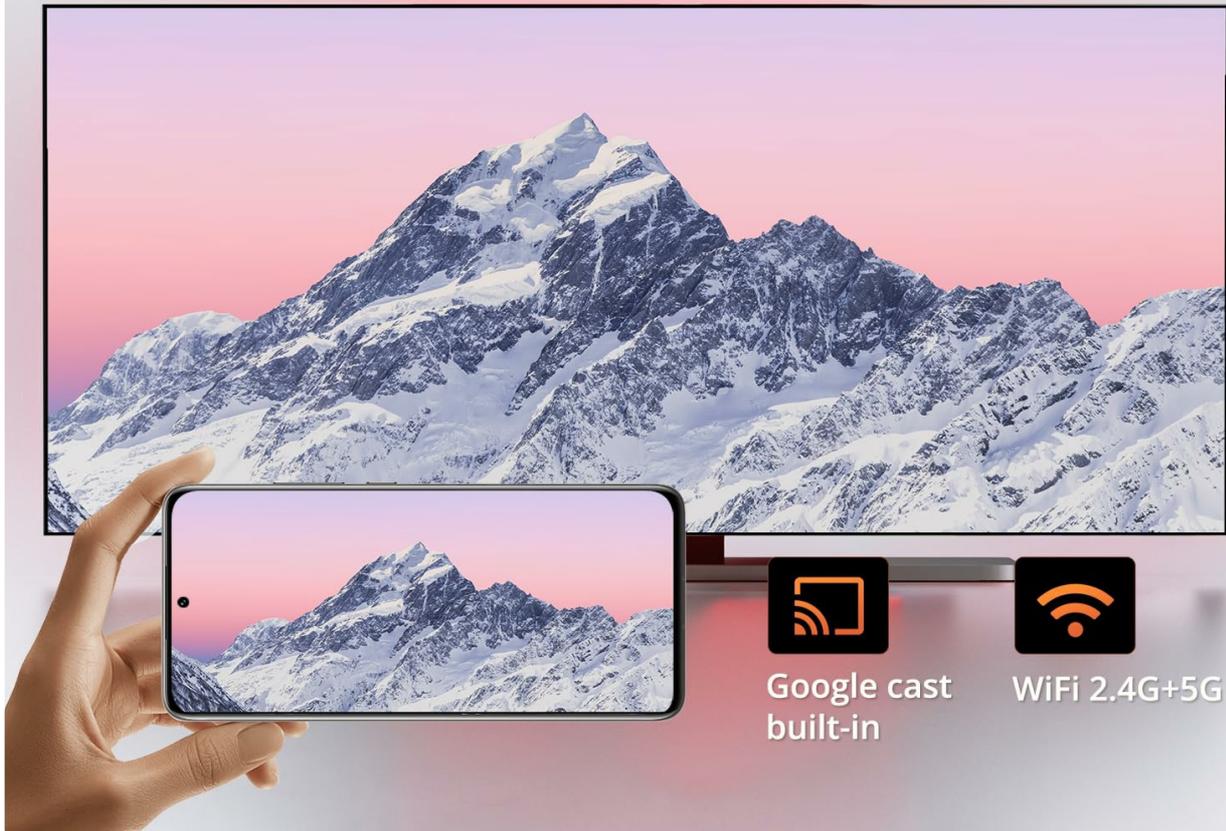

*Image: Smartphone screen mirroring to a TV using Google Cast.*

## 5. FEATURES

The ETOE Google TV Streaming Device offers a range of features designed to enhance your entertainment experience:

- **Official Google TV:** Access over 700,000 movies and TV episodes from various streaming services.
- **Full HD 1080p Output:** Enjoy vivid and clear images with 1080p resolution support.
- **Dual-band Wi-Fi (2.4G & 5G):** Ensures stable and fast wireless connectivity for smooth streaming.
- **Bluetooth 5.0:** Connect wireless accessories such as headphones or game controllers.
- **Google Assistant:** Use voice commands for search, playback control, and more.
- **Google Cast Built-in:** Easily cast content from your mobile devices to your TV.
- **Personalized Recommendations:** Google TV learns your preferences and suggests content tailored to you.

## 超高解像度画質

1920 × 1080 ピクセルの鮮明さにより、細部まで驚くほどの品質と精度をお楽しみください。



*Image: High-resolution display capabilities of the device.*

## 6. MAINTENANCE

To ensure the longevity and optimal performance of your ETOE Google TV Streaming Device, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosol sprays.
- **Ventilation:** Ensure the device is placed in a well-ventilated area to prevent overheating. Do not cover the device.
- **Storage:** When not in use for extended periods, disconnect the device from power and store it in a cool, dry place.
- **Software Updates:** Keep the device's software updated to the latest version for improved performance and security. Updates are typically managed automatically by Google TV.

## 7. TROUBLESHOOTING

If you encounter issues with your ETOE Google TV Streaming Device, refer to the following common problems and solutions:

Problem	Possible Solution
No power/Device not turning on	Ensure the power cable is securely connected to the device and a working power outlet. Try a different power adapter or USB port.
No signal on TV	Verify the HDMI cable is securely connected to both the device and the TV. Ensure your TV is set to the correct HDMI input. Try a different HDMI port or cable.
Remote not responding	Check the remote's batteries and replace if necessary. Re-pair the remote by holding the Home and Back buttons for 5 seconds.
Wi-Fi connection issues	Restart your Wi-Fi router. Go to the device's Wi-Fi settings and reconnect to your network. Ensure the device is within range of your router.
App freezing or crashing	Restart the application. Clear the app's cache and data in the device settings. If the problem persists, uninstall and reinstall the app.
Poor video quality	Check your internet connection speed. Ensure your TV supports the resolution being streamed. Adjust video quality settings within the streaming app if available.

## 8. SPECIFICATIONS

Key technical specifications for the ETOE Google TV Streaming Device (Model D2861):

- **Brand:** ETOE
- **Model Number:** D2861
- **Form Factor:** TV Stick
- **Color:** Black
- **Connectivity Technology:** Wi-Fi (2.4G & 5G), Bluetooth 5.0
- **Connector Type:** HDMI
- **Video Output Resolution:** 1080p (1920x1080)
- **Video Codecs:** H.264, H.265/HEVC
- **Product Weight:** 190 g
- **Package Dimensions:** 19.3 x 9.1 x 4.6 cm

## 9. WARRANTY AND SUPPORT

---

ETOE provides a 12-month warranty and 30-day return policy for this product. For any initial defects or compatibility issues, please contact customer support. Japanese language support is available, and manufacturer warranty ensures comprehensive post-purchase assistance.

For further assistance, please visit the official ETOE store or contact customer support through the provided channels.

- **Official Store:** [ETOE Official Store on Amazon.co.jp](#)