

PEICHENG P13Max

PEICHENG P13 Max 11-inch Android Tablet User Manual

Model: P13 Max

			Introduction	Package Contents	Product	
Overview	Setup	Operation	Maintenance	Troubleshooting	Specifications	Warranty & Support

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your PEICHENG P13 Max 11-inch Android Tablet. Please read this manual thoroughly before operating the device and retain it for future reference. This tablet is designed for a variety of uses including business, entertainment, and student activities, offering a powerful Android 16 operating system and an Octa-core processor for smooth performance.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package. If any items are missing or damaged, please contact customer support.

- PEICHENG P13 Max 11-inch Android Tablet
- Wireless Keyboard
- Wireless Mouse
- Stylus
- Protective Case
- Charging Cable (USB Type-C)
- Power Adapter
- User Manual (this document)

Large storage space and memory expansion



Image: The PEICHENG P13 Max tablet shown with its complete set of accessories, including a wireless keyboard, mouse, stylus, protective case, and charging cable.

Your browser does not support the video tag.

Video: An overview of the PEICHENG P13 Max tablet and its accessories, demonstrating its use for work, learning, and amusement.

3. PRODUCT OVERVIEW

3.1 Physical Features

The PEICHENG P13 Max tablet features a sleek design with essential ports and buttons for user interaction.

- **Power Button:** Located on the side, used to power on/off or wake/sleep the device.
- **Volume Buttons:** Adjust audio levels.
- **USB 3.0 Type-C Port:** For charging and data transfer.
- **3.5mm Headphone Jack:** For audio output.
- **Microphone:** For voice input.
- **Speakers:** For audio output.
- **Front Camera:** For video calls and selfies.
- **Rear Camera:** For high-resolution photography.

- **MicroSD Card Slot:** For expandable storage up to 1TB.

Your browser does not support the video tag.

Video: A detailed look at the physical features and design of the P13 Android Tablet.

4. SETUP

4.1 Initial Power On

1. **Charge the Tablet:** Before first use, fully charge the tablet using the provided USB Type-C cable and power adapter. The charging port is located on the side of the device.
2. **Power On:** Press and hold the Power button until the PEICHENG logo appears on the screen.
3. **Initial Configuration:** Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google account.

4.2 Connecting Accessories

- **Wireless Keyboard/Mouse:**
 - a. Turn on the keyboard/mouse.
 - b. On your tablet, go to *Settings > Connected devices > Bluetooth*.
 - c. Enable Bluetooth and search for available devices.
 - d. Select the keyboard/mouse from the list to pair.
- **Stylus:** The stylus is a passive capacitive pen and does not require pairing. Simply use it directly on the touchscreen for navigation, writing, or drawing.
- **Protective Case:** Install the tablet into the protective case for enhanced protection and to utilize its stand functionality.

5. OPERATION

5.1 Display and Visuals

The tablet features an 11-inch HD IPS touchscreen with a resolution of 1280x800 pixels, offering clear and vibrant visuals. It supports Widevine L1 for high-quality streaming content.

10.95 Inch High Definition IPS Display



1280*800
High Resolution



16:10
Aspect Ratio



INCELL
Panel Type



IPS
Wide View



Image: The tablet's 10.95-inch HD IPS display, showcasing its 1280x800 resolution and wide view capabilities.

5.2 Performance and Storage

Powered by an Octa-core processor and Android 16, the tablet provides smooth multitasking and efficient operation. It comes with 4GB of RAM (expandable virtually to 18GB) and 128GB of internal storage, further expandable up to 1TB via a microSD card.



Image: The tablet running Android 16, demonstrating its user interface and app capabilities.

5.3 Cameras

Capture moments with the tablet's dual cameras: a 5MP front camera for video calls and a 13MP rear camera for photos and videos.

Capture Every Moment in Stunning Clarity

Dual Cameras

 **5MP**
Front Camera

 **13MP**
Rear Camera

Dual Speakers

Improved Volume
& Sound Quality



Image: The tablet's dual camera system, featuring a 5MP front camera and a 13MP rear camera.

5.4 Connectivity

The tablet supports 5G WiFi (2.4G+5G) for fast internet access and Bluetooth for connecting wireless peripherals.

5.5 Battery Life

Equipped with an 8000mAh battery, the tablet provides extended usage times for various activities:

- Up to 8 hours of video playback
- Up to 10 hours of music playback
- Up to 5 hours of gameplay
- Up to 12 hours of reading

Long-lasting Battery Life

The 8000mAh high-capacity battery provides you with an unparalleled convenient experience, whether you're watching TV at home, attending meetings during business trips, or using it during business travel, it meets all your needs.



8H
Video



10H
Music



5H
Gameplay



12H
Read



Type-c
Charging



3.5mm
Headphone Jack

Image: Visual representation of the tablet's long-lasting 8000mAh battery life for different usage scenarios.

5.6 Using Accessories

The included wireless keyboard, mouse, and stylus enhance productivity and creativity. The keyboard transforms the tablet into a mini-laptop, while the stylus is ideal for precise input and artistic tasks.



Image: A user operating the tablet with the wireless keyboard and mouse, illustrating its versatility.

6. MAINTENANCE

6.1 Cleaning

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.

6.2 Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features. Go to *Settings > System > System update* to check for updates.

6.3 Battery Care

- Avoid exposing the tablet to extreme temperatures.
- Do not allow the battery to fully discharge frequently.
- Use only the provided or certified charging accessories.

7. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common solutions:

- **Tablet not turning on:** Ensure the tablet is charged. Connect it to the charger and wait a few minutes before attempting to power it on again.
- **Screen unresponsive:** Restart the tablet by holding down the Power button for about 10-15 seconds.
- **Wi-Fi connection issues:**
 - a. Ensure Wi-Fi is enabled in *Settings*.
 - b. Restart your Wi-Fi router.
 - c. Forget the network and reconnect.
- **Accessories not connecting:**
 - a. Ensure Bluetooth is enabled on the tablet and the accessory is in pairing mode.
 - b. Check battery levels of the accessories.
 - c. Restart both the tablet and the accessory.
- **Slow performance:**
 - a. Close unused applications.
 - b. Clear cache from apps in *Settings > Apps*.
 - c. Ensure sufficient storage space is available.

If problems persist, contact PEICHENG customer support for further assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	PEICHENG
Model Name	P13 MAX
Model Number	P13 Ultral
Operating System	Android 16.0
Processor	Unisoc T615 Octa-core (up to 1.6 GHz)
RAM	4 GB (14 GB virtual expansion, total 18 GB)
Internal Storage	128 GB
Expandable Storage	microSD up to 1 TB
Screen Size	10.95 Inches
Display Type	IPS HD Touchscreen

Feature	Detail
Display Resolution	1280 x 800 pixels
Front Camera	5 MP
Rear Camera	13 MP
Battery Capacity	8000 mAh
Connectivity	5G Wi-Fi (2.4G+5G), Bluetooth
Ports	USB 3.0 Type-C, 3.5mm Headphone Jack
Dimensions (L x W x Thickness)	8.76"L x 6.57"W x 0.4"Th
UPC	607606229707

9. WARRANTY AND SUPPORT

The PEICHENG P13 Max tablet comes with a 1-year limited warranty. For warranty claims, technical support, or any inquiries, please contact PEICHENG customer service through the retailer where the product was purchased or refer to the official PEICHENG website for contact information.

Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FK9WKY3J>

More documents and user manuals: <https://manuals.plus/>