

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Serantzon](#) /

› Serantzon Portable Misting Fan (Model 1) User Manual

## Serantzon 1

# Serantzon Portable Misting Fan User Manual

Model: 1

## INTRODUCTION

---

Thank you for choosing the Serantzon Portable Misting Fan. This manual provides essential information for the safe and efficient operation, setup, and maintenance of your device. Please read it thoroughly before use and retain it for future reference.

## PRODUCT OVERVIEW

---

The Serantzon Portable Misting Fan is designed for outdoor cooling, featuring a powerful fan, misting function, night light, and power bank capabilities. It includes an 11-liter water tank and a 20000mAh rechargeable battery for extended use.

# 4-IN-1 Portable Misting Fan

Cooling Fan/Night Light/Humidifier/Power bank



**Figure 1: Product Components.** This image illustrates the main parts of the Serantzon Portable Misting Fan, including the night light, misting outlet, water tank buckle, built-in 20000mAh battery, and water remaining window. The control panel shows buttons for night light, fan, and misting functions.

## Components:

- **Night Light:** Provides illumination.
- **Misting Outlet:** Disperses water mist.
- **Water Tank Buckle:** Secures the water tank.
- **Built-in 20000mAh Battery:** Powers the unit.
- **Water Remaining Window:** Indicates water level.
- **Control Panel:** Buttons for Night Light, Fan, and Misting functions.

## SETUP

### 1. Charging the Battery:

Before first use, fully charge the integrated 20000mAh battery. Connect the provided cord to the Type-C Power Input port on the fan and plug it into a suitable power source. The LED indicator will show charging status.



**Figure 2: Battery Capacity.** The fan is equipped with a 20000mAh battery, providing extended operation times.

## 2. Filling the Water Tank:

1. Detach the 11-liter water bucket from the fan unit.
2. Fill the bucket with clean water. Ice cubes can be added for enhanced cooling.
3. Securely reattach the water bucket to the fan unit, ensuring the water tank buckle is engaged.



Figure 3: 11L Water Tank. The large capacity water tank allows for prolonged misting operation.

### 3. Placement:

Place the fan on a stable, flat surface. Ensure adequate clearance around the fan for optimal airflow and mist dispersion.

## OPERATION

### 1. Fan Control:

Press the Fan Button on the control panel to cycle through the three wind speeds: Low, Medium, and High. Press again to turn the fan off. The indicator light will show the current speed setting.



Figure 4: Fan Performance. The fan features a brushless motor for efficient airflow and quiet operation, with adjustable wind speeds.

## 2. Misting Function:

Press the Misting Button to activate the misting function. Cycle through the four spray levels: 25%, 50%, 75%, and 100%. Press again to turn the misting function off. Ensure the water tank is filled before activating misting.

## 3. Night Light:

Press the Night Light switch on the control panel to turn the LED light on or off. This provides soft illumination for low-light conditions.

## 4. Power Bank Function:

The fan is equipped with a USB Power Output port. Connect your smart devices (e.g., phone, PC) to this port using a compatible USB cable to charge them. This function is available even when the fan or misting is not active.

# Detachable Portable Misting Fan



**Figure 5: Detachable and Portable Design.** The fan unit can be turned over and stored inside the water bucket for compact storage, and features a built-in handle for easy transport.

## MAINTENANCE

---

### 1. Cleaning:

- Before cleaning, ensure the fan is turned off and unplugged.
- Wipe the exterior of the fan with a soft, damp cloth. Do not immerse the unit in water.
- Regularly clean the water tank to prevent mineral buildup and ensure hygienic misting. Detach the tank and rinse thoroughly.
- For the misting nozzles, use a soft brush or cotton swab to gently clear any blockages.

### 2. Storage:

When not in use, especially for extended periods, ensure the water tank is empty and dry. The fan unit can be turned over and stored inside the bucket for compact storage. Store the fan in a cool, dry place away from direct sunlight.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the battery using the provided Type-C cable.
No mist or weak mist.	Water tank is empty or low. Misting nozzles are clogged. Tubing is crimped or blocked.	Refill the water tank. Clean the misting nozzles. Check and straighten the misting tubing.
Night light not working.	Night light function is off. Battery is depleted.	Press the Night Light switch. Charge the battery.
Device not charging external devices.	USB cable is faulty. Battery is depleted.	Try a different USB cable. Charge the fan's internal battery.

## SPECIFICATIONS

Feature	Detail
Model Number	1
Battery Capacity	20000mAh (Lithium-Ion)
Battery Life (Fan Only)	Up to 55 hours (low speed)
Water Tank Capacity	11 Liters
Wind Speeds	3 (Low, Medium, High)
Mist Levels	4 (25%, 50%, 75%, 100%)
Special Features	LED Night Light, USB Power Output, Type-C Power Input, Waterproof Design
Dimensions (Product)	6 x 6 x 5.6 inches
Weight (Item)	5.37 pounds (2.44 Kilograms)
Material	Metal, Plastic
Included Components	Cord

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact Serantzon customer service through the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.



