

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Proscenic](#) /

› [Proscenic F10 Ultra Wet Dry Vacuum Cleaner Instruction Manual](#)

Proscenic F10 Ultra

Proscenic F10 Ultra Wet Dry Vacuum Cleaner

Instruction Manual

[Introduction](#) [Safety Instructions](#) [Product](#)

[Components](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Proscenic F10 Ultra Wet Dry Vacuum Cleaner. This appliance is designed to provide efficient and versatile cleaning for various hard floor surfaces, combining vacuuming and wiping functions. Please read this manual thoroughly before initial use to ensure proper operation, maintenance, and safety. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without tanks and filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Proscenic F10 Ultra Wet Dry Vacuum Cleaner.



Image 1: Proscenic F10 Ultra Wet Dry Vacuum Cleaner. This image displays the main body of the vacuum cleaner, showcasing its

sleek design and primary components such as the handle, main unit, and floor head.

Package Contents:

- Main Vacuum Unit
- Handle Assembly
- Clean Water Tank
- Dirty Water Tank
- Charging Base
- Power Adapter
- Cleaning Brush Tool
- HEPA Filter (pre-installed or spare)
- User Manual (this document)

Key Components:

- **LED Display:** Provides real-time information on battery status, cleaning mode, and alerts.
- **Voice Prompts:** Guides users through operation and maintenance tasks.
- **Clean Water Tank:** Holds fresh water and cleaning solution.
- **Dirty Water Tank:** Collects dirty water and debris.
- **Brush Roll:** Actively scrubs and cleans floors.
- **Infrared Sensors:** Detects dirt levels in Smart Mode.
- **Self-Cleaning Button:** Initiates the automatic brush cleaning cycle.

4. SETUP AND INITIAL USE

4.1 Assembly

1. Insert the handle assembly into the main unit until it clicks securely into place.
2. Ensure the clean water tank and dirty water tank are correctly seated in their respective positions.

4.2 Charging the Battery

1. Place the vacuum cleaner on its charging base.
2. Connect the power adapter to the charging base and then to a power outlet.
3. The LED display will indicate the charging status. A full charge takes approximately 4 hours.
4. Ensure the appliance is fully charged before its first use to maximize battery life.

4.3 Filling the Clean Water Tank

1. Remove the clean water tank from the main unit.
2. Open the tank cap and fill with clean tap water. You may add a small amount of non-foaming cleaning solution suitable for wet/dry vacuums, following the solution's instructions. Do not overfill.
3. Close the cap securely and reinsert the tank into the vacuum cleaner.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press the Power button on the handle to turn the vacuum cleaner on or off. The LED display will illuminate, and voice prompts will guide you.

5.2 Selecting Cleaning Modes

The Proscenic F10 Ultra offers three cleaning modes:

- **Smart Mode:** Infrared sensors automatically detect the level of dirt and adjust suction power and water flow accordingly. Ideal for general cleaning and varying dirt levels.
- **Vac Mode:** Provides economical cleaning with reduced water output, suitable for wooden floors or light dry debris.
- **Max Mode:** Delivers intensive stain removal with maximum suction and water flow, recommended for heavily soiled areas like kitchens and terraces.

Press the Mode button on the handle to cycle through the available cleaning modes. The selected mode will be displayed on the LED screen.

5.3 Cleaning Process

1. Ensure the clean water tank is filled and the dirty water tank is empty.
2. Turn on the appliance and select your desired cleaning mode.
3. Tilt the vacuum cleaner back to engage the brush roll and begin cleaning. The self-propelled design assists in effortless movement.
4. Move the vacuum cleaner slowly over the floor surface, allowing it to vacuum and wipe simultaneously.
5. For edge cleaning, guide the vacuum cleaner along walls and baseboards.
6. Monitor the LED display for battery status and any alerts. Voice prompts will also provide guidance.
7. When finished, turn off the appliance and return it to the charging base.

6. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your Proscenic F10 Ultra.

6.1 Self-Cleaning Function

1. After each use, place the vacuum cleaner on its charging base.
2. Ensure there is sufficient clean water in the clean water tank.
3. Press the Self-Cleaning button (usually indicated by a water drop icon).
4. The appliance will automatically clean the brush roll and internal pathways. This process typically takes about 1 minute.
5. Once the self-cleaning cycle is complete, empty the dirty water tank.

6.2 Emptying and Cleaning the Dirty Water Tank

1. Remove the dirty water tank from the main unit.
2. Carefully open the tank and dispose of the dirty water and debris.
3. Rinse the tank thoroughly with clean water.
4. Clean the filter assembly within the dirty water tank.
5. Allow all parts to air dry completely before reassembling.

6.3 Cleaning the Brush Roll

1. Even with the self-cleaning function, periodic manual cleaning of the brush roll is recommended.
2. Turn off and unplug the appliance.
3. Remove the brush roll cover and then the brush roll itself.
4. Use the provided cleaning brush tool to remove any tangled hair or debris from the brush roll.
5. Rinse the brush roll under running water.
6. Allow the brush roll to air dry completely before reinstalling.

6.4 Cleaning the HEPA Filter

The HEPA filter should be cleaned regularly and replaced every 3-6 months, depending on usage.

1. Locate and remove the HEPA filter, typically found within the dirty water tank assembly.
2. Tap the filter gently to dislodge dust and debris. You may rinse it under cool running water.
3. Ensure the filter is completely dry before reinstallation to prevent mold growth and maintain suction performance.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Battery is depleted.	Charge the appliance fully.
	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Poor suction or cleaning performance.	Dirty water tank is full.	Empty and clean the dirty water tank.
	Brush roll is tangled or dirty.	Clean the brush roll, remove any hair or debris.
	HEPA filter is clogged.	Clean or replace the HEPA filter.
	Clean water tank is empty.	Refill the clean water tank.
Water leakage.	Tanks not properly installed.	Ensure both clean and dirty water tanks are securely in place.
	Tank caps are not sealed.	Check that all tank caps are tightly closed.
Self-cleaning function not working.	Insufficient water in clean water tank.	Ensure the clean water tank is filled above the minimum level.
	Dirty water tank is full.	Empty the dirty water tank before initiating self-cleaning.

8. SPECIFICATIONS

Brand	Proscenic
Model	F10 Ultra
Item Weight	8.8 Pounds
Form Factor	Handheld (referring to the main unit's design for maneuverability)
Battery Type	Lithium-Ion
Filter Type	HEPA Filter
Power Source	Battery Powered
Voltage	28.8 Volts
Capacity (Water Tanks)	1.3 Liters
Wattage	350 watts
Charging Time	4 Hours
Running Time	Up to 60 minutes (depending on mode)
Color	White

9. WARRANTY AND CUSTOMER SUPPORT

Proscenic products are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Proscenic website. If you encounter any issues or have questions regarding your Proscenic F10 Ultra Wet Dry Vacuum Cleaner, please contact Proscenic customer support for assistance.

Manufacturer: Proscenic

For further support, visit the [Proscenic Store on Amazon](#).