

VEGER 20000mAh Portable Power Bank

VEGER 20000mAh Portable Power Bank User Manual

Model: 20000mAh Portable Power Bank

1. INTRODUCTION

Thank you for choosing the VEGER 20000mAh Portable Power Bank. This device is designed to provide reliable and fast charging for your electronic devices on the go. Please read this manual carefully before use to ensure optimal performance and safety.

2. PRODUCT OVERVIEW

2.1 Package Contents

Please check the package for the following items:

- VEGER 20000mAh Portable Power Bank
- USB Charging Cable
- Storage Pouch
- User Manual

Lista de paquetes



Image: The package contents of the VEGER 20000mAh Portable Power Bank, showing the power bank, a USB cable, a soft storage pouch, and the instruction manual.

2.2 Key Features

- **High Capacity:** 20000mAh for extended power.
- **Fast Charging:** 22.5W output for quick device charging.
- **Multiple Ports:** One USB-C (Input/Output) and two USB-A output ports.
- **Compact Design:** Portable and lightweight for easy carrying.
- **LED Display:** Digital display shows remaining battery percentage.

18W INPUT

22.5W OUTPUT

Carga rápida de su teléfono de 0% a 80% en 35 minutos

80% VEGER 4x MÁS RÁPIDO

20% Otros

4 veces más rápido que los cargadores estándar

Los datos proceden de pruebas de laboratorio, los resultados reales pueden variar.

Image: The VEGER 20000mAh Power Bank held in a hand, highlighting its compact and portable size.



Precisión LED Pantalla

Image: An illustration demonstrating the 20000mAh capacity of the power bank, showing it can charge an iPhone 12 4.6 times, an iPad Pro 1.3 times, a Galaxy S21 3.2 times, and AirPods 30 times.

<p>SCP 22,5 W Modo SuperCharge</p> <p>Mate 50/40/30/P40/30/Nova 8, etc.</p>	<p>QC 18W Modo de carga rápida</p> <p>Galaxy Z Fold4/S22/21/20/Note20 etc</p>	<p>PD 20W Modo de carga rápida</p> <p>Serie 14/13/12/11/X/XR/8</p>
<p>VOOC 22.5W Modo de carga rápida</p> <p>Serie OPPO Find /Reno</p>	<p>Carga lenta Modo de carga</p> <p>chaleco/chaqueta/guantes/ gorro térmicos</p>	

Image: A compatibility chart for the Veger Power Bank, indicating support for iPhone, Android smartphones, tablets, and even heated clothing.

2.3 Port Layout

The power bank features multiple ports for versatile charging:

- **Micro-USB Input:** 18W for recharging the power bank.
- **USB-C Port:** 20W Output / 18W Input for charging devices and recharging the power bank.
- **USB-A Output 1:** 22.5W for fast charging devices.
- **USB-A Output 2:** 22.5W for fast charging devices.



Image: A detailed diagram illustrating the various input and output ports on the VEGER Power Bank, including their power specifications.

3. SETUP

3.1 Initial Charging

Before first use, fully charge your VEGER Portable Power Bank. This ensures the battery is calibrated and ready for optimal performance.

1. Connect the provided USB charging cable to the Micro-USB input port or the USB-C input port on the power bank.
2. Connect the other end of the cable to a USB wall charger (not included).
3. The LED display will show the charging progress. The power bank is fully charged when the display shows 100%.

4. OPERATING INSTRUCTIONS

4.1 Charging the Power Bank

To recharge your power bank:

1. Use a compatible USB cable to connect the power bank's Micro-USB or USB-C input port to a power source (e.g., wall adapter, computer USB port).
2. The LED display will illuminate and show the current charge level, increasing as it charges.
3. Once the display shows 100%, the power bank is fully charged. Disconnect it from the power source.

VEGER 20000mAh Mini

22.5W Max Carga Rápida

22.5W **20W** **18W**
USB A USB C OUT USB C IN

20000mAh **LED** 
Capacidad Pantalla Mini



Image: The VEGER Power Bank connected for recharging, illustrating the Micro-USB input and the LED display indicating a full charge.

4.2 Charging Your Devices

To charge your smartphone, tablet, or other compatible devices:

1. Connect your device's charging cable to one of the power bank's output ports (USB-A or USB-C).
2. Connect the other end of the cable to your device.
3. The power bank will automatically begin charging your device. The LED display will show the remaining battery percentage.
4. You can charge up to three devices simultaneously using the available output ports.



Image: The VEGER Power Bank connected to and simultaneously charging a smartphone, a tablet, and a pair of wireless earbuds.

4 veces más rápido que un cargador normal



VEGER **22.5W** Carga Rápida



Otros **5V 2A / 1.5A**



Image: A smartphone being charged by the VEGER 22.5W Power Bank, highlighting its 4x faster charging speed compared to conventional chargers.

4.3 LED Display Indicator

The integrated LED display shows the remaining battery percentage of the power bank. This allows you to monitor the charge level accurately and know when to recharge the power bank.

5. MAINTENANCE

- Keep the power bank away from water, fire, and extreme temperatures.
- Avoid dropping or subjecting the power bank to strong impacts.

- Clean the power bank with a dry, soft cloth. Do not use corrosive cleaners.
- Store the power bank in a cool, dry place when not in use for extended periods.
- Recharge the power bank at least once every three months to maintain battery health.

6. TROUBLESHOOTING

- **Power bank not charging:**

Ensure the charging cable is securely connected to both the power bank and the power source. Try a different cable or wall adapter.

- **Device not charging from power bank:**

Ensure the cable connecting your device to the power bank is secure. Try a different cable or a different output port on the power bank. Check if the power bank has sufficient charge.

- **Slow charging:**

Ensure you are using a fast-charging compatible cable and your device supports fast charging. Some cables or devices may only support standard charging speeds.

- **LED display not working:**

If the power bank is completely depleted, the display may not light up immediately. Charge the power bank for a few minutes and check again. If the issue persists, contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	VEGER
Model	20000mAh Portable Power Bank
Battery Capacity	20000mAh
Battery Cell Composition	Lithium Polymer
USB-C Input	18W
Micro-USB Input	18W
USB-C Output	20W
USB-A Output (x2)	22.5W Max per port
Number of Ports	3 (1x USB-C, 2x USB-A)
Compatible Devices	Smartphones, Tablets, Wearables, etc.
Product Dimensions	10.2L x 2.8W x 7Thickness cm
Battery Weight	302 Grams
Color	Black

8. SAFETY INFORMATION

Please adhere to the following safety guidelines to prevent damage to the product or injury to yourself:

- Do not disassemble, modify, or repair the device.
- Do not expose the power bank to extreme temperatures (above 60°C/140°F or below 0°C/32°F), direct sunlight, or high humidity.
- Avoid dropping or strong impacts.
- Keep out of reach of children.
- Do not use if the power bank is damaged, swollen, or leaking.
- Dispose of the power bank responsibly according to local regulations.

For detailed safety information, please refer to the official safety document: [Safety Information \(PDF\)](#)

9. WARRANTY AND SUPPORT

VEGER products come with a standard manufacturer's warranty. For warranty claims or technical support, please contact your retailer or visit the official VEGER website.

Please retain your proof of purchase for warranty purposes.