

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Garvee](#) /

› [Garvee 50-Inch Electric Fireplace Heater User Manual \(Model Fvedh90yN5tB7mIKisE0CwQlx8bO\)](#)

Garvee Fvedh90yN5tB7mIKisE0CwQlx8bO

Garvee 50-Inch Electric Fireplace Heater User Manual

Model: Fvedh90yN5tB7mIKisE0CwQlx8bO

Brand: Garvee

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your Garvee 50-inch Electric Fireplace Heater. This unit is designed for both recessed and wall-mounted installations, offering adjustable flame colors, speeds, and brightness, along with dual control options via WiFi and remote. It provides effective heating for areas up to 400 square feet.

2. SAFETY INFORMATION

- Always ensure the fireplace is properly grounded.
- Do not operate the fireplace with a damaged cord or plug.
- Keep combustible materials at least 3 feet (0.9 meters) away from the front of the fireplace.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fireplace.
- The glass panel remains cool to the touch during operation, enhancing safety, especially around children and pets.
- The unit features an automatic thermal cut-off to prevent overheating, ensuring safe operation.
- This appliance is for indoor use only.

3. PACKAGE CONTENTS

Verify that all components are present before installation:

- Garvee 50-Inch Electric Fireplace Heater
- Remote Control
- Crystal Media
- Carbon Log Rocks
- Mounting Hardware (screws, anchors, brackets)
- User Manual

4. INSTALLATION

The Garvee 50-inch Electric Fireplace Heater supports both recessed and wall-mounted installations.

4.1 Wall-Mounted Installation

1. **Choose Location:** Select a suitable wall location, ensuring it is away from curtains, furniture, and high-traffic areas. Ensure there is a power outlet nearby.
2. **Marking:** Use a measuring tape and pencil to mark the desired height and width for the fireplace on the wall. Ensure the marks are level.
3. **Secure Mounting Brackets:** Attach the provided mounting brackets to the back of the fireplace unit using the included screws.
4. **Install Wall Bracket:** Secure the wall mounting bracket to the wall studs using appropriate screws. If studs are not available, use wall anchors.
5. **Mount Fireplace:** Carefully lift the fireplace and hook it onto the wall mounting bracket. Ensure it is securely seated.
6. **Connect Power:** Plug the fireplace into a standard 120V outlet.



Figure 1: Installation modes and dimensions. The fireplace measures 4.6 inches deep, 50 inches wide, and 18 inches high. It can be

recessed into a wall opening or wall-mounted.

4.2 Recessed Installation

1. **Prepare Opening:** Create a wall opening with precise dimensions to accommodate the fireplace. Refer to the product specifications for exact measurements (e.g., 50 inches wide, 18 inches high, 4.6 inches deep). Ensure the opening is structurally sound.
2. **Power Access:** Ensure a power outlet is available within the recessed area or can be routed to it safely.
3. **Insert Fireplace:** Carefully slide the fireplace unit into the prepared opening.
4. **Secure Unit:** Secure the fireplace to the wall framing using the provided screws through the designated mounting points on the unit.
5. **Connect Power:** Plug the fireplace into the power outlet.

4.3 Media Placement

After installation, carefully place the decorative crystal media or carbon log rocks into the designated media tray at the bottom of the fireplace. Arrange them to your preference for optimal visual effect.



Figure 2: Product details including crystal media, air vents, touch screen controls, and power plug.

5. OPERATING INSTRUCTIONS

Your Garvee Electric Fireplace can be controlled via the touch panel on the unit, the included remote control, or a WiFi-enabled app.

5.1 Touch Panel Controls

The touch panel is located on the front of the fireplace. Functions typically include:

- **Power Button:** Turns the unit ON/OFF.
- **Flame Color Button:** Cycles through 12 flame and LED color modes.
- **Dimmer Button:** Adjusts flame brightness (5 levels).
- **Heater Button:** Activates the heater (750W/1500W) and adjusts temperature.
- **Timer Button:** Sets the automatic shut-off timer (1-8 hours).



Figure 3: Touch panel controls and remote control for the fireplace.

5.2 Remote Control Operation

The remote control provides convenient access to all functions from a distance. Point the remote directly at the fireplace's

receiver. Functions mirror those on the touch panel, including power, flame color, brightness, heat settings, and timer.

5.3 WiFi App Control

For advanced control, download the dedicated Garvee app on your smartphone. Follow the in-app instructions to connect your fireplace to your home WiFi network. The app allows for seamless adjustment of all settings, including flame colors, speeds, brightness, heating modes, and timer functions. It may also offer additional features like scheduling and voice control integration (e.g., with Alexa).

5.4 Flame and Heating Features

- **Flame Colors:** Choose from 12 distinct flame and LED color modes to match your ambiance. An automatic mode cycles through colors.
- **Flame Speed:** Adjust the flame speed to 5 different levels for a dynamic or subtle effect.
- **Brightness:** Select from 5 brightness levels for the flame and ember bed.
- **Heating Modes:** The heater offers 750W and 1500W settings, capable of warming rooms up to 400 square feet.
- **Low Noise Operation:** The fireplace operates at less than 50 dB, ensuring a quiet environment.
- **Timer:** Set the timer for automatic shut-off between 1 and 8 hours.

Less than 50 dB

providing warmth while keeping
the room quiet



12-color Flame



12-color Bed Flame
Remote Control (50ft.)



750W/ 1500W



Sleep Model Timer
1-8 Hours

Figure 4: Visual representation of the 12 flame and carbon bed color options.



Figure 5: The electric fireplace installed, showcasing its sleek design and realistic flame effect.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your electric fireplace.

- **Cleaning:** Ensure the unit is turned OFF and unplugged before cleaning. Use a soft, damp cloth to clean the exterior surfaces. Do not use abrasive cleaners or sprays.
- **Glass Panel:** Clean the glass panel with a soft, lint-free cloth and a non-abrasive glass cleaner.
- **Air Vents:** Periodically check and clean the air inlet and outlet vents to ensure they are free from dust and debris, which can obstruct airflow and reduce heating efficiency. Use a vacuum cleaner with a brush attachment if necessary.
- **Storage:** If storing the fireplace for an extended period, unplug it and cover it to protect it from dust.

7. TROUBLESHOOTING

If you encounter issues with your fireplace, refer to the following common solutions:

Problem	Possible Cause	Solution
No power/Unit does not turn on	Power cord unplugged, circuit breaker tripped, power outlet malfunction.	Check power cord connection. Reset circuit breaker. Test outlet with another device.
Heater not producing heat	Heater function not activated, temperature setting too low, air vents blocked, thermal cut-off activated.	Ensure heater is ON and set to desired temperature. Clear any obstructions from air vents. Allow unit to cool down if thermal cut-off engaged.
Flames not visible or flickering incorrectly	Flame effect OFF, brightness too low, LED malfunction.	Ensure flame effect is ON. Adjust brightness levels. If issue persists, contact customer support.
Remote control not working	Dead batteries, remote not pointed correctly, obstruction between remote and unit.	Replace batteries. Ensure clear line of sight to the fireplace.
WiFi app not connecting	Incorrect WiFi password, weak signal, app not updated.	Verify WiFi credentials. Ensure strong WiFi signal. Update app to the latest version. Restart router and fireplace.

If these solutions do not resolve the issue, please contact Garvee customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Garvee
Model Name	Fvedh90yN5tB7mIKisE0CwQlx8bO
Product Dimensions (D x W x H)	4.6"D x 50"W x 18"H (Unit dimensions, not shipping)
Material	Glass
Installation Type	Wall Mount, Recessed
Power Source	Corded Electric
Heat Output	750W / 1500W (5120 BTU)
Heating Coverage	Up to 400 sq ft
Flame Colors	12 modes
Flame Speeds	5 levels
Brightness Levels	5 levels
Noise Level	Less than 50 dB
Timer	1-8 hours
Control Options	WiFi App, Remote Control, Touch Panel
Included Components	Log Rocks, Crystal Media

Feature	Detail
Item Weight	53.6 Pounds
UPC	199641818713

9. WARRANTY AND SUPPORT

Garvee offers comprehensive support for your electric fireplace:

- **Email Support:** Expect a response within 12 hours.
- **Return Policy:** 30-day easy returns.
- **Maintenance & Technical Support:** 12 months of free maintenance and technology support.

For further assistance, please refer to the contact information provided with your product packaging or visit the official Garvee website.

10. OFFICIAL PRODUCT VIDEO

Video 1: Overview of Wall Mounted Electric Fireplaces by Garvee Direct. This video demonstrates the aesthetic and installation flexibility of Garvee electric fireplaces.