

ECONTROLLY RM-C3295

ECONTROLLY RM-C3295 Replacement Remote Control User Manual

Model: RM-C3295

INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY RM-C3295 replacement remote control, designed for compatibility with JVC 4K Smart Voice TVs. Please read this manual carefully before using the remote control to ensure proper operation and to maximize its functionality.

PACKAGE CONTENTS

- 1 x ECONTROLLY RM-C3295 Remote Control

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA 1.5V alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery cover by sliding it upwards until it clicks into place.





Figure 1: Battery compartment with batteries inserted. Ensure correct polarity.

2. Initial Pairing (If Required)

This remote control is designed as a direct replacement and typically requires no programming or complex setup. Simply

install new alkaline batteries, and it should function immediately with compatible JVC 4K Smart Voice TVs.

If the remote does not respond, ensure your TV is powered on and try pressing any button. For voice control functionality, your TV may require an initial pairing process for Bluetooth devices. Refer to your JVC TV's user manual for specific Bluetooth pairing instructions if voice commands are not working.

OPERATING INSTRUCTIONS

The RM-C3295 remote control features a standard layout for easy navigation and control of your JVC 4K Smart Voice TV. Below is a general overview of the buttons and their functions.



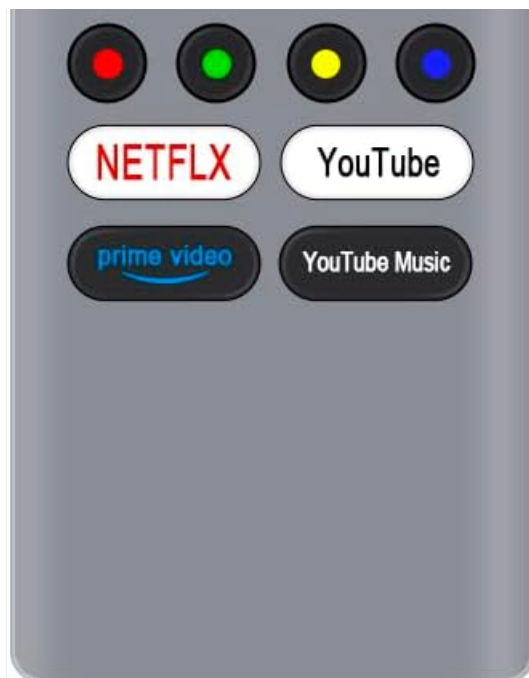


Figure 2: Front view of the RM-C3295 Remote Control.

Button Functions

Button	Function
Power (Red)	Turns the TV on or off.
Numbers (0-9)	Direct channel selection.
Input (Square with arrow)	Selects video input sources (HDMI, AV, etc.).
Back (Left arrow)	Returns to the previous screen or menu.
Home (House icon)	Accesses the TV's main home screen or smart hub.
Settings (Gear icon)	Opens the TV's settings menu.
Voice Control (Microphone icon)	Activates the voice assistant for commands and search.
Navigation Pad (Up, Down, Left, Right, OK)	Navigates through menus and confirms selections.
Volume (+/-)	Adjusts the TV volume up or down.
Mute (Speaker with X)	Mutes or unmutes the TV audio.
Channel (Up/Down arrows)	Changes TV channels up or down.
Netflix, YouTube, Prime Video, YouTube Music	Direct access buttons for streaming applications.
Media Controls (Rewind, Play/Pause, Fast Forward)	Controls playback of media content.
Info (i icon)	Displays program information.
Colored Buttons (Red, Green, Yellow, Blue)	Functions vary depending on the TV menu or application.

Using Voice Control

To use the voice control feature, press and hold the **Voice Control (Microphone icon)** button. Speak clearly into the remote control. Release the button when you have finished your command. Ensure your TV's voice assistant feature is

enabled and properly configured.



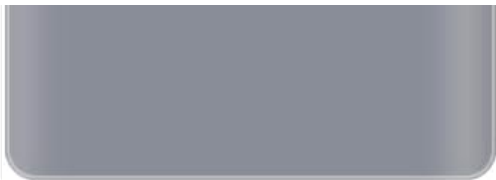


Figure 3: Voice Control button for activating the TV's voice assistant.

MAINTENANCE

Cleaning the Remote Control

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote control's responsiveness decreases or stops functioning. Always replace both batteries at the same time with new AAA 1.5V alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Dispose of used batteries according to local regulations.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Point the remote directly at the TV.
- **Voice control not working:**
 - Ensure the remote's batteries are fresh.
 - Verify that the voice assistant feature is enabled on your JVC TV.
 - If your TV requires Bluetooth pairing for voice control, follow your TV's manual to pair the remote.
 - Speak clearly and hold the voice control button while speaking.
- **Buttons are sticky or unresponsive:**
 - Clean the remote control as described in the Maintenance section.
 - Avoid spilling liquids on the remote.

SPECIFICATIONS

Feature	Detail
Model Number	RM-C3295
Brand	ECONTROLLY
Compatible Devices	JVC 4K Smart Voice TVs

Feature	Detail
Material	ABS Environmental Protection Material
Transmitting Distance	Approximately 10 meters (33 feet)
Power Source	2 x AAA 1.5V Alkaline Batteries (not included)
Product Dimensions	5 x 1 x 0.25 inches (approx. 12.7 x 2.54 x 0.64 cm)
Item Weight	2 ounces (approx. 56.7 grams)





Figure 4: Dimensions of the RM-C3295 Remote Control.

WARRANTY AND SUPPORT

For any issues or questions regarding your ECONTROLLY RM-C3295 remote control, please contact the seller or refer to the product listing for support information. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FKBKHHGGY>

More documents and user manuals: <https://manuals.plus/>