

LEMEGA MSY6

LEMEGA MSY6 Stereo System User Manual

Model: MSY6

INTRODUCTION

This user manual provides comprehensive instructions for the operation and maintenance of your LEMEGA MSY6 Stereo System. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your listening experience. The MSY6 combines a CD player, FM radio, Bluetooth audio streaming, USB player, and Aux-in capabilities, along with alarm and clock functions, all housed in an acoustic wood cabinet.

WHAT'S IN THE BOX

- 1 x LEMEGA MSY6 CD Player FM Radio
- 1 x Remote Control
- 1 x Mains Power Adapter
- 1 x User Manual

PRODUCT OVERVIEW



Figure 1: LEMEGA MSY6 Stereo System and Remote Control. The main unit features a central display, CD slot, and control buttons, flanked by speaker grilles. The remote control provides full functionality from a distance.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain the packaging for future transport or storage.
2. **Placement:** Place the MSY6 on a stable, flat surface, away from direct sunlight, heat sources, and excessive moisture. Ensure adequate ventilation around the unit.
3. **Power Connection:** Connect the supplied mains power adapter to the DC IN port on the rear of the MSY6. Plug the adapter into a suitable wall outlet.
4. **Antenna (FM):** Extend the FM antenna fully for optimal radio reception. Adjust its position if reception is poor.
5. **Initial Power On:** Press the Power button on the unit or remote control to turn on the system. The display will illuminate.

OPERATING INSTRUCTIONS

Basic Operation

- **Power On/Off:** Press the **Power** button.
- **Volume Control:** Rotate the **Volume Knob** on the unit or use the **VOL +/-** buttons on the remote.
- **Source Selection:** Press the **MODE** or **SRC** button to cycle through CD, FM, Bluetooth, USB, and Aux-in modes.
- **Mute:** Press the **MUTE** button on the remote control.

CD Player Operation

1. **Insert CD:** Gently insert a CD into the CD slot with the label side facing up. The system will automatically switch to CD mode and begin playback.
2. **Play/Pause:** Press the **Play/Pause** button.
3. **Skip Tracks:** Press the **Next/Previous Track** buttons (/).
4. **Fast Forward/Rewind:** Press and hold the **Next/Previous Track** buttons.
5. **Stop:** Press the **Stop** button.

FM Radio Operation

1. **Select FM Mode:** Press the **MODE** or **SRC** button until FM mode is selected.
2. **Auto Scan:** Press and hold the **Play/Pause** button to automatically scan and save available FM stations.
3. **Manual Tuning:** Use the **Next/Previous Track** buttons to fine-tune the frequency.
4. **Saving Presets:**
 - Tune to the desired station.
 - Press and hold the **PROG** button (or similar preset button).
 - Use the **Next/Previous Track** buttons to select a preset number (1-20).
 - Press **OK** or **PROG** again to confirm.
5. **Recalling Presets:** Press the preset number buttons (1-9) on the remote or use the **PROG** button to cycle through saved stations.

Bluetooth Operation

1. **Select Bluetooth Mode:** Press the **MODE** or **SRC** button until "Bluetooth" is displayed. The system will enter pairing mode.
2. **Pairing a Device:**
 - On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth.
 - Search for available devices. "LEMEGA MSY6" should appear in the list.
 - Select "LEMEGA MSY6" to pair. Once connected, the display will indicate a successful connection.
3. **Bluetooth Headphone Connection (Exclusive to LEMEGA):**
 - Ensure your Bluetooth headphones are in pairing mode.
 - On the MSY6, navigate to the Bluetooth menu (refer to the display for specific menu options).
 - Initiate a search for Bluetooth headphones.
 - Select your headphones from the list to connect. Note: Headphones must support simple pairing or automatic handshake.
4. **Playback Control:** Use the MSY6's controls or your connected device to play, pause, skip tracks, and adjust volume.

USB & Aux-in Operation

- **USB Playback:** Insert a USB flash drive into the USB port. The system will automatically switch to USB mode and begin playing compatible audio files (e.g., MP3). Use the playback controls as with CD mode.
- **Aux-in:** Connect an external audio device (e.g., MP3 player, smartphone) to the AUX IN port using a 3.5mm audio cable (not supplied). Select AUX mode using the **MODE** or **SRC** button. Control playback from your external device.

Alarms, Clock & Sleep Timer

- **Setting Clock:** Access the system settings menu (usually via **MENU** or **INFO** button) to set the time and date.
- **Dual Alarms:** The MSY6 supports two independent alarms.
 - Navigate to the Alarm settings in the menu.
 - Set the alarm time, source (FM radio or buzzer), and frequency (daily, weekdays, weekends).
 - Adjust alarm volume.
- **Sleep Timer:** Press the **SLEEP** button on the remote control repeatedly to cycle through sleep timer durations (e.g., 15, 30, 60, 90 minutes, OFF). The system will automatically turn off after the selected time.

Display & EQ Settings

- **Color Display:** The 2.4" full-color display shows radio station information, track details, and system settings.
- **Equalizer (EQ):** Access the EQ settings via the menu to customize the audio output. Choose from preset EQ modes or manually adjust bass and treble levels to suit your preference for music or speech.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners, waxes, or solvents.
- **CD Care:** Handle CDs by their edges. Clean dirty CDs with a soft, lint-free cloth, wiping from the center outwards.
- **Ventilation:** Ensure the ventilation openings are not blocked to prevent overheating.
- **Storage:** If storing the unit for an extended period, disconnect it from the power outlet and store it in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected; Power outlet faulty.	Ensure power adapter is securely connected and plugged into a working outlet.
No sound	Volume too low; Mute activated; Incorrect source selected.	Increase volume; Deactivate mute; Select correct audio source (CD, FM, BT, USB, AUX).
Poor FM reception	Antenna not extended or positioned correctly.	Fully extend and adjust the position of the FM antenna. Try relocating the unit.
Bluetooth pairing failure	Device too far; Bluetooth not enabled on device; MSY6 not in pairing mode.	Ensure devices are within range; Enable Bluetooth on your device; Put MSY6 into Bluetooth pairing mode.
CD skipping or not playing	CD is dirty or scratched; CD inserted incorrectly.	Clean the CD; Ensure CD is inserted label side up. Try a different CD.

SPECIFICATIONS

Feature	Detail
Product Dimensions (L x W x H)	14 x 8 x 5.5 inches
Item Weight	8 pounds
Model Number	MSY6
Brand	LEMEGA
Connectivity Technology	Auxiliary, Bluetooth, Infrared, USB
Color	Black Oak
Speaker Type	Stereo
Output Power	100W
Display	2.4" Full Color Display




WARRANTY AND SUPPORT




LEMEGA products are designed and manufactured to the highest quality standards. For information regarding warranty coverage and customer support, please refer to the warranty card included with your product or visit the official LEMEGA website. You may also contact LEMEGA customer service directly for assistance with product registration, troubleshooting, or service inquiries.

LEMEGA US Seller: [LEMEGA US](#)


© 2025 LEMEGA. All rights reserved.

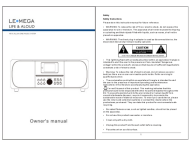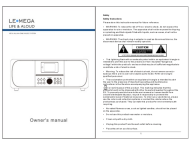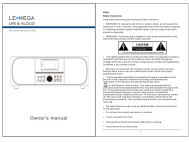Related Documents - MSY6

	<p>LEMEGA MSY6 All-in-One Music System Owner's Manual</p> <p>This owner's manual provides comprehensive instructions for the LEMEGA MSY6 All-in-One Music System, covering safety, setup, operation of FM, DAB, CD, Bluetooth, and USB playback, as well as troubleshooting and technical specifications.</p>
	<p>LEMEGA MSY6 All-in-One Music System Owner's Manual</p> <p>Comprehensive owner's manual for the LEMEGA MSY6 All-in-One Music System, covering safety instructions, features, operation, troubleshooting, and technical specifications.</p>
	<p>LEMEGA MSY6 All-in-One Music System Owner's Manual</p> <p>Comprehensive owner's manual for the LEMega MSY6 All-in-One Music System, covering safety instructions, setup, operation of CD, DAB, FM, Bluetooth, USB playback, and technical specifications.</p>

	LEMEGA M5P Music System User Manual - CD, DAB, Internet Radio, Bluetooth Comprehensive user manual for the LEMEGA M5P Music System. Learn how to set up, operate, and troubleshoot your CD player, DAB radio, internet radio, Bluetooth streamer, and more. Includes safety instructions, control descriptions, connectivity options, and technical specifications.
	LEMEGA M5+ Smart Audio System User Manual Comprehensive user manual for the LEMEGA M5+ Smart Audio System, covering setup, features, operation of Internet radio, DAB, FM, Spotify Connect, Bluetooth, CD playback, alarms, troubleshooting, and technical specifications.
	LEMEGA M3P Internet Radio: Storing and Recalling Presets Instructions on how to store and recall radio station presets on the LEMEGA M3P Internet Radio. Includes contact information for support.

 
Documents - LEMEGA – MSY6

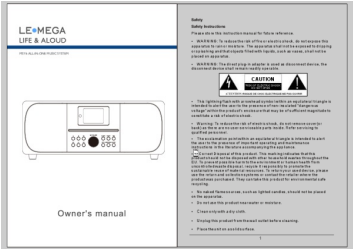

[LEMEGA MSY6 All-in-One Music System Owner's Manual](#)

Comprehensive owner's manual for the LEMEGA MSY6 All-in-One Music System, covering safety instructions, features, operation, troubleshooting, and technical specifications.

 
lang:en score:45 filesize: 3.52 M page_count: 8 document date: 2024-08-28

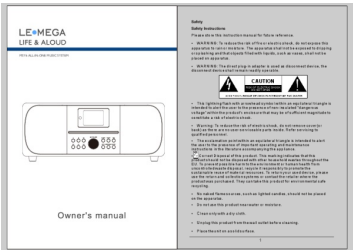

[LEMEGA MSY6 All-in-One Music System Owner's Manual](#)

This owner's manual provides comprehensive instructions for the LEMEGA MSY6 All-in-One Music System, covering safety, setup, operation of FM, DAB, CD, Bluetooth, and USB playback, as well as troubleshooting and technical specifications.

 lang:en score:42 filesize: 3.52 M page_count: 8 document date: 2024-08-28

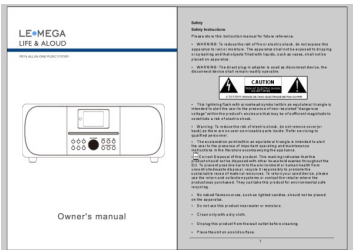

[LEMEGA MSY6 All-in-One Music System Owner's Manual](#)

Comprehensive owner's manual for the LEMega MSY6 All-in-One Music System, covering safety instructions, setup, operation of CD, DAB, FM, Bluetooth, USB playback, and technical specifications.

lang:en score:32 filesize: 3.79 M page_count: 8 document date: 2024-09-25