

[Manuals.plus](#) /

› [WSTER](#) /

› WSTER WS-1966 Retro Sedan Bluetooth Speaker Instruction Manual

WSTER WS-1966

WSTER WS-1966 Retro Sedan Bluetooth Speaker Instruction Manual

Model: WS-1966 | Brand: WSTER

1. INTRODUCTION

Thank you for purchasing the WSTER WS-1966 Retro Sedan Bluetooth Speaker. This manual provides detailed instructions for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure optimal performance and longevity of your speaker.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- WSTER WS-1966 Retro Sedan Bluetooth Speaker
- Power Cable (Type-C)
- Quick Start Guide



Image: The WSTER WS-1966 Retro Sedan Bluetooth Speaker shown with its included power cable and quick start guide.

3. PRODUCT OVERVIEW

The WSTER WS-1966 is a portable Bluetooth speaker designed in the style of a retro sedan. It features various control buttons and ports for versatile functionality.

Controls and Ports



Image: Rear view of the speaker highlighting the control panel and various input ports.

- **M/**: Mode/Power Button (Short press to change mode, long press to power on/off)
- **⏮**: Play/Pause/Answer Call Button
- **⏮**: Previous Track/Volume Down (Short press for previous track, long press for volume down)
- **⏭**: Next Track/Volume Up (Short press for next track, long press for volume up)
- **DC5V/ANT**: Type-C Charging Port / FM Antenna Input
- **USB**: USB Playback Port
- **TF**: TF Card Slot
- **AUX**: Auxiliary Input Port

4. SETUP AND BASIC OPERATION

Charging the Speaker

Before first use, fully charge the speaker. Connect the provided Type-C cable to the DC5V/ANT port on the speaker and the other end to a USB power adapter (not included). The LED indicator will show charging status.

Power On/Off

- **To Power On**: Press and hold the **M/** button until the display lights up and you hear a power-on prompt.
- **To Power Off**: Press and hold the **M/** button until the display turns off and you hear a power-off prompt.

Mode Switching

Short press the **M/** button to cycle through available modes: Bluetooth, FM Radio, USB, TF Card, and AUX.

Your browser does not support the video tag.

Video: A demonstration of the speaker's basic operations, including power on/off and mode switching.

5. OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Power on the speaker. It will automatically enter Bluetooth mode (indicated by a 'BLUE' prompt on the display).
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select 'WS-1966' from the list to connect. A confirmation tone will sound upon successful pairing.

BLUETOOTH CONNECTION ENJOY THE CONVENIENCE

Retro-styled Bluetooth
speaker for cars



Image: The WSTER WS-1966 speaker displaying 'BLUE' mode, indicating it is ready for Bluetooth connection with a smartphone.


True Wireless Stereo (TWS) Pairing

To achieve a stereo sound experience, you can pair two WS-1966 speakers together:

1. Ensure both speakers are powered on and in Bluetooth mode, but not connected to any device.
2. On one of the speakers, double-press the **⏮** (Play/Pause) button. You will hear a prompt indicating TWS pairing mode.
3. The two speakers will automatically connect to each other. A confirmation tone will sound once paired.
4. Connect your mobile device to one of the paired speakers via Bluetooth as described above. Both speakers will now play audio in stereo.

TWS Seamless Connection

Two devices can be connected simultaneously

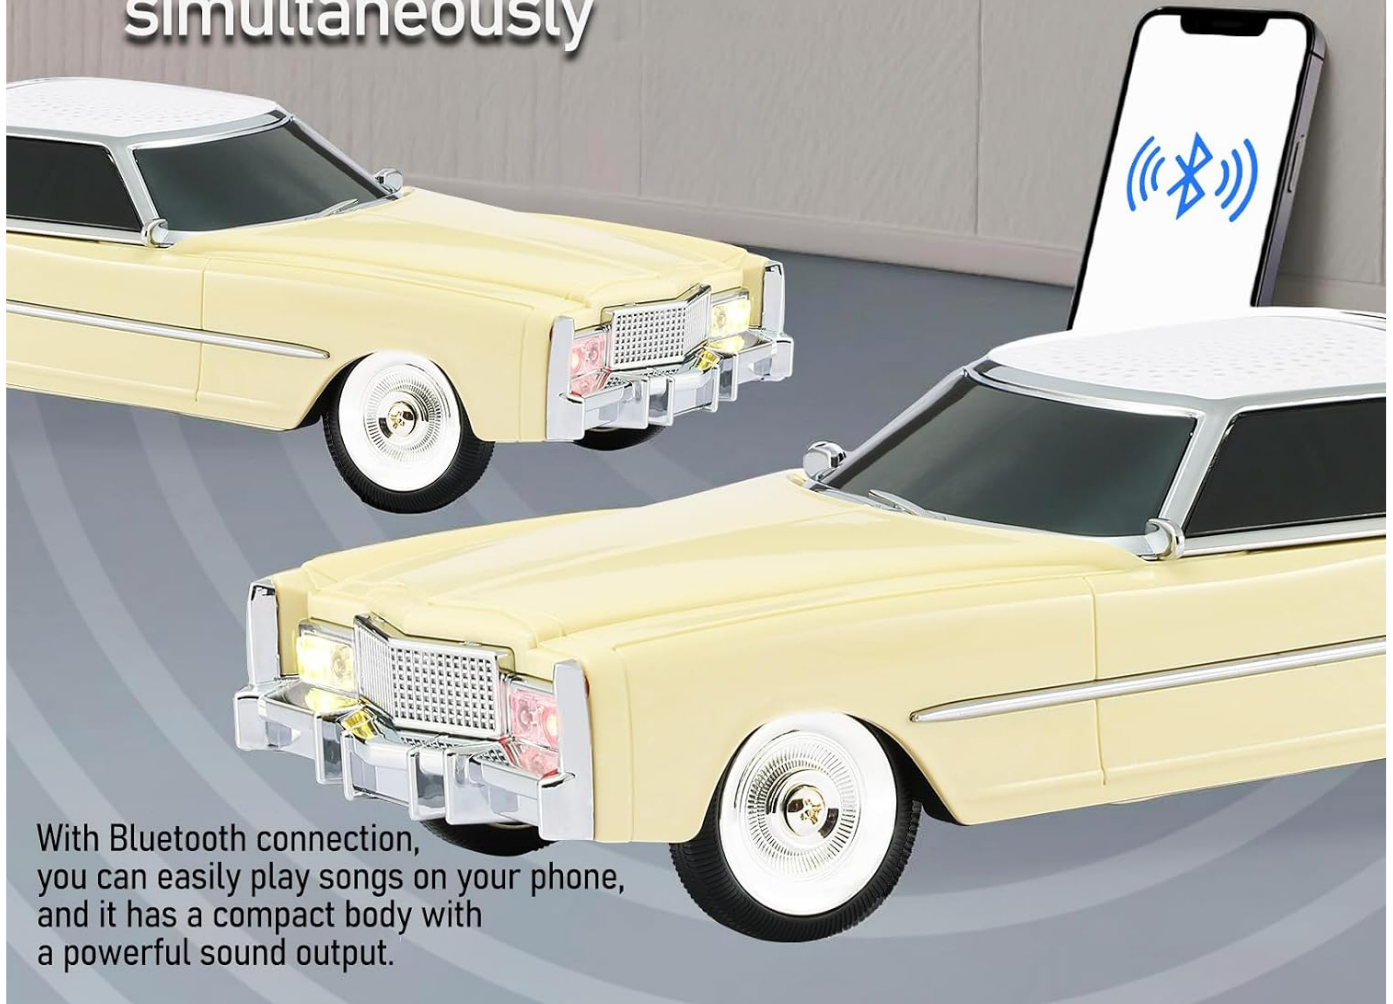

With Bluetooth connection, you can easily play songs on your phone, and it has a compact body with a powerful sound output.

Image: Two WSTER WS-1966 speakers shown side-by-side, illustrating their ability to connect for a True Wireless Stereo experience.

FM Radio Operation

1. Switch the speaker to FM Radio mode by short pressing the **M/⏮** button.
2. For better reception, connect the Type-C cable to the DC5V/ANT port; it acts as an external antenna.
3. Long press the **⏮** (Play/Pause) button to automatically scan and save available FM stations.
4. Short press the **⏮** (Previous Track) or **⏭** (Next Track) buttons to navigate through saved stations.

USB/TF Card Playback

1. Insert a USB drive or TF card (with audio files) into the respective port.
2. The speaker will automatically switch to USB or TF Card mode and begin playing audio.
3. Use the **⏮** (Previous Track) and **⏭** (Next Track) buttons for track control, and the **⏮** (Play/Pause) button for playback control.

Call Function

When connected to a smartphone via Bluetooth:

- **Answer Call:** Short press the **⏮** (Play/Pause) button when an incoming call rings.

- **End Call:** Short press the **%** (Play/Pause) button during a call to hang up.
- **Reject Call:** Long press the **%** (Play/Pause) button when an incoming call rings.
- The built-in microphone allows for hands-free communication.

6. MAINTENANCE

To ensure the longevity and performance of your WSTER WS-1966 speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Avoid using abrasive cleaners, solvents, or strong chemicals, as these may damage the finish.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Exposure:** This speaker is not waterproof. Avoid exposing it to water, rain, or excessive moisture.
- **Handling:** Handle the speaker with care to prevent physical damage. Avoid dropping it or subjecting it to strong impacts.

7. TROUBLESHOOTING

If you encounter issues with your speaker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery or no charge.	Charge the speaker fully using the provided Type-C cable.
Cannot pair via Bluetooth.	Speaker is not in pairing mode or already connected to another device.	Ensure the speaker is in Bluetooth mode and not connected. Turn off Bluetooth on other nearby devices. Restart both the speaker and your mobile device.
No sound or low volume.	Volume too low on speaker or connected device; incorrect mode.	Increase volume on both the speaker and your device. Ensure the correct playback mode is selected.
FM radio reception is poor.	Weak signal.	Connect the Type-C cable to the DC5V/ANT port to use it as an external antenna. Try repositioning the speaker.

8. SPECIFICATIONS

Feature	Detail
Model Name	WS-1966
Brand	WSTER
Speaker Type	Portable Speaker
Connectivity Technology	Bluetooth
Bluetooth Version	5.4
Audio Output Mode	Stereo
Speaker Maximum Output Power	10 Watts
Frequency Response	18 KHz
Special Features	Built-in Microphone, LED Light, Lightweight, Portable, USB Port, TF Card Slot, FM Radio, TWS Pairing
Material	Polycarbonate (PC)
Product Dimensions	11.06"D x 3.23"W x 4.33"H
Item Weight	545 Grams (1.2 pounds)
Batteries	2 Nonstandard Battery batteries required (included)

9. WARRANTY AND SUPPORT

WSTER products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official WSTER website. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question