



[Manuals.plus](#) /

› [HARPPA](#) /

› HARPPA Electric Baby Swing User Manual (Model B0FKFMW89G)

HARPPA B0FKFMW89G

HARPPA Electric Baby Swing User Manual

Model: B0FKFMW89G

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembling and using the HARPPA Electric Baby Swing. Failure to follow these instructions could result in serious injury or death. Keep this manual for future reference.

- **Maximum Weight:** This swing is designed for infants up to 19.84 pounds (approximately 0-6 months). Do not use for children exceeding this weight.
- Always use the 5-point safety harness to secure your child in the swing. Ensure straps are snug but comfortable.
- Never leave your child unattended in the swing. Constant supervision is required.
- Do not use the swing if any parts are damaged, broken, or missing. Contact customer service for replacement parts.
- Ensure the swing is placed on a flat, stable, and level surface away from stairs, heat sources, and electrical cords.
- Keep children and pets away from the swing during assembly and disassembly to prevent injury.
- Discontinue use if the child attempts to climb out, can sit up unassisted, or reaches the maximum weight limit of 19.84 pounds.
- Do not use the swing as a carrier.

PRODUCT OVERVIEW

The HARPPA Electric Baby Swing provides a soft, cozy, and secure spot for your baby during awake moments. It features multiple swing speeds, soothing melodies, and convenient controls for ease of use.



Figure 1: HARPPA Electric Baby Swing (Gray model)

SETUP AND ASSEMBLY

Follow these steps to assemble your HARPPA Electric Baby Swing. Refer to the assembly video for visual guidance.

Your browser does not support the video tag.

Video 1: How to Assemble the HARPPA Baby Swing in Minutes

This video demonstrates the step-by-step assembly process for the HARPPA Electric Baby Swing, including attaching the non-slip base, securing components, and installing the seat cushion support and toy bar.

Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify all components are present according to the packing list.
2. **Assemble the Base:** Connect the two curved base pieces to the central control unit, ensuring they click

securely into place. Use the provided screws to fix the base components for stability.


3. **Attach Seat Support Frame:** Connect the seat cushion support frame to the central control unit. Ensure it is firmly attached and locked into position.
4. **Install Seat Cushion:** Place the soft crystal velvet seat cushion onto the support frame. Secure it using the integrated fasteners (e.g., Velcro straps) as indicated in the manual.
5. **Attach Toy Bar:** Insert the adjustable toy bar into its designated slots on the side of the seat. Hang the two soft star-shaped plush toys from the toy bar.
6. **Connect Power:** Plug the DC adapter into the swing's power port (located on the central control unit) and then into a standard wall electrical outlet.

OPERATING INSTRUCTIONS

The HARPPA Electric Baby Swing can be operated using the IMD control panel on the base or the included remote control.

Control Panel and Remote Functions:

Remote Control & IMD Touch Panel

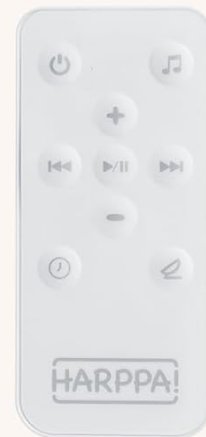

- 2 control modes for casual operation

Figure 2: Control Panel and Remote Control

- **Power On/Off:** Press the power button (O/I symbol) on the control panel or remote to turn the swing on or off.
- **Adjust Swing Speed:** Use the speed buttons (usually indicated by '+' and '-') to select one of the 5 adjustable swing speeds. The current speed level will be displayed.
- **Set Timer:** Press the timer button (clock symbol) to cycle through the available timer options: 8, 15, or 30 minutes. The swing will automatically stop after the selected time.
- **Play Melodies:** Use the music play/pause button (play symbol) to start or stop the built-in melodies.
- **Adjust Volume:** Use the volume buttons (speaker symbols) to increase or decrease the music volume.
- **Change Melody:** Use the next/previous track buttons (arrow symbols) to switch between the 10 built-in melodies.

Securing Your Baby with the 5-Point Harness:

5-Point Harness



Figure 3: Securing the 5-Point Harness

1. Place your baby gently in the center of the swing seat.
2. Bring the shoulder straps over your baby's shoulders and the waist straps around their waist.
3. Connect the shoulder straps to the waist straps, then insert both buckles into the central buckle until you hear a click, ensuring they are securely fastened.
4. Adjust the straps to ensure a snug but comfortable fit for your baby, preventing them from slipping out.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and hygiene of your baby swing.

Cleaning the Seat Fabric:



Figure 4: Detachable Seat Pad

- The soft crystal velvet seat fabric is machine-washable.
- To remove, unfasten all straps and attachments securing the fabric to the frame.
- Wash in cold water on a gentle cycle with mild detergent. Do not use bleach or harsh chemicals.
- Air dry completely before reattaching to the swing frame. Do not tumble dry.

Frame Cleaning:

- Wipe the frame, control panel, and toy bar with a damp cloth and mild soap.
- Do not immerse any electronic components in water.
- Ensure all parts are dry before reassembly or use.

TROUBLESHOOTING

If you encounter any issues with your HARPPA Electric Baby Swing, please refer to the following common solutions:

Problem	Possible Cause	Solution
Swing does not turn on.	Power adapter not connected or faulty electrical outlet.	Ensure the power adapter is securely plugged into the swing and a working electrical outlet. Try a different outlet.

Problem	Possible Cause	Solution
Swing motion is weak or inconsistent.	Baby's weight exceeds limit, obstruction, or low power.	Verify baby's weight is within the 19.84 lbs limit. Check for any obstructions preventing smooth movement. Ensure the power adapter is providing sufficient power.
Music not playing or volume too low.	Volume setting too low or music paused.	Increase volume using the control panel or remote. Ensure music is not paused.
Remote control not working.	Battery depleted or remote out of range.	Replace the remote control battery. Ensure you are within effective range of the swing.

SPECIFICATIONS

- **Brand:** HARPPA
- **Model:** B0FKFMW89G
- **Age Range:** Infant
- **Maximum Weight Recommendation:** 19.84 Pounds
- **Item Dimensions (D x W x H):** 27.5"D x 28"W x 24"H
- **Item Weight:** 6.8 Pounds
- **Material Type:** Aluminum, Plastic
- **Color:** Gray
- **Features:** 5 Adjustable Speeds, 5-Point Safety Harness, Timer Function (8, 15, 30 minutes), 10 Built-in Melodies, Adjustable Volume, IMD Control Panel, Remote Control, Detachable Toy Bar, Machine-washable Seat Fabric, Compact Design, Portable.

WARRANTY AND SUPPORT

For warranty information or product support, please contact HARPPA customer service. Refer to the product packaging or the official HARPPA website for contact details.

You can also visit the [HARPPA Store on Amazon](#) for more information and product registration.