

Dayllon 1163

Dayllon Kids Analog Digital Watch Model 1163 Instruction Manual

Your guide to setting up, operating, and maintaining your Dayllon Kids Watch.

1. PRODUCT OVERVIEW

The Dayllon Kids Analog Digital Watch Model 1163 is designed for children aged 5-15, offering both analog and digital time displays. This durable watch features multiple functions suitable for daily wear and various activities.



Image 1.1: Overview of watch functions including time, week, date, water resistance, stopwatch, alarm, EL light, and 12/24 hour format.

Key features include:

- Analog and Digital Time Display
- Date and Week Display
- Stopwatch Function
- Alarm Function
- EL Backlight for night visibility
- 50M Water Resistance (suitable for handwashing, rain, washing face, swimming; not for diving or hot water)

activities)

- Durable Silicone Band and Resin Case

2. WATCH COMPONENTS AND BUTTONS

Familiarize yourself with the watch's buttons and their functions.



Image 2.1: Diagram showing the watch's buttons: Light, Mode, Alarm, Date, Start/Stop, Reset, and Crown.

- **LIGHT Button:** Activates the EL backlight.
- **MODE Button:** Cycles through different modes (Time, Alarm, Stopwatch).
- **ALARM Button:** Used for setting and activating the alarm.
- **DATE Button:** Displays the current date.
- **START/STOP Button:** Used to start and stop the stopwatch, or adjust settings.
- **RESET Button:** Used to reset the stopwatch or confirm settings.
- **Crown:** Used to set the analog time.

3. INITIAL SETUP AND TIME SETTING

3.1 Setting Analog Time

1. Pull out the crown (small knob on the right side of the watch case).
2. Rotate the crown to move the analog hands to the correct time.
3. Push the crown back in to secure the analog time.

3.2 Setting Digital Time, Date, and Day

1. Press the **MODE** button repeatedly until the digital time display starts flashing, indicating it's in setting mode.

2. Use the **START/STOP** button to adjust the flashing value (e.g., hours, minutes).
3. Press the **RESET** button to move to the next setting item (e.g., minutes, month, date, day, 12/24 hour format).
4. Repeat steps 2 and 3 until all desired settings are adjusted.
5. Press the **MODE** button once more to exit the setting mode.

3.3 12/24 Hour Format

While in digital time setting mode, you can toggle between 12-hour and 24-hour (military) time formats using the **START/STOP** button when the hour setting is flashing.

4. OPERATING INSTRUCTIONS

4.1 Using the Backlight (EL Light)

To illuminate the digital display in low light conditions, press the **LIGHT** button. The backlight will remain on for a few seconds.



Image 4.1: The watch display with and without the EL backlight activated for night visibility.

4.2 Using the Stopwatch

1. Press the **MODE** button until "STOPWATCH" or "CHRONO" appears on the digital display.
2. Press the **START/STOP** button to begin timing.
3. Press the **START/STOP** button again to pause timing.
4. Press the **RESET** button to clear the stopwatch to zero.
5. Press the **MODE** button to return to the time display.

4.3 Setting and Using the Alarm

1. Press the **MODE** button until "ALARM" appears on the digital display.
2. Press the **START/STOP** button to select the hour or minute to set. The selected value will flash.
3. Use the **RESET** button to adjust the flashing value.
4. Press the **START/STOP** button again to move to the next setting (e.g., from hour to minute).
5. Once the alarm time is set, press the **MODE** button to exit.

6. To activate/deactivate the alarm, press the **ALARM** button while in the alarm display mode. An alarm icon will appear/disappear to indicate its status.
7. When the alarm sounds, press any button to stop it.

5. WATER RESISTANCE GUIDELINES

This watch features 50M (5 ATM) water resistance. This means it is suitable for:

- Handwashing
- Exposure to rain
- Washing face
- Swimming in shallow water

Important: Do not use the watch while diving, surfing, or bathing in hot water. Avoid pressing any buttons while the watch is wet or submerged, as this can compromise the water resistance seal.



Image 5.1: Visual guide to the watch's water resistance for daily activities.

6. MAINTENANCE AND CARE

- Clean the watch regularly with a soft, damp cloth. Avoid harsh chemicals.
- Avoid exposing the watch to extreme temperatures or direct sunlight for prolonged periods.
- If the watch becomes wet, dry it thoroughly with a soft cloth.
- Store the watch in a dry place when not in use.
- Battery replacement should be performed by a qualified technician to maintain water resistance.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Digital display is blank or dim.	Low battery.	Replace the battery. Consult a professional for battery replacement to ensure water resistance is maintained.
Analog hands are not moving or show incorrect time.	Crown is pulled out; low battery.	Push the crown back in. If still not working, replace the battery.
Alarm sounds continuously or cannot be turned off.	Alarm function is active and not properly deactivated.	Press the MODE button until "ALARM" appears. Press the ALARM button to toggle the alarm off (alarm icon should disappear). If the issue persists, try a full reset (consult customer support if available).
Water inside the watch.	Water resistance compromised (e.g., buttons pressed underwater, extreme pressure).	Immediately take the watch to a professional for inspection and repair to prevent further damage. Do not attempt to dry it yourself.

8. SPECIFICATIONS



PRODUCT PARAMETER

BRAND:DAYLLON
MODE:1163
WEIGHT:47G
MOV'T:Analog Digital
MIRROR:RESIN
CASE:ABS
BAND:PU
BUCKLE:STAINLESS STEEL

 Dial Diameter: 40mm / 1.57in

 Band Width: 17mm / 0.66in

 Dial Thickness: 16mm / 0.62in

 Band Length: 250mm / 9.84in

 Weight:47g/0.10lb



Image 8.1: Detailed product parameters including brand, model, weight, movement, mirror, case, band, and buckle materials, along with dimensions.

- **Brand:** Dayllon
- **Model:** 1163
- **Movement Type:** Japanese Quartz (Analog-Digital)
- **Display:** Analog-Digital

- **Case Material:** ABS Resin
- **Band Material:** Silicone
- **Buckle Material:** Stainless Steel
- **Mirror Material:** Resin
- **Water Resistance Depth:** 50 Meters (5 ATM)
- **Dial Diameter:** 40 mm (1.57 inches)
- **Dial Thickness:** 16 mm (0.62 inches)
- **Band Width:** 20 mm (0.79 inches)
- **Band Length:** 250 mm (9.84 inches)
- **Min Perimeter:** 150 mm (5.90 inches)
- **Max Perimeter:** 220 mm (8.66 inches)
- **Item Weight:** 47 grams (0.10 lbs)

9. PRODUCT VIDEO

Watch this official product video for a visual demonstration of the Dayllon Kids Watch Model 1163.

Your browser does not support the video tag.

Video 9.1: A 25-second video showcasing the Dayllon Kids Watch Model 1163 from various angles, highlighting its design and features.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Dayllon website. Keep your purchase receipt as proof of purchase.

Manufacturer: Dayllon

Date First Available: March 10, 2025

© 2025 Dayllon. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question