

WOLFANG WDV01

WOLFANG WDV01 Portable DVD Player User Manual

Model: WDV01

1. INTRODUCTION

Thank you for choosing the WOLFANG WDV01 Portable DVD Player. This manual provides essential information for setting up, operating, and maintaining your device. Please read it carefully before use to ensure optimal performance and longevity of your product.

The WOLFANG WDV01 is designed for portable entertainment, featuring a 9.5-inch unit with a 7.5-inch HD swivel screen, stereo speakers, and a long-lasting battery. It supports various disc and file formats, making it versatile for different media content.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- WOLFANG WDV01 Portable DVD Player
- Remote Control
- User Manual
- AC Charger
- Car Charger
- 3-in-1 AV Cable

CONTENU DE L'EMBALLAGE

WDV01

Télécommande

Manuel Utilisateur

Chargeur AC

Chargeur de Voiture

Câble AV 3-en-1



Image: Contents of the WOLFANG WDV01 package, showing the DVD player, remote control, user manual, AC charger, car charger, and AV cable.

3. PRODUCT OVERVIEW

3.1 Key Features

- **Display:** 9.5-inch unit with 7.5-inch HD eye-protection screen.
- **Screen Rotation:** 270° horizontal rotation and 180° vertical flip for flexible viewing angles.
- **Audio:** Integrated stereo speakers.
- **Battery Life:** Up to 6 hours of playback on a full charge.
- **Power Options:** AC power adapter and car charger included.
- **Memory Function:** Breakpoint memory resumes playback from the last stopped point.
- **Media Compatibility:** Supports DVD, SVCD, VCD, CD-R/RW discs.
- **File Format Support:** JPEG, WMA, MPG, MP3, DIVX, VOB, AVI.

- **External Connectivity:** USB port, SD card slot (max 32GB), AV input, AV output, 3.5mm headphone jack.

3.2 Device Layout



Image: Detailed view of the side panel of the WOLFANG WDV01, highlighting the USB port, SD card slot, headphone jack, AV OUT, AV IN, DC power input, and ON/OFF switch.

- **USB Port:** For connecting USB flash drives.
- **SD Card Slot:** For inserting SD/MMC cards.
- **Headphone Jack:** 3.5mm audio output for headphones.
- **AV OUT:** Audio/Video output for connecting to a TV or projector.
- **AV IN:** Audio/Video input for connecting external devices or another DVD player.
- **DC IN:** Power input for AC adapter or car charger.
- **ON/OFF Switch:** Power control for the device.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the device. Connect the AC charger to the DC IN port on the player and plug it into a wall outlet. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off, depending on the model.

4.2 Powering On/Off

To power on the device, slide the ON/OFF switch to the "ON" position. To power off, slide it to the "OFF" position.

4.3 Screen Adjustment

The screen can be rotated 270 degrees horizontally and flipped 180 degrees vertically. Adjust the screen to your preferred viewing angle. This feature is particularly useful for mounting in a car or for shared viewing.



Image: Illustration demonstrating the 270-degree rotation and 180-degree flip capabilities of the WOLFANG WDV01 screen.

5. OPERATING INSTRUCTIONS

5.1 Playing a DVD/CD

1. Open the disc cover gently.
2. Place a compatible DVD or CD onto the spindle, label side up.
3. Close the disc cover.
4. The player will automatically detect and begin playback. If not, select "Disc" from the main menu.

Note: This device supports DVD, SVCD, VCD, CD-R/RW discs. It is not compatible with 1080p, 4K, or Blu-ray discs.

5.2 Playing from USB/SD Card

1. Insert a USB flash drive into the USB port or an SD card into the SD card slot.
2. From the main menu, select "USB" or "SD" depending on your media source.
3. Navigate through the folders and files using the control buttons or remote control.
4. Select the desired file (JPEG, WMA, MPG, MP3, DIVX, VOB, AVI) to begin playback.

Note: Maximum supported Micro SD card capacity is 32GB. Video files should have a resolution up to 720x480. Image files should have a resolution up to 2650x1440.

5.3 Breakpoint Memory Function

The player automatically remembers the last playback position. When you power on the device again or re-insert the same disc/media, it will prompt you to resume playback from where you left off. This function may need to be activated in the system settings.

Fonction Mémoire de Point d'Interruption

Le film reprend là où vous l'avez arrêté la dernière fois



Image: Visual representation of the breakpoint memory feature, illustrating how the player can pause and resume video playback from the exact point of interruption.

5.4 Connecting to an External Display (TV/Projector)

Use the provided 3-in-1 AV cable to connect the player to a TV or projector.

1. Connect one end of the AV cable to the AV OUT port on the DVD player.
2. Connect the other end of the AV cable to the corresponding AV input ports (Yellow for Video, Red for Right Audio, White for Left Audio) on your TV or projector.
3. Select the correct AV input source on your TV or projector.
4. The player's screen content will now be displayed on the external screen.

Synchronisez l'Écran avec le TV/Projecteur

Partagez la joie avec votre famille et vos amis sur un écran plus grand



Image: A WOLFANG WDV01 Portable DVD Player connected to a large television screen, displaying content for a family watching together, demonstrating the TV sync feature.

5.5 Connecting to Another DVD Player (AV IN)

The AV IN port allows you to connect another compatible device, such as a second DVD player, to display its content on the WOLFANG WDV01 screen.

1. Connect one end of an AV cable to the AV OUT port of the external device.
2. Connect the other end of the AV cable to the AV IN port on the WOLFANG WDV01.
3. Switch the WOLFANG WDV01 to AV input mode (refer to the on-screen menu or remote control for this option).

6. MAINTENANCE

6.1 Cleaning the Device

- Ensure the device is powered off and unplugged before cleaning.

- Use a soft, dry cloth to wipe the exterior of the player.
- For the screen, use a soft, lint-free cloth specifically designed for electronics screens. Do not use abrasive cleaners or solvents.
- To clean the disc lens, use a specialized DVD lens cleaning disc. Do not attempt to clean the lens manually.

6.2 Battery Care

- Avoid exposing the device to extreme temperatures (hot or cold).
- If storing the device for an extended period, charge the battery to approximately 50% to prolong its lifespan.
- Do not attempt to replace the internal battery yourself. Contact customer support if battery issues arise.

6.3 Storage

Store the player in a cool, dry place away from direct sunlight and moisture. Keep it in its original packaging or a protective case when not in use to prevent damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery drained, power adapter not connected, power switch off.	Charge the battery, ensure power adapter is securely connected, slide power switch to ON.
Disc not playing	Incompatible disc format, disc dirty/scratched, disc inserted incorrectly.	Check disc compatibility (no Blu-ray/4K), clean disc, insert disc label side up.
No sound	Volume too low, headphones connected, audio settings incorrect.	Increase volume, disconnect headphones, check audio output settings.
No picture on TV	AV cable loose, incorrect TV input selected.	Ensure AV cable is securely connected, select correct AV input on TV.
USB/SD card not recognized	Incompatible format, card/drive damaged, incorrect file system.	Ensure media is formatted to FAT32, check for damage, try another USB/SD card. Max 32GB SD card.

If the problem persists after trying these solutions, please contact WOLFANG customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	WOLFANG
Model	WDV01
Screen Size	7.5 inches
Unit Size	9.5 inches (diagonal)
Screen Resolution	Up to 800 x 480 pixels
Disc Compatibility	DVD, SVCD, VCD, CD-R/RW

Feature	Detail
File Format Support	Video: AVI, MPG, MP3, DIVX, VOB; Audio: WMA, MP3; Image: JPEG
USB/SD Card Support	Max 32GB (Micro SD)
Video Resolution (USB/SD)	Up to 720 x 480 pixels
Image Resolution (USB/SD)	Up to 2650 x 1440 pixels
Battery Life	4-6 hours
Item Weight	1100 Grams
UPC	850067892205

9. WARRANTY AND SUPPORT


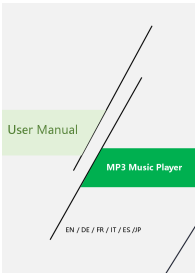
9.1 Manufacturer's Warranty




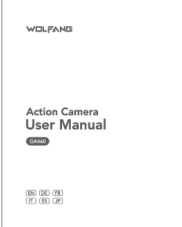
The WOLFANG WDV01 Portable DVD Player comes with a **24-month manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact WOLFANG customer support. Our team is available to assist you and aims to respond within 24 hours. Contact information can typically be found on the official WOLFANG website or through your purchase platform.

Related Documents - WDV01

	<p>WOLFANG Portable Video Player User Manual</p> <p>Comprehensive user manual for the WOLFANG Portable Video Player, detailing specifications, safety instructions, operation guide, and remote control functions. Provides warranty information and support contact details.</p>
	<p>WOLFANG MP3 Music Player User Manual</p> <p>Comprehensive user manual for the WOLFANG MP3 Music Player, covering setup, operation, features, and troubleshooting. Learn about music playback, Bluetooth connectivity, FM radio, sports tracking, and file transfer.</p>

	<p>WOLFANG WP03 Video Projector User Manual</p> <p>Comprehensive user manual for the WOLFANG WP03 video projector, covering setup, features, safety instructions, and connectivity options like iOS and Android screen mirroring. Includes warranty information.</p>
	<p>WOLFANG Action Camera User Manual - Installation, Operation, and Specifications</p> <p>Comprehensive user manual for the WOLFANG Action Camera, detailing installation, battery charging, TF card usage, product diagrams, technical specifications, indicator lights, button functions, video and photo modes, system settings, and essential safety precautions.</p>
	<p>Wolfang GA200 Action Camera Q&A</p> <p>Frequently asked questions and answers for the Wolfang GA200 action camera, covering app connection, waterproof usage, remote control, memory card formatting, video quality, and package issues.</p>
	<p>WOLFANG GA460 Action Camera User Manual</p> <p>Comprehensive user manual for the WOLFANG GA460 action camera, detailing installation, operation, specifications, and features for optimal use.</p>