



Manuals.plus /

› Inalsa /

› INALSA Tasty Fry CDW 5.5 Air Fryer User Manual

## Inalsa Tasty Fry CDW 5.5

# INALSA Tasty Fry CDW 5.5 Air Fryer User Manual

Model: Tasty Fry CDW 5.5 | Brand: Inalsa

## 1. INTRODUCTION

---

Thank you for choosing the INALSA Tasty Fry CDW 5.5 Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods by using rapid hot air circulation. Please read this manual thoroughly before operating the appliance and retain it for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Ensure the ceramic-coated pan is properly inserted before operation. The ceramic coating is 100% food-grade and free from toxins such as BPA and PFOA, ensuring safer cooking.

## India's First Air Fryer with Ceramic Coated Basket

**No PFOA. No PTFE. No Compromise. Just Pure, Healthy Cooking.**

Unlike conventional non-stick air fryers that may contain harmful chemicals like PFOA (Perfluorooctanoic Acid) and PTFE (Polytetrafluoroethylene), INALSA's ceramic-coated air fryer is crafted for safe, toxin-free cooking. Ceramic coating is naturally non-stick, highly durable, and can withstand higher temperatures without releasing fumes or degrading over time. It's not just an upgrade – it's peace of mind for your family's health.



Image: Illustration highlighting the healthy ceramic coating of the air fryer basket, emphasizing it is PFOA and PFAS free, and does not contain Teflon.

### 3. PRODUCT OVERVIEW

---

The INALSA Tasty Fry CDW 5.5 is a 5.5-liter air fryer featuring a ceramic-coated basket, digital touch panel, and 1600W power for efficient cooking.

#### 3.1 Components

- Air Fryer Unit
- Cooking Pan (5.5L capacity)
- Food Separator
- Instruction Manual Cum Warranty Card
- Recipe Booklet

#### 3.2 Key Features

- **Air Crisp Technology:** Rapidly circulates hot air for even cooking and crispy results.
- **Ceramic Coated Pan:** 100% food-grade, non-toxic, BPA and PFOA free for healthier cooking and easy cleaning.
- **Digital Touch Panel:** Intuitive controls for temperature and time settings.
- **8 Presets:** Pre-programmed settings for various dishes.
- **Visible Window:** Allows monitoring of food during cooking without opening the basket.
- **High Power:** 1600W for faster cooking.



Image: Front view of the INALSA Tasty Fry CDW 5.5 Air Fryer, showcasing its digital display and visible cooking window.



## 4. SETUP AND FIRST USE

---

### 4.1 Unpacking

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Check that all components listed in the "Product Overview" section are present and undamaged.

### 4.2 Initial Cleaning

1. Wipe the exterior of the appliance with a damp cloth.
2. Clean the cooking pan and food separator with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. Do not immerse the main unit in water.

### 4.3 Placement

- Place the air fryer on a stable, heat-resistant, and level surface.
- Ensure there is sufficient space (at least 10 cm) around the appliance for proper air circulation.
- Do not place the appliance against a wall or other appliances.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Preparing for Cooking

1. Place the food separator into the cooking pan if required.
2. Place ingredients into the cooking pan. Do not overfill.
3. Slide the cooking pan back into the air fryer until it clicks into place.
4. Plug the power cord into a grounded wall outlet.

### 5.2 Using the Digital Touch Panel

The air fryer features an intuitive digital touchscreen display for easy operation.



Image: Close-up of the air fryer's smart touch display located on the top, showing various icons and settings.

1. **Power On:** Press the power icon to turn on the appliance.
2. **Select Preset:** Choose from 8 pre-programmed cooking functions by tapping the corresponding icon. The presets include:
  - Fries (200°C / 25 min)
  - Bacon (200°C / 10 min)
  - Shrimp (200°C / 25 min)
  - Vegetable (200°C / 20 min)
  - Chicken (200°C / 40 min)
  - Muffins (180°C / 25 min)
  - Steak (180°C / 18 min)
  - Fish (200°C / 35 min)
3. **Adjust Temperature/Time:** Use the temperature and time control buttons to manually set or adjust the cooking parameters. The temperature can be set up to 200°C.
4. **Start/Pause:** Press the start/pause button to begin or temporarily stop the cooking process.
5. **Monitoring:** Utilize the visible window to check food progress without interrupting the cooking cycle.

## Smart Touch Display on Top

For more comfort and easy control with the smart touch display conveniently located on the top.



Image: Visual representation of the 8 cooking presets available on the INALSA air fryer, showing recommended temperatures and times for various food items.

### 5.3 Air Crisp Technology

The Air Crisp Technology ensures that hot air is circulated 360° around your food, providing crispy results with minimal to no oil. This technology reduces cooking time and fat content significantly.

# Premium Ceramic Coating

Cook Clean. Live Well.



Image: Diagram illustrating the Air Crisp Technology, showing hot air circulating 360 degrees around food for oil-free frying.

## 6. MAINTENANCE AND CLEANING

---

Regular cleaning will ensure optimal performance and extend the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Cleaning the Pan and Separator:** The ceramic-coated cooking pan and food separator are non-stick and easy to clean. Wash them with hot water, dish soap, and a soft sponge. Avoid abrasive cleaning materials or metal utensils that could damage the coating.
3. **Cleaning the Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
4. **Cleaning the Interior:** Gently wipe the interior with a damp cloth. For stubborn residue, use a soft brush. Ensure no water enters the heating element area.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.



Image: Close-up highlighting the nonstick, durable, and high heat resistant properties of the premium ceramic coating.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your INALSA Tasty Fry CDW 5.5 Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; main unit not assembled correctly.	Ensure the power cord is securely plugged into a working outlet. Check if the cooking pan is fully inserted.
Food is not cooked evenly.	Overfilling the basket; uneven distribution of food; incorrect temperature/time.	Do not overfill the basket. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous use; cooking fatty foods.	Clean the cooking pan and interior thoroughly after each use. For fatty foods, add a small amount of water to the bottom of the pan to prevent smoke.
Food is not crispy.	Too much moisture in food; not enough oil (for certain items); basket overfilled.	Pat food dry before air frying. Lightly coat some foods with oil for extra crispiness. Do not overfill the basket.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	Tasty Fry CDW 5.5
Capacity	5.5 Litres
Wattage	1600 Watts
Voltage	240 Volts
Max Temperature Setting	200 Degrees Celsius
Control Method	Touch
Material	Ceramic
Product Dimensions (D x W x H)	27.4D x 36W x 31H Centimeters
Item Weight	3.5 kg
Special Features	Air Crisp Technology, Ceramic Coated Pan & Food Separator, Temperature Control, Touch Control

## 9. WARRANTY AND SUPPORT

This product comes with a warranty as detailed in the included Warranty Card. For any service, support, or warranty claims, please contact the manufacturer directly.

- **Manufacturer:** Tuareg Marketing Pvt. Ltd.
- **Contact Number:** 9773982065
- **Address:** Khasra No- 1189, Bhalswa, New Delhi-110033, India.

Please refer to your warranty card for specific terms and conditions.