

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Panasonic](#) /

› [Panasonic Men's Shaver Lamdash 3-Blade ES-L321D-A Instruction Manual](#)

Panasonic ES-L321D-A

Panasonic Men's Shaver Lamdash 3-Blade ES-L321D-A Instruction Manual

Model: ES-L321D-A

[Overview](#) [Safety](#)

[Information](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. OVERVIEW

Thank you for purchasing the Panasonic Men's Shaver Lamdash 3-Blade, model ES-L321D-A. This electric shaver is designed for a close and comfortable shave, featuring a powerful linear motor and a convenient water-through cleaning system. Please read this manual thoroughly before use to ensure safe and optimal performance.



Image: Panasonic Lamdash 3-Blade Shaver ES-L321D-A in Dark Navy.

Key Features:

- **Powerful Linear Motor:** Delivers approximately 13,000 strokes/minute for a thorough shave, even on thick beards.
- **3-Blade System:** Designed for a close and deep shave.
- **Water-Through Cleaning:** Allows for easy and hygienic cleaning without removing the outer foil.
- **AC Adapter Charging:** Convenient and fast 1-hour rapid charge.
- **Pop-up Trimmer:** Integrated trimmer for sideburns and pre-cutting longer hairs.
- **Waterproof Design (IPX7 standard):** The entire body is washable for easy maintenance.

2. SAFETY INFORMATION

To prevent injury to yourself and others, and to avoid damage to the product, please observe the following safety precautions.

- Do not use the shaver if the outer foil or blades are damaged, as this may cause skin injury.
- Keep the AC adapter dry. Do not handle the AC adapter with wet hands or immerse it in water.
- Do not modify, disassemble, or repair the shaver yourself. Contact an authorized service center for repairs.

- Ensure the voltage specified on the AC adapter matches your local power supply.
- Keep out of reach of children.
- Unplug the AC adapter from the outlet before cleaning the shaver.
- Do not use the shaver in environments where it may be exposed to water while charging (e.g., bathtub, shower room).

3. SETUP

3.1 Package Contents

Verify that all items are included in the package:

- Panasonic Men's Shaver (ES-L321D-A)
- AC Adapter
- Specialized Oil
- Cleaning Brush

付属品一覧



ACアダプター



専用オイル



掃除用ブラシ

Image: Included accessories for the shaver, showing the AC adapter, specialized oil, and cleaning brush.

3.2 Charging the Shaver

1. Ensure the shaver is turned off.
2. Connect the AC adapter to the shaver's charging port.
3. Plug the AC adapter into a household power outlet.
4. The charging indicator will illuminate. A full charge takes approximately 1 hour.
5. Once fully charged, unplug the AC adapter.

Note: The shaver can be used while charging. For overseas use, a separate plug adapter may be required depending on the country or region.



Image: The Panasonic Lamdash shaver, indicating it can be used while charging.

4. OPERATING INSTRUCTIONS

4.1 Basic Shaving

1. Press the power button to turn on the shaver.
2. Hold the shaver at a right angle (90 degrees) to your skin.
3. Gently press the shaver against your face and move it slowly against the direction of hair growth.
4. Stretch your skin with your free hand to ensure a smooth shaving surface.
5. After shaving, press the power button to turn off the shaver.



Image: Illustration of multi-fit arc blades adapting to facial contours for an effective shave.

4.2 Using the Pop-up Trimmer

The pop-up trimmer is useful for grooming sideburns or pre-cutting longer beard hairs before a full shave.

1. Slide the trimmer switch upwards to engage the pop-up trimmer.
2. Turn on the shaver.
3. Hold the shaver with the trimmer perpendicular to your skin and trim as desired.
4. After use, slide the trimmer switch downwards to retract the trimmer.

シャープトリマー

モミアゲ等のお手入れ、
ヒゲのプレカットに。



トリミング用の刃を
本体背面に搭載
切れ味の良い45°鋭角刃

○写真のモデルはES-L381W-Nです。

○写真はイメージです。

Image: Close-up of the shaver's pop-up trimmer, highlighting its 45-degree sharp edge blade for precise trimming.

5. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and performance of your shaver.

5.1 Water-Through Cleaning

The water-through cleaning feature allows for easy removal of beard clippings without disassembling the outer foil.

1. Turn on the shaver.
2. Hold the shaver under running water, allowing water to flow through the blades.
3. Shake the shaver gently to dislodge any remaining clippings.
4. Turn off the shaver and gently tap it to remove excess water.
5. Allow the shaver to air dry completely before storing.

清潔

ウォータースルー洗浄

外刃をはずさずに、
ヒゲクズを洗い流せる。

防水設計 (IPX7基準)^{※1}

本体まるごと水洗い^{※2}で
刃の剃り味と清潔性を
キープ。



○写真のモデルはES-L381W-Nです。

※1 IPX7基準 (水深1メートルに30分間水に浸けても有害な影響を生じる量の水の浸入がない) 検査をクリアしています。

※2 全自動洗浄充電器、ACアダプターは除く。

○写真はイメージです。

Image: The shaver being cleaned under running water, demonstrating the water-through wash feature. The entire body is washable (IPX7 standard).

5.2 Blade Replacement

For optimal shaving performance, it is recommended to replace the outer foil and inner blades at regular intervals.

- **Outer Foil:** Approximately every 1 year.
- **Inner Blades:** Approximately every 2 years.

Replacement intervals may vary depending on usage. Refer to the product packaging or Panasonic's official website for compatible replacement parts.

定期的な刃の交換で 快適な剃り味

パナソニックのシェーバー
刃の交換時期

外刃

内刃

交換目安

約1年

交換目安

約2年



お使いのシェーバーによって、使用する替刃の種類は異なります。
ご購入の際には、適用替刃を確認の上、お買い求めください。

○写真のモデルはES-L381W-Nです。

○写真はイメージです。



Image: Diagram showing the outer foil and inner blades of the shaver, with recommended replacement times of approximately 1 year for the outer foil and 2 years for the inner blades.

5.3 Lubrication

Apply a drop of the specialized oil to each outer foil section after cleaning, especially if the shaver feels less smooth during use. This helps maintain blade sharpness and reduces friction.

5.4 Storage

Store the shaver in a cool, dry place away from direct sunlight and high humidity. Ensure it is completely dry before storing.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver for at least 1 hour.
Shaver does not shave effectively.	Blades are dull or clogged with hair.	Clean the shaver thoroughly. Consider replacing the outer foil or inner blades if they are old.

Problem	Possible Cause	Solution
Shaver makes unusual noise.	Foreign object caught in blades or motor issue.	Clean the shaver. If the noise persists, discontinue use and contact customer support.
Skin irritation after shaving.	Improper shaving technique or dull blades.	Ensure proper shaving technique. Replace blades if necessary. Use a pre-shave lotion or aftershave balm.

7. SPECIFICATIONS

Feature	Detail
Model Number	ES-L321D-A
Brand	Panasonic
Blade System	3-Blade
Motor Type	Linear Motor (approx. 13,000 strokes/min)
Power Source	Rechargeable (AC Adapter)
Charging Time	Approx. 1 hour (rapid charge)
Water Resistance	IPX7 Standard (Water-through washable)
Dimensions (H x W x D)	15.5 x 6.4 x 5.0 cm (approx. 6.1 x 2.5 x 2.0 inches)
Weight	Approx. 145 g (excluding cap)
Blade Material	Stainless Steel
Head Type	Reciprocating
Included Accessories	AC Adapter, Specialized Oil, Cleaning Brush
Manufacturer Warranty	12 months

8. WARRANTY AND SUPPORT

8.1 Manufacturer's Warranty

This Panasonic shaver is covered by a manufacturer's warranty for 12 months from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear of consumable parts like blades.

8.2 Customer Support

For product inquiries, technical assistance, or warranty service, please contact Panasonic customer support. Contact information can typically be found on the official Panasonic website for your region or on the product packaging.

You can also visit the official Panasonic website for FAQs and additional product information:

www.panasonic.com

