



[Manuals.plus](#) /

› [HTNZIR](#) /

› HTNZIR 19-Inch HD Flat Screen Widescreen TV Instruction Manual

## HTNZIR 19-Inch HD TV

# HTNZIR 19-Inch HD Flat Screen Widescreen TV Instruction Manual

Model: 19-Inch HD TV

## INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your HTNZIR 19-inch HD Flat Screen Widescreen TV. Please read this manual thoroughly before using the product to ensure proper and safe operation.

The HTNZIR 19-inch HD LED TV is designed for versatile use in various environments such as kitchens, bedrooms, RVs, and campers. It features a 1440x900 HD resolution display, a built-in ATSC tuner for over-the-air digital channels, and multiple connectivity options.

## WHAT'S INCLUDED

Upon unpacking, please verify that all the following items are present:

- 19-inch HD LED Television
- Remote Control (Batteries Included)
- Power Adapter
- User Manual (this document)
- Quick Start Guide



Image: Front view of the HTNZIR 19-inch HD TV with a vibrant image displayed on the screen, showing "19 inch" and "1440x900" resolution details.

## SETUP INSTRUCTIONS

### 1. Unpacking and Placement

1. Carefully remove the TV and all accessories from the packaging.
2. Place the TV on a stable, flat surface using the built-in stand. Ensure adequate ventilation around the TV.
3. For optimal signal reception when using the ATSC tuner, consider placing the TV near a window or in an elevated position facing local broadcast towers.

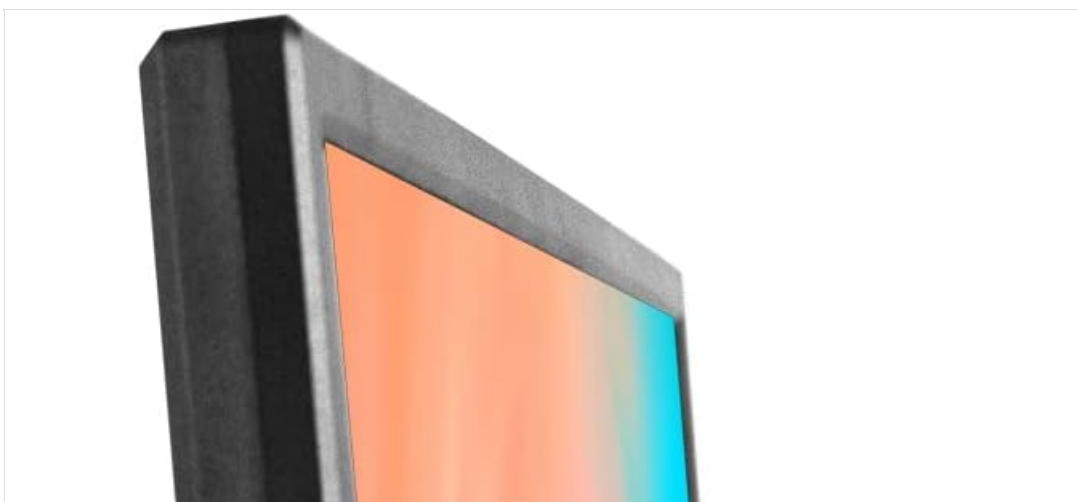 




Image: Side profile of the HTNZIR 19-inch HD TV, illustrating its slim design and the integrated stand.

## 2. Connecting Power

1. Connect the power adapter to the DC Power input port on the back of the TV.
2. Plug the other end of the power adapter into a standard electrical outlet.
3. For RV or car use, the TV supports 12V DC input. Ensure the correct 12V DC power source is used.

### 3. Connecting External Devices

The TV offers various input ports for connecting external devices:

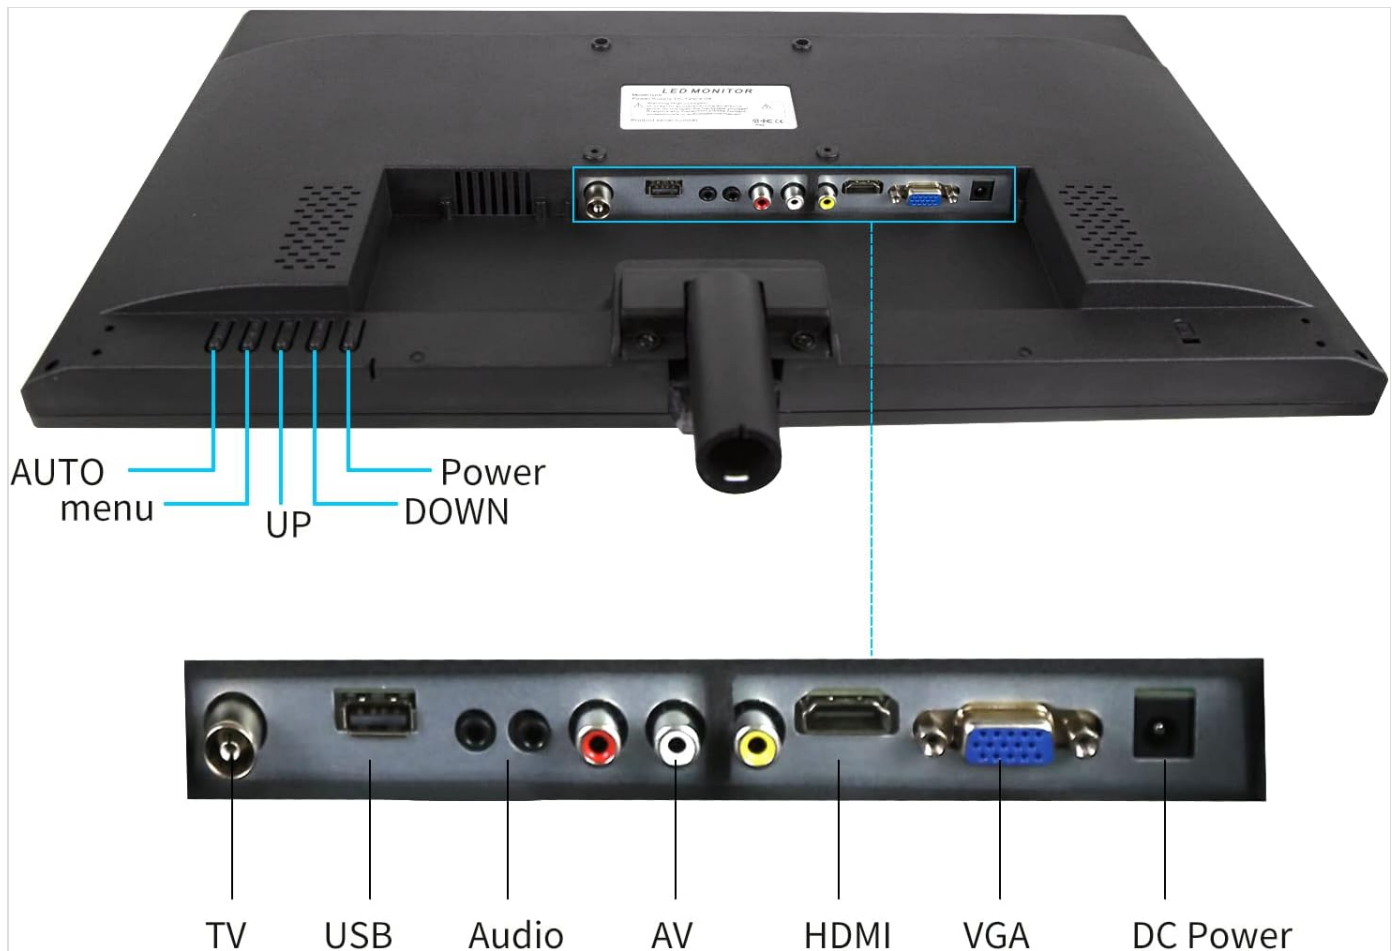


Image: Rear view of the HTNZIR 19-inch HD TV, highlighting the various input ports including TV (Antenna), USB, Audio, AV, HDMI, VGA, and DC Power. Control buttons for AUTO, menu, UP, and DOWN are also indicated.


- **HDMI Port:** Connect streaming devices, gaming consoles, or Blu-ray players for high-definition audio and video.
- **USB Port:** Insert a USB flash drive to play compatible media files (photos, music, videos).
- **VGA Input:** Connect a computer or laptop to use the TV as a monitor.
- **AV Input:** Connect older devices such as DVD players or VCRs using composite video and stereo audio cables.
- **TV (Antenna) Input:** Connect an external antenna for receiving free over-the-air digital broadcasts via the built-in ATSC tuner.

*Note: This is a non-smart TV and does not support direct connection to cable/satellite services like Xfinity, DirecTV, or Comcast without an external set-top box.*

## OPERATING INSTRUCTIONS

### 1. Power On/Off

- Press the **Power** button on the remote control or on the TV's side panel to turn the TV on or off.

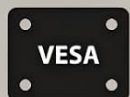

# VESA COMPATIBLE



Image: HTNZIR 19-inch HD TV displaying content, with a hand holding the remote control, indicating its operational range.

## 2. Initial Channel Scan (ATSC Tuner)

After connecting an antenna, you need to scan for available channels:

1. Press the **Menu** button on the remote control.
2. Navigate to the **Channel** or **Setup** menu.
3. Select **Auto Scan** or **Channel Search**.
4. The TV will scan for available over-the-air digital channels (ABC, CBS, NBC, FOX, PBS, etc.). This process may take several minutes.
5. Once complete, you can use the **Channel Up/Down** buttons to browse channels.

*Important: Channel availability depends on your location and signal strength. An external antenna is recommended for improved reception.*

## 3. Input Source Selection

To switch between connected devices (HDMI, USB, AV, VGA, TV):

- Press the **Source** or **Input** button on the remote control.
- Use the arrow buttons to select the desired input source.
- Press **OK** or **Enter** to confirm your selection.

#### 4. Media Playback via USB

To play media files from a USB flash drive:

1. Insert your USB flash drive into the USB port on the back of the TV.
2. Select **USB** as the input source.
3. Navigate through the folders and files using the remote control.
4. Select the desired file (photo, music, or video) and press **OK** to play.

## MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your TV.

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution specifically designed for electronics. Do not spray liquid directly onto the screen.
- **Cleaning the Cabinet:** Use a soft, dry cloth to wipe the TV cabinet. Avoid using abrasive cleaners or solvents.
- **Ventilation:** Ensure that the ventilation openings on the back of the TV are not blocked. Do not place the TV in an enclosed space without adequate airflow.
- **Power Cord:** Regularly check the power cord for any damage. If damaged, discontinue use and contact customer support for a replacement.

## TROUBLESHOOTING

---

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No power / TV does not turn on.	<ul style="list-style-type: none"><li>• Ensure the power adapter is securely connected to both the TV and a working electrical outlet.</li><li>• Check if the power outlet is functional by plugging in another device.</li><li>• Verify the power button on the remote or TV is pressed.</li></ul>
No picture / Black screen.	<ul style="list-style-type: none"><li>• Confirm the correct input source is selected (e.g., HDMI 1, AV, TV).</li><li>• Check all cable connections (HDMI, AV, VGA) are secure.</li><li>• If using an antenna, perform a channel scan.</li></ul>

Problem	Possible Cause / Solution
No sound / Poor audio quality.	<ul style="list-style-type: none"> <li>• Increase the volume using the remote control.</li> <li>• Check if the TV is muted.</li> <li>• Ensure audio cables are properly connected for AV or external audio systems.</li> <li>• If using HDMI, verify the source device's audio output settings.</li> </ul>
Remote control not working.	<ul style="list-style-type: none"> <li>• Replace the batteries in the remote control.</li> <li>• Ensure there are no obstructions between the remote and the TV's infrared sensor.</li> <li>• Point the remote directly at the TV.</li> </ul>
Cannot find channels with antenna.	<ul style="list-style-type: none"> <li>• Ensure the antenna is properly connected to the TV's "TV" input.</li> <li>• Perform a channel scan (refer to "Initial Channel Scan" section).</li> <li>• Adjust the antenna's position or orientation. Consider using a stronger external antenna if signal is weak.</li> <li>• Check local broadcast availability in your area.</li> </ul>

## TECHNICAL SPECIFICATIONS

Feature	Specification
Screen Size	19 Inches
Resolution	1440 x 900 HD
Aspect Ratio	16:10 Widescreen
Display Technology	LED
Tuner Type	ATSC Digital Tuner
Inputs	HDMI, USB, VGA, AV, RF (Antenna)
DC Input	12V (for RV/car use)
Special Feature	Built-In Speaker
Product Dimensions (W x H x D)	17.5 x 13.8 x 1.8 inches (approx. 44.45 x 35.05 x 4.57 cm)
Item Weight	3.3 Pounds (approx. 1.5 kg)

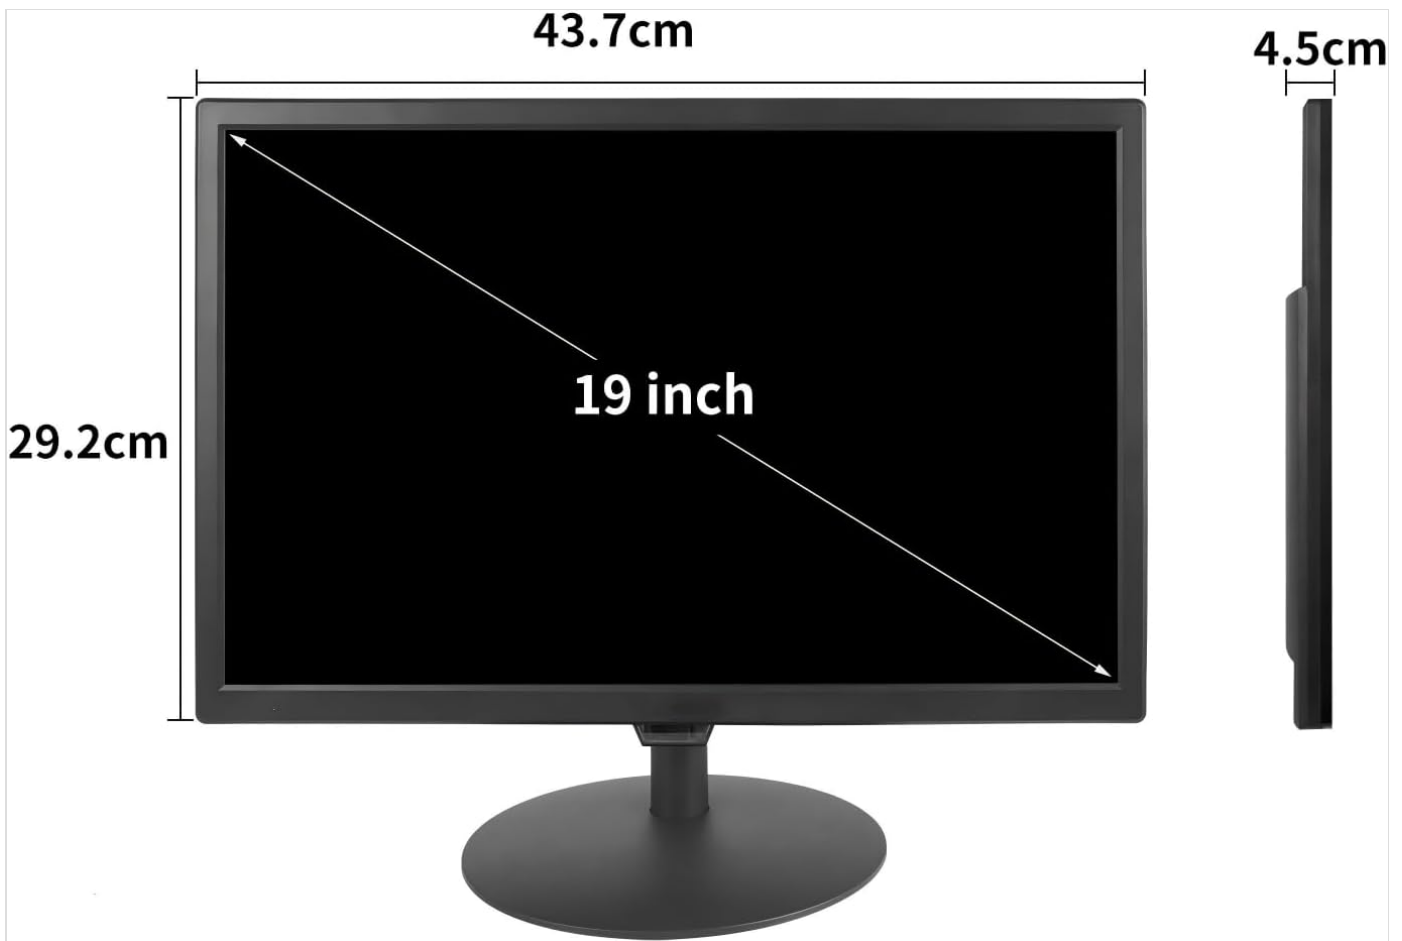 


Image: Diagram illustrating the dimensions of the HTNZIR 19-inch HD TV, showing a width of 43.7cm, height of 29.2cm, and depth of 4.5cm, with a 19-inch diagonal screen size.

## WARRANTY AND SUPPORT

Your HTNZIR 19-inch HD Flat Screen Widescreen TV is backed by a **1-year manufacturer warranty** from the date of purchase.

This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or external causes such as power surges.

For technical assistance, troubleshooting, warranty claims, or any other inquiries, please contact our dedicated customer support team. Please have your product model and purchase information ready when contacting support.

Contact information for support can typically be found on the manufacturer's website or on the Quick Start Guide included with your product.

