

[Manuals.plus](#) /

› [WOLFANG](#) /

› WOLFANG WDV02-PUR Portable DVD Player User Manual

WOLFANG WDV02

WOLFANG WDV02-PUR Portable DVD Player User Manual

Model: WDV02-PUR

INTRODUCTION

Thank you for purchasing the WOLFANG WDV02-PUR Portable DVD Player. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

SAFETY INSTRUCTIONS

- Do not expose the device to rain or moisture.
- Avoid placing the device near heat sources or in direct sunlight.
- Use only the provided power adapter and car charger.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.
- Keep the device away from strong magnetic fields.
- Ensure proper ventilation during use.

PACKAGE CONTENTS

Please check the package for the following items:

- WOLFANG WDV02-PUR Portable DVD Player
- Remote Control
- AC Power Adapter
- Car Charger
- AV Cable (3-in-1)
- User Manual



3 Modes d'Alimentation

Batterie haute capacité pour 4-6 heures d'utilisation



Chargeur de Voiture



Adaptateur Secteur AC



Batterie de 5000mAh

Image: The WOLFANG WDV02-PUR Portable DVD Player shown with its included accessories: remote control, AC power adapter, car charger, and AV cable.

PRODUCT OVERVIEW

Ports and Connections

Compatible USB et cartes SD (32 Go max.)



Encodage vidéo

MPEG-1, MPEG-2, MP4V, DIVIX, XVID



Formats audio

AVI, MPG, MPEG, DAT, VOB, ASF



Formats vidéo

MP3, WMA, OGG, ACC



Format image

JPEG



Image: Detailed diagram illustrating the various ports on the WOLFANG WDV02-PUR Portable DVD Player, including USB, SD card slot, headphone jack, AV input, AV output, DC power input, and power switch.

- **USB Port:** For connecting USB flash drives to play media files.
- **SD Card Slot:** For inserting SD cards to play media files.
- **Headphone Jack (3.5mm):** For connecting headphones for private listening.
- **AV IN Port:** For connecting external video sources.
- **AV OUT Port:** For connecting the player to a TV or projector.
- **DC IN Port:** For connecting the AC power adapter or car charger.
- **ON/OFF Switch:** To power the device on or off.
- **GAME USB Port:** For connecting game controllers (if supported).

Screen Rotation

The 15.6-inch HD screen supports a 270° horizontal rotation and a 180° vertical flip, allowing for flexible viewing angles.



Écran flexible et contrôle facile

Rotation à 270°/180° et télécommande intuitive pour des angles de vision flexibles et une utilisation aisée, pour les enfants comme pour les seniors.

Image: Illustration demonstrating the 270-degree horizontal rotation and 180-degree vertical flip capabilities of the player's screen.

SETUP

Charging the Battery

The device has a built-in 5000mAh rechargeable battery. To charge:

1. Connect the AC power adapter to the DC IN port on the player and plug it into a wall outlet.
2. Alternatively, use the car charger to power or charge the device in a vehicle.
3. A full charge provides approximately 6 hours of playback time.

Batterie fiable et charge flexible

Jusqu'à 6 heures d'autonomie continue
grâce à une batterie intégrée de 5000 mAh



Batterie de
5000 mAh



Adaptateur
secteur (inclus)



Chargeur
allume-cigare (inclus)



Image: Visual representation of the 5000mAh battery and the included charging options: AC adapter and car charger.

Powering On/Off

Slide the ON/OFF switch to the "ON" position to power on the device. Slide it to "OFF" to power off.

OPERATING INSTRUCTIONS

Playing a DVD/CD

1. Open the disc cover.
2. Place a DVD or CD onto the disc spindle with the label side facing up.
3. Close the disc cover securely.
4. The player will automatically detect and begin playback.
5. Use the controls on the player or the remote control to navigate menus, play, pause, stop, and skip tracks/chapters.

The player supports various disc formats including CD, DVD, DVD±R, CD-R(RW), SVCD-R(RW), DVD±RW, and VCD. It is region-free, allowing playback of discs from any region (Blu-ray discs are not supported).



Formats multiples et sans zones

Formats de disque :

VCD VCD1.1, VCD2.0, VCD3.0, SVCD, DVCD, CVD

DVD MINI DVD, DVD-5, DVD-9, DVD-10, DVD-18, DVD+R, DVD-R, DVD-RW, DVD+RW

Remarque : Non compatible avec les disques Blu-ray !

Image: Graphic illustrating the multiple disc formats supported by the WOLFANG WDV02-PUR Portable DVD Player, emphasizing its region-free capability.

Media Playback from USB/SD

The player supports media files from USB flash drives and SD cards (up to 64GB).

1. Insert a USB flash drive into the USB port or an SD card into the SD card slot.
2. Navigate to the media source option (usually labeled USB or SD) using the remote or player controls.
3. Select the desired file (VOB, AVI, MPEG, MP3, WMA, JPEG) for playback.

Supported File Formats:

- **Video Encoding:** MPEG-1, MPEG-2, MP4V, DIVIX, XVID
- **Audio Formats:** AVI, MPG, MPEG, DAT, VOB, ASF, MP3, WMA, OGG, ACC
- **Image Format:** JPEG

Connecting to a TV or Projector (Screen Synchronization)

You can connect your portable DVD player to a larger screen for an enhanced viewing experience.

1. Ensure both the DVD player and the TV/projector are powered off.
2. Connect one end of the AV cable (3-in-1) to the AV OUT port on the DVD player.
3. Connect the other end of the AV cable to the corresponding AV IN ports on your TV or projector.
4. Power on the TV/projector and select the correct AV input source.
5. Power on the DVD player, and the content will be displayed on the connected screen.

Synchronisation de l'écran

Regardez vos films préférés sur un écran plus grand



Synchronisation avec un lecteur similaire



Synchronisation avec un téléviseur



Synchronisation avec un projecteur



Image: Diagram showing the WOLFANG WDV02-PUR Portable DVD Player connected to a television for screen synchronization, allowing content to be viewed on a larger display.

Using Headphones

For private listening, connect any standard 3.5mm headphones to the headphone jack on the side of the player.

Last Position Memory Function

The player features a last position memory function. If you stop playback or power off the device, it will resume from the last watched point when you restart the disc or file.



Votre film, votre rythme

La fonction de mémorisation des points d'arrêt reprend là où vous vous êtes arrêté la dernière fois.
Ne jamais revoir

Image: Illustration depicting the last position memory function, showing that playback resumes from where it was last stopped.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches.
- **Storage:** Store the player in a cool, dry place when not in use.
- **Battery:** For optimal battery life, charge the device regularly, even if not in frequent use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery drained; power adapter not connected properly.	Charge the battery; ensure power adapter is securely connected.
Disc not playing	Disc is dirty or scratched; unsupported disc format; disc inserted incorrectly.	Clean the disc; try a different disc; ensure disc is inserted label-side up; verify disc format compatibility.
No sound	Volume too low; headphones connected; audio settings incorrect.	Increase volume; disconnect headphones if using speakers; check audio output settings.
No picture on TV/Projector	AV cable not connected properly; incorrect input source selected on TV/projector.	Ensure AV cable is securely connected to AV OUT on player and AV IN on TV; select correct input source on TV/projector.
USB/SD card not recognized	Card/drive not inserted correctly; unsupported file format; card/drive capacity too large.	Reinsert card/drive; ensure files are in supported formats; use cards/drives up to 64GB.

SPECIFICATIONS

Brand	WOLFANG
Model Number	WDV02-PUR
Screen Size	15.6 Inches
Display Resolution	1280x800
Display Type	LCD LED
Battery Capacity	5000 mAh
Battery Life	Up to 6 hours
Supported Media Types	CD, DVD, DVD±R, CD-R(RW), SVCD-R(RW), DVD±RW, VCD (excluding Blu-ray)
Connectivity Technology	USB, AV, 3.5 mm
Compatible Devices	Television, Headphones
Audio Output Mode	Stereo
Item Weight	2.57 Kilograms
Country of Origin	China
UPC	850067892212

WARRANTY AND SUPPORT

Warranty Information

This WOLFANG product is covered by a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use.

Customer Support

For any questions, technical assistance, or warranty claims, please contact WOLFANG customer support. We aim to provide a 24-hour response time and lifetime customer service.

Please refer to the official WOLFANG website or your purchase documentation for the most up-to-date contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question