



Manuals.plus /

- › GOEBLESON /
- › GOEBLESON 64.2" Dimmable Floor Lamp User Manual (Model E17LD05)

GOEBLESON E17LD05

GOEBLESON 64.2" Dimmable Floor Lamp

Model: E17LD05

PRODUCT OVERVIEW

The GOEBLESON 64.2" Dimmable Floor Lamp (Model E17LD05) is a modern standing lamp designed for versatile lighting in living rooms, bedrooms, and other indoor spaces. It features dual control options via a magnetic remote and a foot switch, smooth dimming, and adjustable color temperatures. The lamp includes a 10W A19 bulb and is ETL listed for safety.



The GOEBLESON 64.2 inch Dimmable Floor Lamp, showcasing its modern design and soft illumination in a living room environment.

Modern Floor Lamp



Removable Shade



Foot Switch



A19 Bulb Included



Magnetic Remote

Key features of the GOEBLESON floor lamp, including its removable shade, foot switch, included A19 bulb, and magnetic remote control.

SETUP INSTRUCTIONS

Follow these steps for quick and easy assembly of your floor lamp:

1. Carefully unpack all components from the packaging.
2. Ensure all parts listed in the 'What's in the Box' section are present.

3. Assemble the lamp pole sections by screwing them together clockwise until secure.
4. Attach the assembled pole to the lamp base by screwing it clockwise.
5. Align the pleated edges of the shade and secure them to ensure even light distribution.
6. Insert the provided A19 bulb into the E26 bulb base.

Fits E26 base bulb of various types 

Up to 60w, for diverse lighting needs

10W **LED** **900LM**



Note:
Dimmable Bulb Included



Visual guide for assembling the lamp, including securing the base, assembling the pole, attaching the shade, and inserting the bulb.

What's in the Box:

- Bulb
- Remote Control
- Shade
- Lamp Pole Sections
- Lamp Base

OPERATING INSTRUCTIONS

Power On/Off:

- **Foot Switch:** Press the foot switch located on the power cord to turn the lamp on or off.
- **Remote Control:** Press the power button on the remote control to turn the lamp on or off.



The foot switch provides convenient on/off control without bending down.

Dimming and Color Tuning:

Use the remote control to adjust the brightness and color temperature:

- **Brightness Adjustment:** Use the '+' and '-' buttons on the remote to seamlessly adjust brightness from 10% to 100%.
- **Color Temperature Selection:** Cycle through color temperatures (3000K Warm White, 4500K Cool White, 6500K

Daylight) using the dedicated button on the remote.



The remote control allows for smooth dimming and selection of three color temperatures: Warm White, Cool White, and Daylight.

Timer Function:

The lamp features a 1-hour auto-off timer, ideal for bedtime use. Activate the timer using the designated button on the remote control.



Elegant Pleated
Shade

DIY White
Inner Shade

One Hour Timer
01:00

The 1-hour timer function is convenient for various activities, such as reading before sleep.

Usage Modes:

The remote control offers various preset modes for different environments:

- **Night Light Mode:** Provides a soft, low-intensity light.
- **Nursery Mode:** Gentle illumination suitable for a child's room.
- **Reading Mode:** Optimized brightness and color for comfortable reading.

- **Working Mode:** Brighter, cooler light for focus and productivity.



The remote control allows selection of various lighting modes, including Night Light, Nursery, Reading, and Working.


MAINTENANCE

Cleaning:

- Ensure the lamp is unplugged before cleaning.
- The double-layer shade is easily removable for cleaning. Gently wipe the shade with a soft, dry cloth.
- Wipe the lamp pole and base with a soft, damp cloth. Avoid using abrasive cleaners or solvents.

Bulb Replacement:

- Always unplug the lamp before replacing the bulb.
- Allow the bulb to cool completely before touching it.
- Unscrew the old bulb counter-clockwise.
- Insert a new E26 base bulb, screwing it clockwise until secure. The lamp is compatible with E26 base bulbs up to 60W.

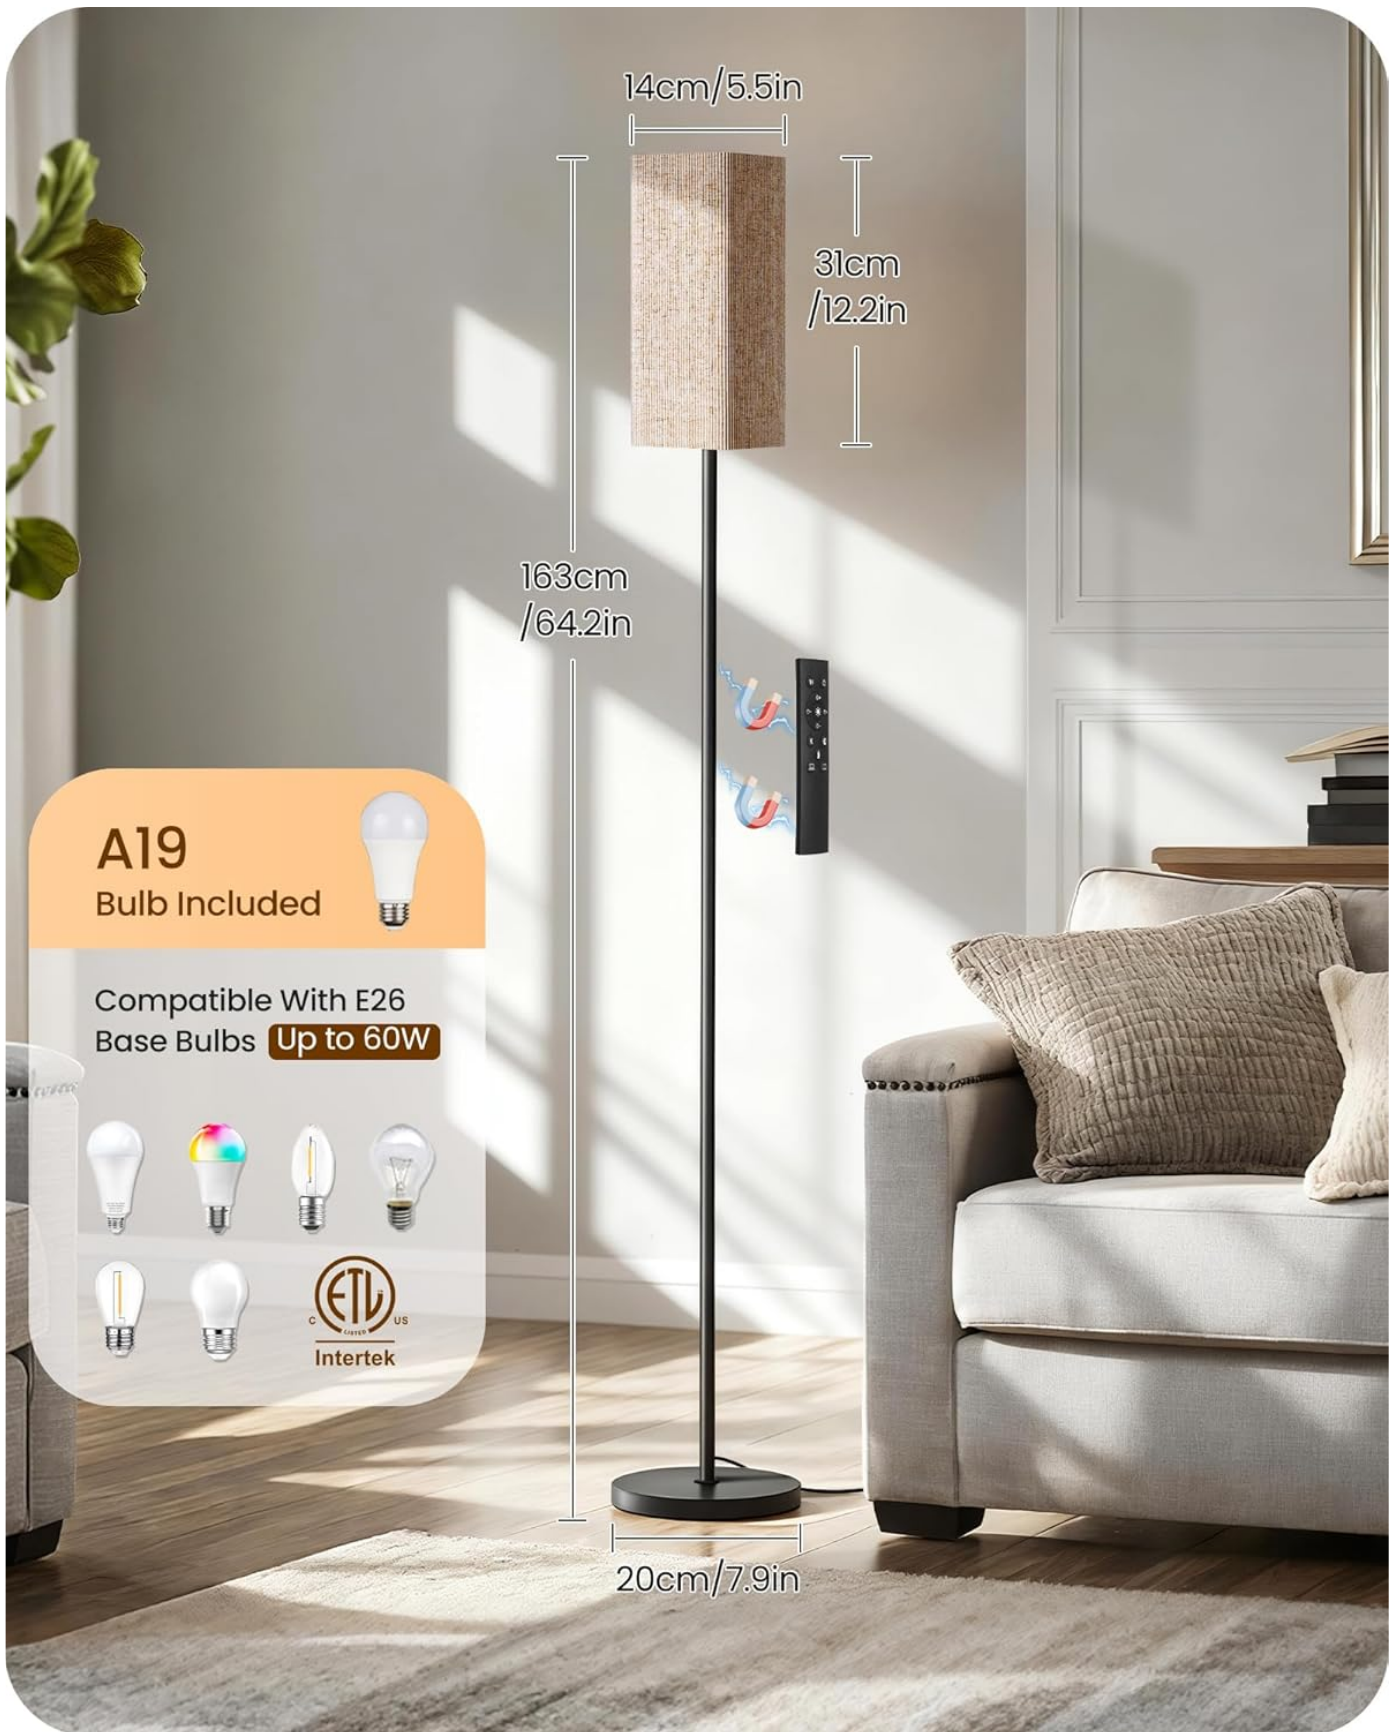

The lamp uses an A19 bulb with an E26 base and is compatible with bulbs up to 60W.

TROUBLESHOOTING

If you encounter issues with your GOEBLESON floor lamp, please refer to the following common solutions:

- **Lamp does not turn on:**

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check if the bulb is properly screwed in and not burnt out. Replace if necessary.
- Verify that the foot switch is pressed or the remote control's power button is activated.

- **Remote control not working:**

- Check the batteries in the remote control and replace them if they are depleted.
- Ensure there are no obstructions between the remote and the lamp's receiver.

- **Light flickers or dims unexpectedly:**

- Ensure the bulb is fully tightened in the socket.
- If using a non-dimmable bulb, it may not function correctly with the dimming feature. Use the included dimmable A19 bulb or a compatible dimmable E26 LED bulb.
- Check for loose connections in the lamp assembly.

If the problem persists after trying these steps, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	E17LD05 (BP-F004S)
Product Dimensions	7.9"D x 7.9"W x 64.2"H
Item Weight	4.9 Pounds (approx. 4.85 lbs)
Lamp Type	Floor Lamp
Shade Material	Linen
Shade Color	Beige
Base Material	Metal
Finish Type	Painted
Switch Type	Remote, Foot Switch
Light Source Type	LED
Included Bulb Wattage	10 watts
Compatible Bulb Wattage	Up to 60W
Bulb Base	E26
Bulb Shape Size	A19
Light Color	Warm White, Cool White (3000K-6500K)
Indoor/Outdoor Usage	Indoor
Certifications	ETL Listed

WARRANTY AND SUPPORT

GOEBLESON is committed to providing high-quality products. For any questions, concerns, or warranty inquiries regarding your 64.2" Dimmable Floor Lamp (Model E17LD05), please contact our customer support team.

Please retain your proof of purchase for warranty claims.

For further assistance, visit the GOEBLESON Store on Amazon.