

COOPERS CP10

COOPERS CP10 10-inch Android 15 Tablet User Manual

1. INTRODUCTION

Welcome to the user manual for your new COOPERS CP10 10-inch Android 15 Tablet. This guide provides essential information to help you set up, operate, maintain, and troubleshoot your device. Please read this manual thoroughly to ensure optimal performance and longevity of your tablet.

2. WHAT'S IN THE BOX

Upon opening your COOPERS CP10 tablet package, please verify that all the following items are included:

- COOPERS CP10 10-inch Android 15 Tablet
- Keyboard
- Mouse
- Protective Case
- Type-C Cable
- Stylus

New Android 15

More Secure Private Space

Enhanced private space with stricter isolation and hidden notifications for sensitive apps.

Smarter Screen Recording

Improved privacy by focusing solely on single-app recording, excluding all other activities.



Faster Multitasking with App Pairs

Simplified multitasking with quicker split-screen access to favorite app combinations.

Better Taskbar Customization

Easier taskbar pinning for faster app access and improved screen control.

Image: The COOPERS CP10 tablet displayed with its accompanying keyboard, mouse, stylus, and protective case, illustrating the complete package contents.

3. PRODUCT OVERVIEW

3.1. Android 15 Operating System

The COOPERS CP10 tablet runs on the latest Android 15 operating system, offering enhanced privacy, security, and a more personalized user experience. Key features include improved private space management, smarter screen recording capabilities, faster multitasking with app pairs, and better taskbar customization.



Image: Visual representation of the new features in Android 15, highlighting privacy, screen recording, multitasking, and taskbar customization.

3.2. Performance and Storage

Equipped with a powerful Quad-core 1.8 GHz CPU, 8GB RAM (3GB fixed + 5GB virtual), and 32GB of internal storage, the CP10 ensures smooth operation and efficient multitasking. The storage can be expanded up to 1TB using a Micro SD card (not included).



Image: A visual demonstrating the tablet's high-speed operation and large storage capacity, featuring icons for 8GB RAM, 32GB ROM, and

1TB expandable storage.

3.3. Display

The tablet features a 10.1-inch HD display with a resolution of 1280x800 pixels and a 16:10 aspect ratio. The In-cell multi-touch LCD screen provides clear visuals and responsive touch interaction.

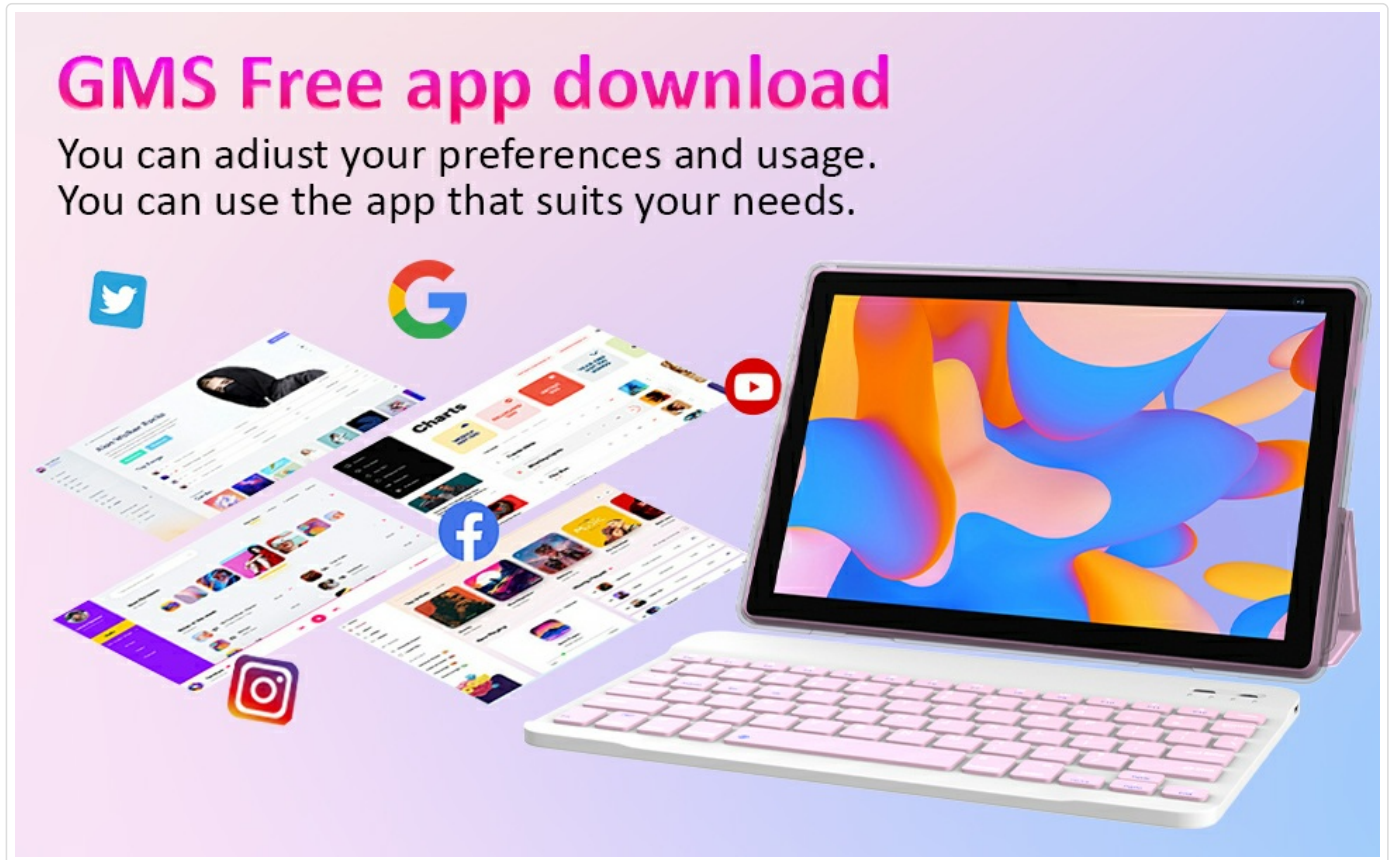


Image: The tablet's display showcasing its 10.1-inch size, 1280x800 HD resolution, 16:10 aspect ratio, and In-cell multi-touch capabilities for detailed viewing.

3.4. Cameras

Capture moments with the tablet's dual cameras: an 8MP rear camera and a 2MP front camera, suitable for photos, video recording, and video conferencing.

Dual camera 2MP+8MP

HD dual-camera design makes your photos and videos more vivid with rich details and excellent quality.



2MP
Rear Camera



8MP
Front Camera



Image: The tablet highlighting its 2MP front and 8MP rear cameras, with visual examples of photography and video recording.

3.5. Battery

A 6000mAh Lithium Polymer battery provides approximately 6-8 hours of average use, making it suitable for daily tasks and entertainment.

Enjoy Fun Time, All-day Battery Life.

High Capacity Battery with 6000 mAh - Sufficient for Daily Use!

6000 mAh

 Video

 Music

 Browsing

 Standby



Image: A graphic illustrating the tablet's 6000mAh high-capacity battery, emphasizing its long-lasting power for various activities.

4. SETUP

4.1. Initial Charging

Before first use, fully charge your tablet using the provided Type-C cable and a 5V2A charger. The charging indicator will show the charging status.

4.2. Power On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options on the screen.

4.3. Initial Setup Wizard

Upon first power-on, follow the on-screen instructions to complete the initial setup. This typically includes:

- Selecting your language.

- Connecting to a Wi-Fi network.
- Setting up your Google account (recommended for app downloads and services).
- Setting date, time, and screen lock.

4.4. Connecting Accessories

The tablet supports Bluetooth 5.0 for connecting the included keyboard, mouse, and other compatible devices. To connect:

1. Go to **Settings > Connected devices > Bluetooth**.
2. Turn on Bluetooth.
3. Put your accessory into pairing mode (refer to the accessory's manual).
4. Select the accessory from the list of available devices to pair.

Get Wireless Connections from Anywhere

Ideal for video calling, sbrowsing &streaming with GMS Certification

WiFi 2.4G+5GWiFi
WiFi6



GMS Certification



Image: The tablet connected to its keyboard, illustrating wireless connectivity options (Wi-Fi, GMS Certification) and the availability of popular applications.

5. OPERATING INSTRUCTIONS

5.1. Basic Navigation

The tablet uses a touchscreen interface. Common gestures include:

- **Tap:** To select an item or open an app.
- **Tap and Hold:** To access contextual menus or move icons.
- **Swipe:** To scroll through pages or lists.
- **Pinch:** To zoom in or out on images and web pages.

5.2. Wi-Fi and Bluetooth Connectivity

To connect to Wi-Fi or manage Bluetooth devices, navigate to **Settings > Network & internet** for Wi-Fi, or **Settings > Connected devices** for Bluetooth. The tablet supports 2.4GHz and 5GHz Wi-Fi networks and Bluetooth 5.0.

5.3. App Installation

Your tablet is GMS certified, allowing full access to the Google Play Store. To download and install applications:

1. Open the **Play Store** app.
2. Search for the desired app.
3. Tap **Install** to download and install.

5.4. Storage Management

To view and manage your tablet's storage, go to **Settings > Storage**. You can insert a Micro SD card (up to 1TB) into the designated slot to expand storage for photos, videos, and documents.

5.5. Camera Usage

Open the **Camera** app to take photos or record videos. You can switch between the 2MP front camera and the 8MP rear camera within the app interface. The tablet supports FHD 1080p video capture.

6. MAINTENANCE

6.1. Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials, which can damage the screen or finish. Do not spray cleaners directly onto the tablet.

6.2. Software Updates

Regularly check for system updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update** to check for and install available updates.

6.3. Storage Optimization

To maintain optimal performance, periodically clear unnecessary files and apps. You can use the built-in storage management tools in **Settings > Storage** to identify and remove large files or unused applications.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your COOPERS CP10 tablet.

- **Tablet does not turn on:** Ensure the tablet is fully charged. Connect it to the charger and wait a few minutes before

attempting to power it on again.

- **Screen is unresponsive:** Try restarting the tablet by holding the Power button for about 10-15 seconds until it reboots.
- **Wi-Fi connection issues:** Check if Wi-Fi is enabled in Settings. Ensure you have the correct password for your network. Try restarting your Wi-Fi router.
- **Slow performance:** Close unused applications running in the background. Clear cache data for frequently used apps. Consider freeing up internal storage space.
- **Apps crashing:** Ensure apps are updated to their latest versions. Clear the app's cache and data (Settings > Apps > [App Name] > Storage > Clear cache/Clear data). If the issue persists, reinstall the app.
- **Factory Reset:** If persistent software issues occur, you may perform a factory reset.**Warning:** This will erase all data on your tablet. Back up important data before proceeding. Go to **Settings > System > Reset options > Erase all data (factory reset)**.

8. SPECIFICATIONS

Feature	Specification
Brand	COOPERS
Model Name	CP10
Operating System	Android 15
Processor	Quad-core 1.8 GHz CPU
RAM Memory	8 GB (3GB fixed + 5GB virtual)
Internal Storage	32 GB
Expandable Storage	Up to 1 TB (Micro SD Card)
Screen Size	10.1 Inches
Display Resolution	1280x800 Pixels
Display Type	LCD, In-cell Multi-touch
Rear Camera	8 MP
Front Camera	2 MP
Video Capture Resolution	FHD 1080p
Battery Capacity	6000 mAh Lithium Polymer
Battery Average Life	8 Hours
Wireless Technology	Wi-Fi (2.4GHz & 5GHz), Bluetooth 5.0
Hardware Interface	USB Type-C
Item Weight	1.27 Kilograms

Feature	Specification
Item Dimensions (L x W x Thickness)	9.5"L x 0.3"W x 6.5"Th
Human-Interface Input	Touchscreen with Stylus Support

9. WARRANTY AND SUPPORT

9.1. Warranty Information

The COOPERS CP10 tablet comes with a **One-year limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or external causes.

9.2. Customer Support

For technical assistance, warranty claims, or further inquiries, please contact COOPERS customer support through the retailer where the product was purchased or refer to the contact information provided in your product packaging. Please have your model number (CP10) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

