



Manuals.plus /

› SYNOSHI /

› SYNOSHI PRO Round Brush Set Instruction Manual

SYNOSHI Synoshi Pro

SYNOSHI PRO Round Brush Set Instruction Manual

Model: Synoshi Pro

1. ABOUT THE SYNOSHI PRO ROUND BRUSH SET

The SYNOSHI PRO Round Brush Set provides two replacement brush heads specifically designed for the SYNOSHI PRO Electric Spin Scrubber. These brushes are engineered for effective and consistent cleaning across various surfaces in your home, including bathrooms, showers, floors, and tiles.

Each brush head features durable, soft bristles that are resistant to odors and wear, ensuring a long lifespan and reliable cleaning performance. The universal round design makes them suitable for a wide range of cleaning tasks.



Image: The Synoshi PRO Round Brush, demonstrating its size and how it attaches to the electric spin scrubber.

2. PACKAGE CONTENTS

Your SYNOSHI PRO Round Brush Set package includes:

- 1 x Red Round Brush Head
- 1 x Grey Round Brush Head



Image: The two round brush heads included in the set, one red and one grey.

3. SAFETY INFORMATION

Please read all safety instructions before using the SYNOSHI PRO Round Brush Set with your electric spin scrubber. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the electric spin scrubber is turned off and unplugged before attaching or detaching brush heads.
- Do not use damaged brush heads. Inspect brushes for wear or damage before each use.
- Keep brush heads out of reach of children.
- Use appropriate cleaning solutions for the surface being cleaned. Avoid harsh chemicals that may damage the brush bristles or the scrubber unit.
- Do not immerse the electric spin scrubber unit in water. The brush heads are designed for wet use, but the main unit is not fully submersible.

4. SETUP: ATTACHING BRUSH HEADS

To attach a round brush head to your SYNOSHI PRO Electric Spin Scrubber:

1. Ensure your SYNOSHI PRO Electric Spin Scrubber is turned off.
2. Align the center opening of the desired round brush head with the attachment point on the scrubber unit.
3. Press the brush head firmly onto the attachment point until it clicks securely into place. Gently pull on the brush head to ensure it is properly seated and will not detach during operation.

To detach a brush head:

1. Ensure the scrubber is turned off.
2. Grasp the brush head and pull it away from the scrubber unit. Some resistance is normal.

Designed for **SYNOSHI** Spin Scrubber



Image: Visual guide on how to easily swap brush heads on the Synoshi PRO Electric Spin Scrubber.

5. OPERATING INSTRUCTIONS

The SYNOSHI PRO Round Brush heads are designed for versatile cleaning. Follow these general guidelines for optimal use:

1. **Prepare the Surface:** For best results, pre-wet the surface to be cleaned and apply your preferred cleaning solution directly to the surface or the brush head.
2. **Power On:** Turn on your SYNOSHI PRO Electric Spin Scrubber.
3. **Begin Cleaning:** Gently press the rotating brush head against the surface. Allow the scrubber's rotation to do the work. Avoid applying excessive pressure, as this can reduce efficiency and potentially damage the motor or bristles.
4. **Target Areas:** The round brush is ideal for larger flat surfaces like floors and tiles, as well as curved surfaces like bathtubs and sinks. Its shape allows for even coverage.

5. **Rinse:** After cleaning, turn off the scrubber. Rinse the cleaned surface thoroughly with water.

Your browser does not support the video tag.

Video: Demonstration of the Synoshi PRO Electric Spin Scrubber with various brush heads, including the round brush, in action for different cleaning tasks. This video is provided by the seller, ECOMLT.



Image: The Synoshi PRO Electric Spin Scrubber with a round brush head being used to clean a floor.

6. MAINTENANCE AND CARE

Proper maintenance extends the life of your brush heads and ensures optimal cleaning performance.

- **Cleaning Brush Heads:** After each use, detach the brush head from the scrubber. Rinse the brush head thoroughly under running water to remove any dirt, debris, or cleaning solution residue.
- **Drying:** Allow the brush heads to air dry completely before storing. Store them in a clean, dry place.
- **Inspection:** Regularly inspect brush bristles for wear, damage, or excessive flattening. Replace brush heads when bristles show significant wear to maintain cleaning effectiveness.
- **Dishwasher Safe:** The brush heads are dishwasher safe for convenient and hygienic cleaning.



Image: The Synoshi PRO brush heads are dishwasher safe for easy cleaning.

7. TROUBLESHOOTING

If you encounter issues with your SYNOSHI PRO Round Brush Set, refer to the following common solutions:

Problem	Possible Cause	Solution
Brush head not spinning or spinning weakly.	Brush head not properly attached; Scrubber battery low; Excessive pressure applied.	Ensure brush head is securely clicked into place. Charge the scrubber unit. Reduce pressure during cleaning.
Brush head detaches during use.	Improper attachment; Worn attachment mechanism on scrubber or brush.	Re-attach the brush head, ensuring it clicks securely. If the issue persists, inspect the attachment points for wear.
Poor cleaning performance.	Worn bristles; Incorrect cleaning solution; Insufficient contact with surface.	Replace the brush head if bristles are worn. Use an appropriate cleaning agent. Ensure consistent contact with the surface.

8. SPECIFICATIONS

Feature	Detail
Brand	SYNOSHI
Model Number	Synoshi Pro (Brush Set)
Product Dimensions	2.95"L x 2.95"W x 1.61"H (per brush head)
Material	Acrylonitrile Butadiene Styrene (ABS), PP thread (bristles)
Shape	Round
Included Components	2 round brushes (1 Red; 1 Grey)
Item Firmness Description	Medium
Item Weight	4 ounces (total for set)
Surface Recommendation	Bathtub, Floor, Shower, Tile

9. WARRANTY INFORMATION

SYNOSHI products are manufactured to high-quality standards. For specific warranty details regarding your

SYNOSHI PRO Round Brush Set or the associated Electric Spin Scrubber, please refer to the warranty documentation included with your original electric spin scrubber purchase or visit the official SYNOSHI website.

This brush set is considered a consumable accessory. Warranty coverage typically applies to manufacturing defects and not to normal wear and tear from use.

10. CUSTOMER SUPPORT

For further assistance, questions, or to purchase additional accessories, please contact SYNOSHI customer support or visit our official store:

- **Online Store:** Visit the SYNOSHI Store on Amazon
- **Manufacturer:** Synoshi