

## Gadgy GAD-PPC-MBK-0US-001-001

# Gadgy Premium Electric Popcorn Machine User Manual

Model: GAD-PPC-MBK-0US-001-001

## 1. INTRODUCTION

---

Thank you for purchasing the Gadgy Premium Electric Popcorn Machine. This appliance is designed to provide a convenient and efficient way to prepare popcorn at home. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.

Key features of your popcorn machine include:

- Integrated stirring system for even popping.
- Rapid popcorn preparation, typically within 5 minutes.
- Built-in tray for melting butter during operation.
- Lid designed to function as a serving bowl.
- Non-stick heating plate for easy cleaning.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.
- Ensure the lid is securely in place during operation.
- Only use popcorn kernels and appropriate oils as specified for popcorn machines.

### 3. PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your Gadgy Premium Electric Popcorn Machine:

- **Base Unit:** Contains the heating element and motor for the stirring rod.
- **Non-Stick Heating Plate:** The surface where popcorn kernels are heated.
- **Stirring Rod:** Rotates to ensure even heating and popping of kernels.
- **Transparent Lid:** Covers the heating plate during operation and doubles as a serving bowl.
- **Butter Melting Tray:** Integrated into the lid for melting butter.
- **Power Switch:** Controls the appliance's operation.



Image: The Gadgy Premium Electric Popcorn Machine, showing the main unit with its transparent lid and the base containing the heating plate and stirring mechanism.

## 4. SETUP

---

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe the non-stick heating plate and stirring rod with a damp cloth. Wash the transparent lid and butter melting tray with warm, soapy water, then rinse and dry thoroughly. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the popcorn machine on a stable, flat, heat-resistant surface, away from water sources and flammable materials. Ensure there is adequate ventilation around the appliance.
4. **Assembly:** Place the stirring rod onto its central post on the heating plate. Position the transparent lid securely onto the base unit.

## 5. OPERATING INSTRUCTIONS

---

Follow these steps to prepare popcorn:

1. **Prepare Kernels:** Ensure the popcorn machine is unplugged. Remove the transparent lid. Add the desired amount of popcorn kernels (typically 1/2 cup to 1 cup, depending on desired yield) to the non-stick heating plate. Do not overfill.
2. **Add Oil (Optional):** For best results and flavor, add 1-2 tablespoons of cooking oil (e.g., vegetable, canola, coconut oil) to the kernels. The stirring rod will distribute the oil evenly.
3. **Secure Lid:** Place the transparent lid back onto the base unit, ensuring it is properly seated. If desired, place a small amount of butter in the butter melting tray on top of the lid.
4. **Power On:** Plug the power cord into a standard electrical outlet. Flip the power switch to the 'ON' position. The stirring rod will begin to rotate, and the heating plate will warm up.
5. **Popping Process:** Popcorn will begin to pop within a few minutes. The stirring rod ensures even popping. The butter in the melting tray will melt and drip onto the popcorn.
6. **Completion:** Once the popping slows down significantly (typically 4-5 minutes), flip the power switch to the 'OFF' position and unplug the machine immediately.
7. **Serve:** Carefully remove the transparent lid using oven mitts, as it will be hot. Invert the lid and use it as a serving bowl. The base unit can be set aside to cool.



Image: A visual guide demonstrating the four steps of popcorn preparation: pouring kernels, adding ingredients, the popping process, and serving the finished popcorn.



Gadgy

Pop it, flip it, serve it



Serving bowl included

Image: The transparent lid of the popcorn machine, shown inverted and filled with freshly popped popcorn, illustrating its dual function as a serving bowl.

## 6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your popcorn machine.

1. **Unplug and Cool:** Always ensure the appliance is unplugged and completely cooled before cleaning.
2. **Clean Lid and Butter Tray:** Wash the transparent lid and butter melting tray with warm, soapy water. Rinse thoroughly and dry. These parts are generally not dishwasher safe unless specified.
3. **Clean Heating Plate:** Wipe the non-stick heating plate with a damp cloth or sponge. For stubborn residue, use a small amount of mild dish soap. Avoid abrasive cleaners or scouring pads, as these can damage the non-stick coating. The stirring rod can be removed for easier cleaning.
4. **Clean Base Unit:** Wipe the exterior of the base unit with a damp cloth. Do not immerse the base unit in water or any other liquid.
5. **Storage:** Once clean and dry, reassemble the machine and store it in a cool, dry place.

# Easy to clean

Gadgy



Thanks to the non-stick heating plate and removable stirring rod

Image: A person cleaning the non-stick heating plate of the Gadgy popcorn machine with a soft cloth, highlighting the ease of maintenance.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power switch off; power outage.	Ensure plug is securely in outlet; turn power switch ON; check household circuit breaker.
Popcorn not popping or very few kernels pop.	Old or dry kernels; insufficient oil; too many kernels.	Use fresh, high-quality kernels; ensure correct amount of oil; do not exceed recommended kernel quantity.
Popcorn is burning.	Machine left on too long after popping stops; insufficient oil.	Turn off and unplug immediately once popping slows; ensure adequate oil.
Stirring rod not rotating.	Rod not properly seated; obstruction.	Ensure stirring rod is correctly placed on its post; check for any debris obstructing movement.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Gadgy
Model Number	GAD-PPC-MBK-0US-001-001
Color	Black
Material	Plastic
Product Dimensions (L x W x H)	9.7" x 8.6" x 11" (24.6 cm x 21.8 cm x 27.9 cm)
Item Weight	3.53 pounds (1.6 kg)
Special Features	Built-In Stirring System, Dual Function Lid, Non-Stick
Power	500 W (estimated from image)
Capacity	4.5 L (estimated from image)

## Dimensions



Image: A diagram illustrating the physical dimensions, capacity, and power rating of the Gadgy Premium Electric Popcorn Machine.

## 9. WARRANTY AND SUPPORT

---

This Gadgy product is covered by a manufacturer's warranty against defects in materials and workmanship under normal use. For specific warranty terms and conditions, please refer to the documentation included with your purchase or visit the official Gadgy website.

If you encounter any issues or have questions regarding your Gadgy Premium Electric Popcorn Machine, please contact Gadgy customer support for assistance. Contact information can typically be found on the product packaging or the official brand website.