

Samsung SM-X526

Samsung Galaxy Tab S10 FE 5G (SM-X526) User Manual

Model: SM-X526

[Introduction](#) [What's in the](#)

[Box](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Samsung Galaxy Tab S10 FE 5G (model SM-X526). Please read this manual thoroughly before operating the device to ensure proper functionality and to prevent damage.

The Samsung Galaxy Tab S10 FE 5G is a versatile tablet featuring a 10.9-inch display, 5G connectivity, and S Pen support, designed for various tasks from communication to content consumption.

2. WHAT'S IN THE BOX

Verify that all items are present in the product packaging:

- Samsung Galaxy Tab S10 FE 5G (SM-X526) Tablet
- USB Cable (Type-C)
- S Pen

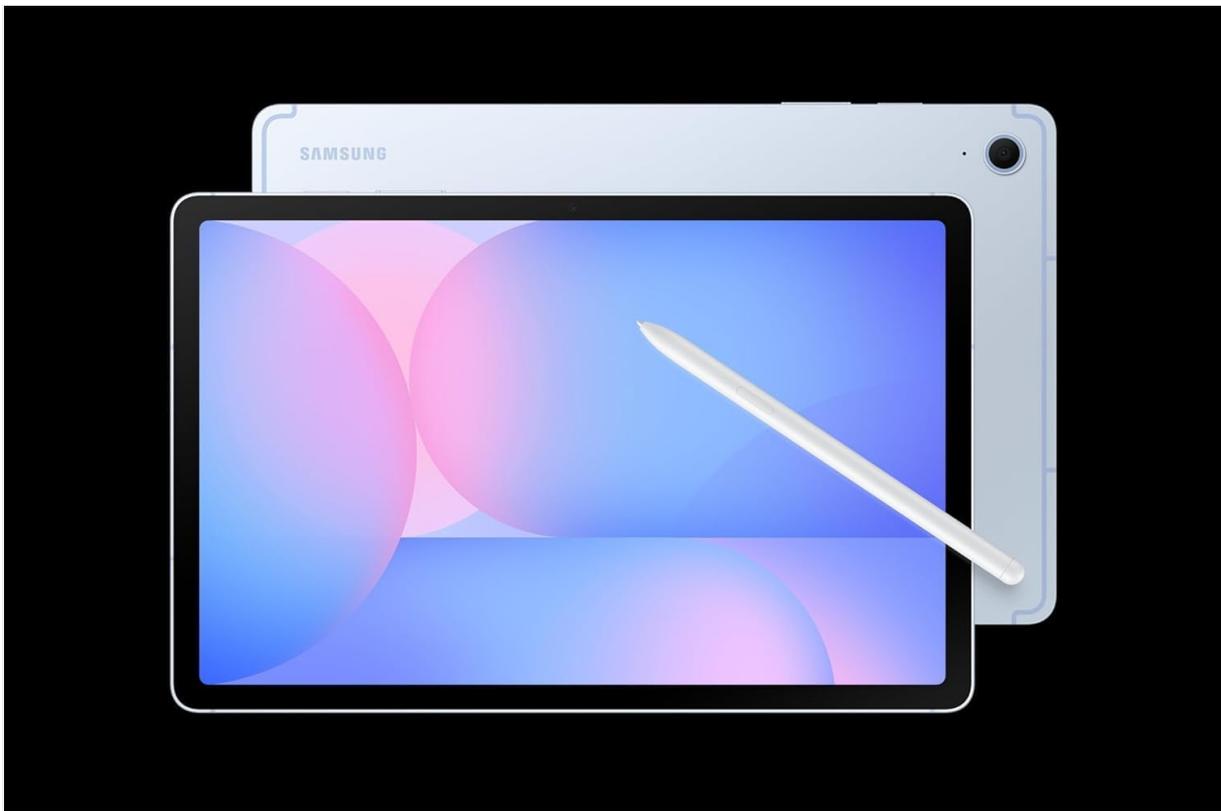


Image: The Samsung Galaxy Tab S10 FE 5G tablet shown with its accompanying S Pen.

3. SETUP

3.1 Charging the Battery

Before initial use, fully charge the tablet's battery. Connect the provided USB cable to the tablet's USB Type-C port and then to a compatible power adapter (sold separately) or a computer's USB port. The charging indicator will appear on the screen.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power key until the Samsung logo appears.
- **To Power Off:** Press and hold the Power key, then tap "Power off" on the screen.
- **To Restart:** Press and hold the Power key, then tap "Restart" on the screen.

3.3 SIM Card Installation (for 5G/4G Connectivity)

The Galaxy Tab S10 FE 5G supports a Nano-SIM card for cellular data. Use the provided ejection pin to open the SIM card tray. Insert the Nano-SIM card into the tray with the gold contacts facing down, then gently push the tray back into the slot until it clicks into place.

3.4 Initial Setup Wizard

Upon first power-on, follow the on-screen prompts to complete the initial setup. This includes selecting your language, connecting to a Wi-Fi network, signing in with your Google account, and setting up security features like fingerprint recognition.

3.5 S Pen Usage

The S Pen is included for enhanced interaction. Simply remove the S Pen from its storage slot (if applicable) or ensure it is charged and connected. The tablet will automatically detect the S Pen, allowing for writing, drawing, and navigating with precision.

4. OPERATING THE DEVICE

4.1 Basic Navigation

- **Touch:** Tap an item to select it.
- **Touch and Hold:** Press and hold an item for more options.
- **Swipe:** Move your finger across the screen to scroll or navigate between pages.
- **Pinch:** Use two fingers to zoom in or out on content.

4.2 Connectivity

- **Wi-Fi:** Go to *Settings > Connections > Wi-Fi* to connect to available wireless networks. Supports 802.11a/b/g/n/ac/ax (2.4GHz+5GHz).
- **Bluetooth:** Go to *Settings > Connections > Bluetooth* to pair with Bluetooth devices (e.g., headphones, keyboards). Supports Bluetooth v5.3.
- **Mobile Data (5G/4G):** Ensure a SIM card is installed and mobile data is enabled in *Settings > Connections > Data usage* for 5G or 4G cellular connectivity.
- **GPS:** Location services use GPS, Glonass, Beidou, Galileo, and QZSS for accurate positioning.

4.3 Camera Functions

The tablet features a 13.0 MP main camera and a 12.0 MP front camera. Open the Camera app to capture photos and videos. Video recording supports UHD 4K (3840 x 2160) at 30fps.

4.4 Security Features

Utilize the integrated fingerprint sensor for secure unlocking and authentication. Other security options include PIN, pattern, and password locks, configurable in *Settings > Security and privacy*.

5. MAINTENANCE

5.1 Cleaning the Device

To clean the screen and body, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner specifically designed for electronics. Avoid harsh chemicals, abrasive materials, or excessive moisture.

5.2 Battery Care

To prolong battery life, avoid exposing the tablet to extreme temperatures. It is recommended to keep the battery charge between 20% and 80% for optimal long-term health. Use only Samsung-approved chargers and cables.

5.3 Software Updates

Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. Go to *Settings > Software update* to check for updates.

6. TROUBLESHOOTING

6.1 Device Not Powering On

- Ensure the battery is sufficiently charged. Connect the tablet to a charger for at least 10-15 minutes.

- Perform a forced restart by pressing and holding the Power key and Volume Down key simultaneously for more than 7 seconds.

6.2 Connectivity Issues (Wi-Fi/Bluetooth/5G)

- **Wi-Fi:** Restart your Wi-Fi router. Forget the network on your tablet and reconnect.
- **Bluetooth:** Ensure the Bluetooth device is in pairing mode and within range. Try unpairing and re-pairing the device.
- **5G/4G:** Check if your SIM card is properly inserted and active. Verify mobile data is enabled in settings. Contact your service provider if issues persist.

6.3 Slow Performance

- Close unnecessary background applications.
- Clear cache data for apps that are frequently used.
- Restart the tablet periodically.
- Ensure sufficient storage space is available.

6.4 Screen Unresponsive

- Perform a forced restart (Power key + Volume Down key).
- Ensure the screen is clean and free of moisture or debris.

7. SPECIFICATIONS

Model Name	Samsung Galaxy Tab S10 FE 5G
Model Number	SM-X526
Display	10.9 inches, 2880 x 1800 (WQXGA+) TFT
Processor	Octa-Core (2.9GHz, 2.6GHz, 1.9GHz)
Rear Camera	13.0 MP
Front Camera	12.0 MP
Video Recording	UHD 4K (3840 x 2160) @30fps
Battery Capacity	10,090 mAh
Operating System	Android
Connectivity	5G, 4G, Wi-Fi 802.11a/b/g/n/ac/ax (2.4GHz+5GHz), Bluetooth v5.3, USB 2.0 Type-C
Location Technology	GPS, Glonass, Beidou, Galileo, QZSS
Sensors	Accelerometer, Fingerprint Sensor, Gyro Sensor, Geomagnetic Sensor, Hall Sensor, Light Sensor

Dimensions (LxWxH)	14.1 x 0.24 x 6.53 inches
Weight	0.704 ounces

8. WARRANTY & SUPPORT

Important Warranty Information: This Samsung Galaxy Tab S10 FE 5G (SM-X526) is designated as a Latin American Model. As such, there is **NO Warranty in the USA**, and the device may not support USA region-specific functionalities or services.

For product support, technical assistance, or further information regarding your device, please visit the official Samsung support website for your specific region of purchase. You can typically find support resources, FAQs, and contact information by searching for "Samsung Support" online.