

[Manuals.plus](#) /

› [CHiQ](#) /

› CHiQ QCF07B2W 199L Dual Mode Chest Freezer User Manual

CHiQ QCF07B2W

CHiQ QCF07B2W 199L Dual Mode Chest Freezer User Manual

Model: QCF07B2W

1. INTRODUCTION

Thank you for choosing the CHiQ QCF07B2W 199L Dual Mode Chest Freezer. This appliance is designed for flexible food storage, functioning as either a freezer or a refrigerator. To ensure safe operation and optimal performance, please read this manual thoroughly before use and retain it for future reference.

Key Features:

- **Dual Mode Operation:** Easily switch between freezer and refrigerator functions.
- **199 Liters Capacity:** Ample space for various food items and beverages.
- **Mechanical Temperature Control:** Adjustable settings for precise temperature management.
- **Internal LED Lighting:** Provides clear visibility of stored contents.
- **Balanced Hinge:** Ensures smooth and safe lid opening and closing.
- **Casters and Leveling Feet:** For easy movement and stable positioning.
- **Integrated Lock:** Enhances food security.



Figure 1: Front view of the CHI Q QCF07B2W Chest Freezer.

2. SAFETY INSTRUCTIONS

Please read and follow these safety guidelines carefully to prevent injury or damage to the appliance.

- **Electrical Safety:** Ensure the appliance is connected to a grounded 220V, 60Hz power outlet. Do not use extension cords or adapters. Disconnect power before cleaning or maintenance.
- **Placement:** Place the freezer on a firm, level surface. Allow adequate ventilation space (at least 10 cm) around the sides and back for proper heat dissipation. Avoid direct sunlight or heat sources.
- **Child Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. The integrated lock helps prevent accidental entrapment.
- **Flammable Materials:** Do not store explosive substances or highly flammable materials inside the appliance.
- **Defrosting:** Use only manufacturer-recommended methods for defrosting. Do not use sharp objects or electrical devices to remove ice.
- **Damage:** If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. SETUP AND INSTALLATION

3.1 Unpacking

- Carefully remove all packaging materials, including foam and adhesive tape.
- Inspect the appliance for any shipping damage. Report any damage to your retailer immediately.
- Keep packaging materials out of reach of children.

3.2 Placement

- Choose a location with a stable, level floor that can support the weight of the fully loaded freezer.
- Ensure there is at least 10 cm of space on all sides and above the freezer for proper air circulation.
- Avoid placing the freezer near heat sources (e.g., stoves, radiators) or in direct sunlight.
- Use the leveling feet to ensure the appliance is perfectly level, which helps with efficient operation and door sealing.

3.3 Initial Cleaning

- Before first use, clean the interior and exterior of the freezer with a soft cloth and a mild detergent solution. Rinse with clean water and dry thoroughly.

3.4 Power Connection

- After placement and cleaning, allow the freezer to stand upright for at least 2-4 hours before plugging it in. This allows refrigerants to settle.
- Connect the power cord to a dedicated 220V, 60Hz grounded electrical outlet.



Figure 2: Angled view of the CHiQ QCF07B2W Chest Freezer, showing its compact design.



Figure 3: Interior view of the freezer with the lid open, showing the removable storage basket.

4. OPERATING INSTRUCTIONS

The CHiQ QCF07B2W features a mechanical temperature control for easy adjustment between freezer and refrigerator modes.

4.1 Temperature Control

- Locate the temperature control dial on the front of the appliance.
- Rotate the dial to select the desired temperature setting.
- Settings marked '1' to '7' typically correspond to colder temperatures, with '7' being the coldest freezer setting.
- Settings marked with '**' or 'Refrigerator' indicate warmer temperatures suitable for refrigeration.
- For initial startup, set the dial to a mid-range freezer setting (e.g., '4' or '5') and allow the appliance to cool for

several hours before loading food.

4.2 Indicator Lights

- **Power Light (Red):** Illuminates when the appliance is connected to power.
- **Run Light (Green):** Illuminates when the compressor is actively cooling. It will cycle on and off as the compressor maintains the set temperature.

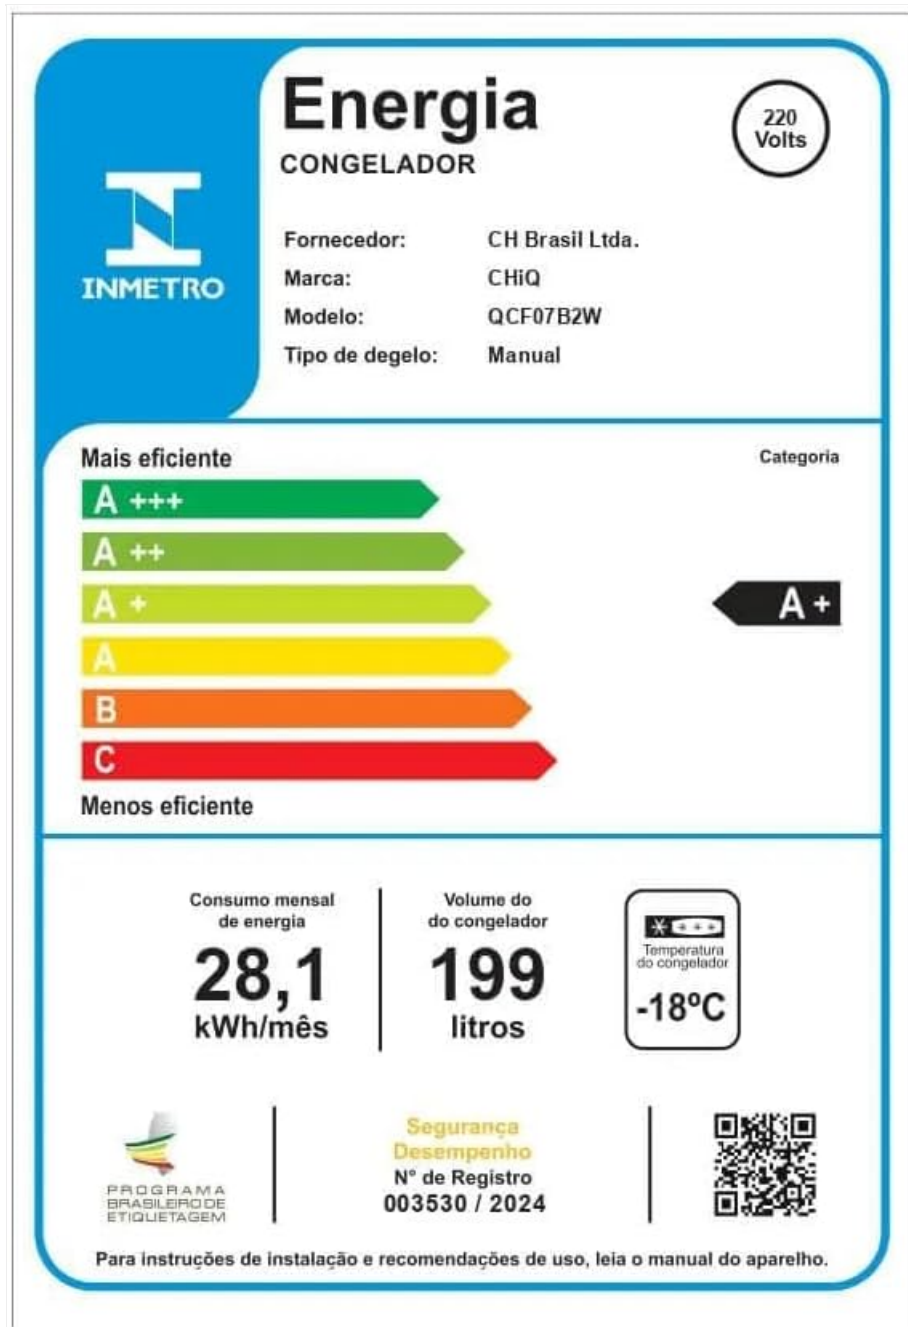


Figure 4: Close-up of the control panel, showing the temperature dial and indicator lights.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and efficiency of your chest freezer.

5.1 Cleaning the Interior

- Always unplug the freezer before cleaning.
- Remove all food items and store them in another suitable appliance.

- Wash the interior surfaces with a solution of mild detergent and warm water. Do not use abrasive cleaners or harsh chemicals.
- Rinse thoroughly with clean water and dry completely with a soft cloth.

5.2 Cleaning the Exterior

- Wipe the exterior surfaces with a soft cloth dampened with mild detergent.
- Clean the condenser coils at the back of the freezer periodically with a soft brush or vacuum cleaner to maintain efficiency.

5.3 Defrosting

- Defrost the freezer when the ice layer reaches approximately 0.5 cm (1/4 inch) thickness.
- Unplug the appliance and remove all food items.
- Leave the lid open to allow ice to melt naturally. Place towels or a shallow pan to collect water.
- Do not use sharp objects or heating devices to speed up defrosting, as this can damage the appliance.
- Once defrosted, clean and dry the interior thoroughly before plugging it back in and reloading food.

6. TROUBLESHOOTING

Before contacting service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Freezer does not operate	No power supply; Power cord loose; Circuit breaker tripped.	Check power connection; Ensure outlet is functional; Reset circuit breaker.
Appliance is not cold enough	Temperature setting too warm; Lid not closed properly; Excessive lid opening; Appliance overloaded; Poor ventilation.	Adjust temperature to a colder setting; Ensure lid is sealed; Reduce frequency of lid opening; Do not overload; Ensure adequate clearance around appliance.
Excessive noise	Appliance not level; Objects vibrating against the unit; Normal compressor operation.	Adjust leveling feet; Move objects away from the freezer; Some noise from compressor and refrigerant is normal.
Lid does not close properly	Lid gasket dirty or damaged; Appliance not level; Obstruction.	Clean or replace gasket; Level the appliance; Remove any obstructions.

7. SPECIFICATIONS

Technical details for the CHiQ QCF07B2W 199L Dual Mode Chest Freezer:

Feature	Specification
Model	QCF07B2W

Feature	Specification
Total Capacity	199 Liters
Type	Horizontal Chest Freezer (1 Door)
Operation Mode	Freezer or Refrigerator
Temperature Control	Mechanical, Adjustable
Internal Lighting	LED
Interior Finish	White PCM Lining
Dimensions (WxHxD)	82.3 cm x 84 cm x 55.6 cm
Net Weight	27 kg
Mobility	Casters and Leveling Feet
Security	Integrated Lock on Handle
Removable Storage	Yes (Basket)
Reversible Door	No
Frequency	60 Hz
Voltage	220V
Door Material	Stainless Steel



Figure 5: Energy efficiency label for the CHiQ QCF07B2W, indicating its performance and consumption.

8. WARRANTY AND SUPPORT

This CHiQ appliance comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration.

For technical assistance, spare parts, or warranty claims, please contact the retailer or authorized service center where you purchased the product. Ensure you have your proof of purchase and the appliance model number (QCF07B2W) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FKJXCQKD>

More documents and user manuals: **<https://manuals.plus/>**