

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Raynesys](#) /

› [Raynesys 4 Person Instant Cabin Tent Instruction Manual](#)

## Raynesys P732133590133

# Raynesys 4 Person Instant Cabin Tent Instruction Manual

Model: P732133590133

|  |   |                                  |                                 |                           |
|--|---|----------------------------------|---------------------------------|---------------------------|
| <a href="#">Introduction</a>           | <a href="#">Safety Information</a>        | <a href="#">Package Contents</a> | <a href="#">Setup</a>           | <a href="#">Operation</a> |
| <a href="#">Maintenance</a>            | <a href="#">Disassembly &amp; Storage</a> | <a href="#">Specifications</a>   | <a href="#">Troubleshooting</a> |                           |
| <a href="#">Warranty &amp; Support</a> |   |                                  |                                 |                           |

## 1. INTRODUCTION

---

Thank you for choosing the Raynesys 4 Person Instant Cabin Tent. This manual provides essential information for the safe and efficient setup, operation, and maintenance of your tent. Please read it thoroughly before use and retain it for future reference.



Figure 1: Raynesys 4 Person Instant Cabin Tent

## 2. SAFETY INFORMATION

---

Always prioritize safety when using your tent. Failure to follow these instructions may result in injury or damage to the product.

- **Fire Safety:** Keep all flame and heat sources away from the tent fabric. The tent is made of flammable material.
- **Ventilation:** Ensure adequate ventilation to prevent suffocation and carbon monoxide poisoning. Do not use fuel-burning devices inside the tent.
- **Weather Conditions:** Avoid setting up the tent under trees during thunderstorms or in extreme wind conditions. Secure the tent properly with all stakes and guy lines.
- **Site Selection:** Choose a level, clear area free of sharp objects, rocks, and debris.
- **Children:** Keep children away from the tent during setup and takedown. Adult supervision is required at all times.

## 3. PACKAGE CONTENTS

---

Verify that all components are present before beginning assembly:

# Package Content



Tent x1



Carrying Bag x1




Rainfly x1



Accessory Organizer Bag x1



Extension Pole Organizer Bag x1

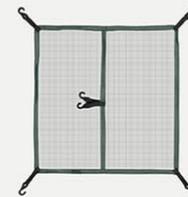

Gear Loft x1



Windproof Ropes x4



Extension Poles x4



300D Polyester Split Floor Mat x1



Ground Stakes x8

Figure 2: Included Components

- Camping Tent (x1)
- Carrying Bag (x1)
- Rainfly (x1)
- Accessory Organizer Bag (x1)
- Extension Pole Organizer Bag (x1)
- Gear Loft (x1)
- Windproof Ropes (x4)
- Extension Poles (x4)
- 300D Polyester Split Floor Mat (x1)
- Ground Stakes (x8)

## 4. SETUP INSTRUCTIONS

---

The Raynesys Instant Cabin Tent features a pre-assembled X-shaped pole structure for quick setup, typically within 60 seconds for the main tent body.

1. **Unpack the Tent:** Remove the tent from its carrying bag. Unbuckle the straps to loosen the tent.
2. **Lay Out the Tent:** Lay the tent flat on your chosen campsite.
3. **Erect the Tent Body:** From the inside of the tent, pull hard on the strap attached to the center hub until all four sidewalls pop out and lock into place. Then, push up on the top of the tent until the roof pops out and locks.
4. **Attach the Rainfly:** Place the rainfly over the top of the tent. Attach the extension poles to the rainfly and connect them to the tent structure. Secure the hooks of the rainfly to the sidewalls of the tent.
5. **Install Floor Mat (Optional):** Lay out the 300D Polyester Split Floor Mat inside the tent. Attach the floor mat to the tent using the integrated clasps.
6. **Secure with Stakes and Ropes:** Use the provided ground stakes to secure the tent to the ground at each corner and along the base. Attach the windproof ropes to the designated points on the tent and stake them into the ground to enhance stability, especially in windy conditions.

### Setup Video Guide

Your browser does not support the video tag.

Video 1: Raynesys Ultra Instant Cabin Tent Setup Guide. This video demonstrates the quick and easy setup process, including unpacking, erecting the tent body, attaching the rainfly, and securing the floor mat.

## 5. OPERATION

---

### Spacious Interior & Ventilation

The tent offers a spacious interior measuring 7.7 feet by 7.7 feet with an 82-inch center height, allowing most users to stand comfortably. It features 2 D-shaped doors, 8 triangular mesh windows, and 1 mesh tent top for enhanced airflow and natural light.



Figure 3: Spacious Interior and Ventilation

### **Water Resistance**

The tent features a superior waterproofing of 3000mm HH rating, effectively handling moderate to heavy rain. The 300D bottom fabric is wear-resistant.

Your browser does not support the video tag.

Video 2: Waterproof and Rainproof Demonstration. This video illustrates the tent's water-resistant capabilities, showing water beading and running off the fabric.

### **Internal Storage**

Utilize the internal storage pocket and gear loft for organizing small items and camping lights.

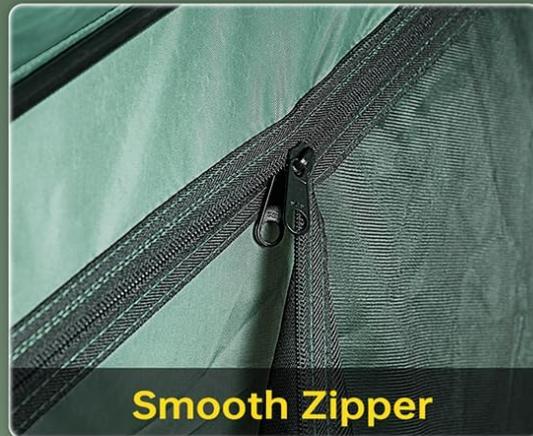


Figure 4: Detailed Features including Inner Storage Bag and Gear Loft

## 6. MAINTENANCE

---

- **Cleaning:** Hand wash only. Do not machine wash or use harsh detergents. Clean with a soft sponge, mild soap, and lukewarm water.
- **Drying:** Always ensure the tent is completely dry before packing to prevent mildew and odor. Air dry in a shaded area.
- **Storage:** Store the tent in its carrying bag in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Regularly inspect the tent for any damage to fabric, zippers, or poles. Repair minor tears promptly to prevent further damage.

## 7. DISASSEMBLY & STORAGE

---

To disassemble and store your tent:

1. **Remove Accessories:** Detach the rainfly, floor mat, gear loft, and any other accessories.
2. **Remove Stakes and Ropes:** Carefully remove all ground stakes and windproof ropes.
3. **Collapse the Tent:** From the inside, push down on the center hub to collapse the roof. Then, push in on the sidewall hubs to fold the tent flat.
4. **Fold and Pack:** Fold the tent neatly and secure it with the integrated straps. Place all components back into the carrying bag.

### Disassembly Video Guide

Your browser does not support the video tag.

Video 3: Raynesys Camping Tent Disassembly and Packing. This video demonstrates how to quickly disassemble the tent and pack it into its compact carrying bag for easy transport.

## 8. SPECIFICATIONS

---

| Feature                     | Detail                            |
|-----------------------------|-----------------------------------|
| Brand                       | Raynesys                          |
| Model Name                  | Camping Tent                      |
| Product Dimensions (LxWxH)  | 92.4"L x 92.4"W x 82"H            |
| Item Weight                 | 372.14 Ounces (approx. 23.26 lbs) |
| Occupancy                   | 4 Person                          |
| Seasons                     | 4 Season                          |
| Water Resistance Technology | 3000 millimeters                  |
| Material                    | 300D fabric (tent and floor)      |
| Pole Material Type          | Aluminum or Fiberglass            |
| Assembly Time               | 60 Seconds (main tent body)       |
| Special Feature             | 60s Quick Setup, Removable Floor  |

## 9. TROUBLESHOOTING

---

- **Tent Not Erecting Properly:** Ensure all pole sections are fully extended and locked. Check that the center hub strap is pulled firmly until all sidewalls click into place.
- **Water Leakage:** Verify the rainfly is correctly installed and taut. Check for any small tears or punctures in the fabric and repair as needed. Ensure zippers are fully closed.
- **Difficulty Packing:** Ensure all air is expelled from the tent fabric before folding. Fold neatly and tightly to fit into the carrying bag.
- **Condensation Inside:** Ensure proper ventilation by opening mesh windows or doors when

weather permits.

## 10. WARRANTY & SUPPORT



The Raynesys 4 Person Instant Cabin Tent comes with a **1-year warranty** from the date of purchase, covering manufacturing defects.

For warranty claims, technical support, or any questions regarding your product, please contact Raynesys customer service through the retailer where the product was purchased or visit the official Raynesys store online: [Raynesys Store](#).

Please have your purchase receipt and model number (P732133590133) available when contacting support.

© 2025 Raynesys. All rights reserved.

### Related Documents - P732133590133
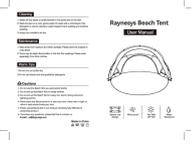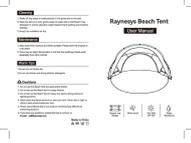
|   |  |
|---|--|
|   | <p><a href="#">Raynesys Beach Tent User Manual - Setup, Care &amp; Installation</a></p> <p>Official user manual for the Raynesys Beach Tent. Provides detailed instructions on cleaning, maintenance, important safety cautions, package contents, and step-by-step setup. Features include wind-proof design and UPF 50+ sun protection.</p>  |
|  | <p><a href="#">Raynesys Beach Tent User Manual - Care, Maintenance, and Setup Guide</a></p> <p>Comprehensive user manual for the Raynesys Beach Tent, covering cleaning instructions, maintenance tips, important cautions, package contents, and step-by-step setup instructions. Learn how to properly care for and use your beach tent for optimal performance and longevity.</p> |
|  | <p><a href="#">Raynesys Folding Wagon Cart User Manual - Assembly, Features, and Safety</a></p> <p>Comprehensive user manual for the Raynesys Folding Wagon Cart, covering parts identification, step-by-step unfolding and folding instructions, product features, technical specifications, and important safety warnings.</p>   |