

[Manuals.plus](#) /

› [LBEKA](#) /

› LBEKA W03B Cat Water Fountain Filters User Manual

## LBEKA W03B

# LBEKA W03B Cat Water Fountain Filters

## USER MANUAL

### Introduction

---

This manual provides essential instructions for the proper installation, operation, and maintenance of your LBEKA W03B Cat Water Fountain Filters. Please read this manual thoroughly before use to ensure optimal performance and longevity of your product. These filters are designed for the LBEKA 102oz/3L Pet Water Fountain.

### Important Safety Information

---

- Read all instructions carefully before using the product.
- Keep the product and its components out of reach of children and pets when not in use or during maintenance.
- Use only genuine LBEKA replacement filters and sponges.
- Ensure the fountain is unplugged from the power source before cleaning or performing any maintenance.
- Do not immerse the main unit (motor/pump housing) in water.

### Package Contents

---

Your LBEKA Cat Water Fountain Filters package includes:

- 8 x Replacement Filters
- 8 x Replacement Sponges

*Note: The LBEKA W03B Cat Water Fountain itself, along with its mainframe, stainless steel sink, brush head, instruction manual, and data cable, are sold separately or included with the fountain purchase.*




An 8-pack of LABEKA cat water fountain replacement filters and sponges, designed for the W03B pet fountain.

## Setup and Installation

### Preparing the Filter

1. Take out a new filter cartridge from its packaging.
2. Soak the filter in a clean bowl of water for 5 minutes. This helps to remove any carbon dust and ensures optimal filtration.
3. Rinse the soaked filter under running water for 30 seconds.

# Pure Water Cycle

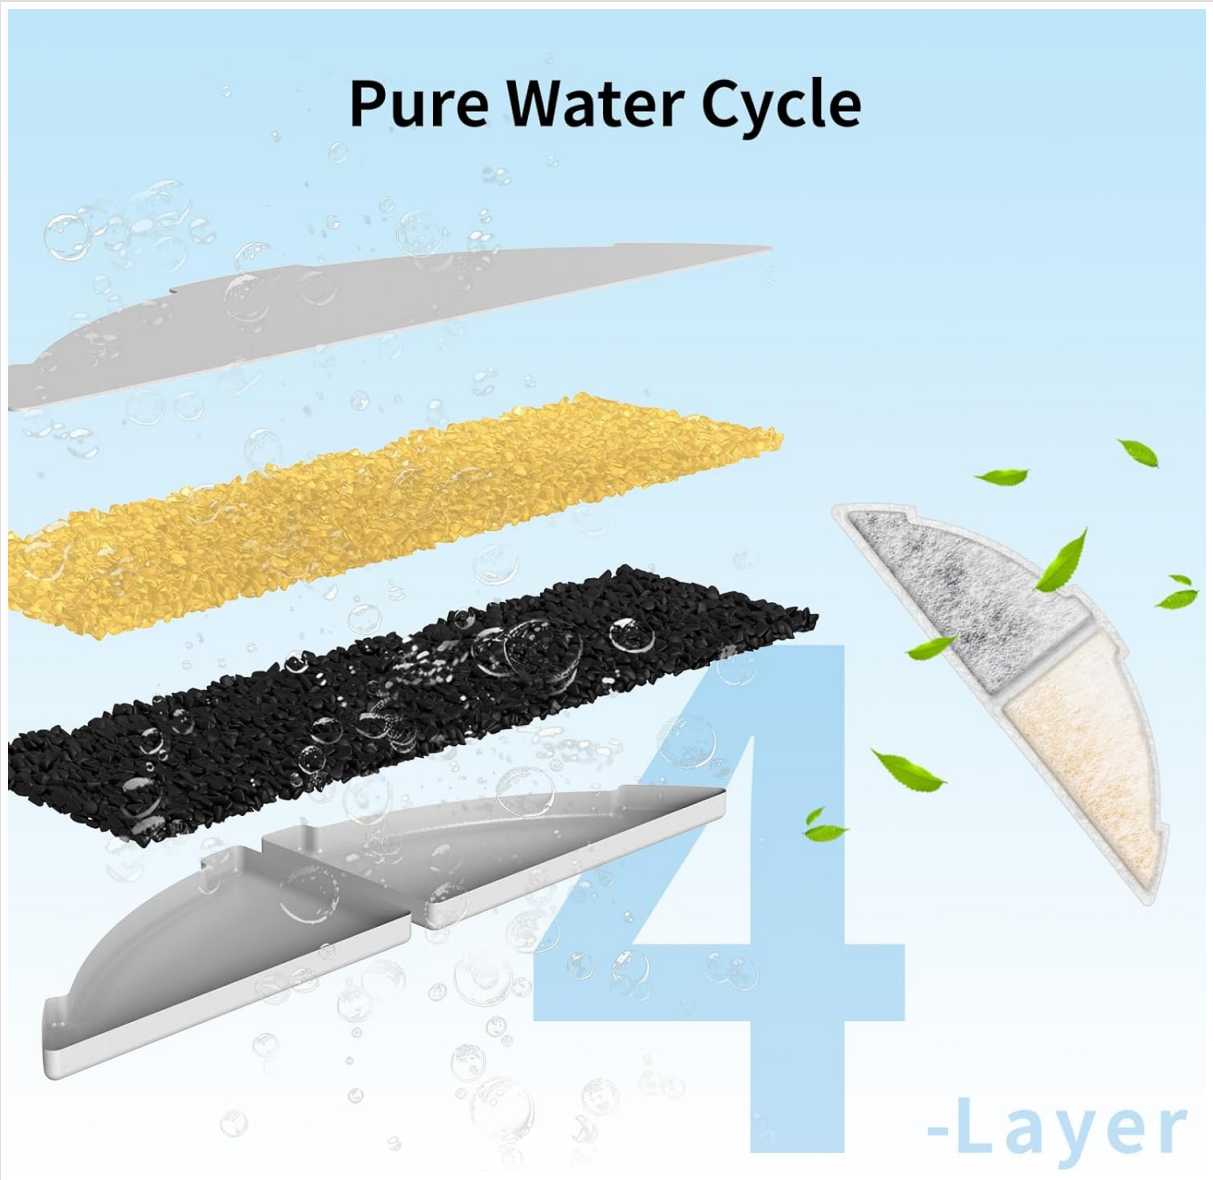

A cat drinking from a LABEKA fountain, with a note indicating to soak the filter for 5 minutes before use to remove carbon dust.

# Suggestions for use

Rinse the filter to remove surface dust before use



A hand rinsing a LABEKA filter under a faucet, with sponges visible nearby, emphasizing the need to remove surface dust.

## Installing the Filter into the Fountain

1. Open the lid of the filter cartridge upwards.
2. Place the prepared filter element into the filter tray concavity.
3. Close the lid securely.
4. Fill the water tank with clean drinking water, ensuring not to exceed the maximum water level indicated.
5. Place the top cover back onto the water tank.
6. Place the stainless steel tray on top of the fountain.
7. Connect the power adapter to a power outlet.

# Instructions

- 1 Open the packaging and take out the filter cartridge




- 2 Soak the filter element in water for 5 minutes



- 3 Install the filter element into the water dispenser



- 4 Replace the filter element in 1-2 weeks

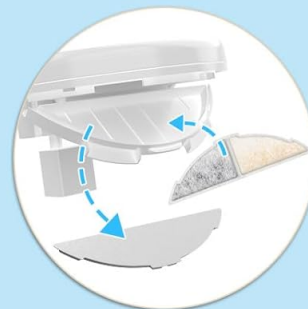

Attention:\* Please store dry

Four-step visual guide for installing the filter element into the water dispenser, including soaking, opening the cartridge, inserting the filter, and replacing it.

## Visual Guide: Fountain Assembly

Your browser does not support the video tag.

Detailed video guide on assembling the LABEKA cat water fountain and cleaning its pump components to ensure optimal performance. This segment focuses on assembly.

## Operating Instructions

After proper assembly and filling, you can operate your LABEKA W03B Cat Water Fountain using the control panel.

### Power On/Off and Mode Selection

1. **Power On/Off:** Long press the Function/On/Off button for 3 seconds to turn the fountain on or off.
2. **Sensing Mode:** The fountain dispenses water when motion is detected.
3. **Timed Mode:** Water is dispensed at set intervals.
4. **Continuous Water Dispensing Mode:** Water flows continuously. This mode requires the Type C cable to be plugged in.

## Visual Guide: Fountain Operation

Your browser does not support the video tag.

Video demonstrating the assembly, water filling, and selection of operating modes (sensing, timed, continuous) for the LABEKA wireless cat water fountain. This segment focuses on operation and mode selection.

## Maintenance and Cleaning

Regular maintenance ensures your pet always has access to clean, fresh water and prolongs the life of your fountain.

### Filter Replacement

- To ensure peak performance and water quality, replace the filter every 2-4 weeks.
- For households with multiple pets, or if the water appears cloudy, consider replacing the filter more frequently.
- Always prepare new filters by soaking and rinsing them as described in the 'Preparing the Filter' section before installation.

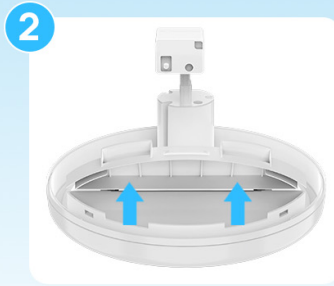


Image showing a LABEKA pet fountain with an arrow pointing to a filter, indicating replacement every 1-2 weeks.

## Cat Water Fountain Filters Installation Steps



1 Soak the filter in a clean bowl of water for 5 minutes



2 Open the lid of the filter cartridge upwards



3 Put the filter in and close the lid

Diagram illustrating the multi-layer filtration system of the LABEKA fountain, including foam filter, activated carbon adsorption sponge, coconut activated carbon, medical stone, and silver ion ceramic antibacterial balls.

### Pump Cleaning

- To prevent pump blockage and ensure consistent water flow, clean the pump once a week.
- Disassemble the pump components carefully. Use the provided cleaning brush to remove any debris or buildup.
- Rinse all pump components thoroughly with clean water before reassembling.
- **Important: The main unit of the fountain (containing electronics) is not washable. Only clean the removable components.**

### Visual Guide: Pump Cleaning

Your browser does not support the video tag.

Detailed video guide on assembling the LABEKA cat water fountain and cleaning its pump components to ensure optimal performance. This segment focuses on pump cleaning.

### Troubleshooting

If you encounter issues with your LABEKA W03B Cat Water Fountain, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fountain not dispensing water	No power; water level too low; pump clogged; filter clogged.	Check power connection; refill water; clean the pump; replace the filter.
Water flow is weak	Pump clogged; filter clogged; low water level.	Clean the pump; replace the filter; refill water.
Unusual noise from fountain	Low water level; pump not properly installed; debris in pump.	Refill water; reassemble pump correctly; clean the pump.
Water appears cloudy or has odor	Filter needs replacement; fountain needs cleaning.	Replace the filter; thoroughly clean the fountain and all components.

### Product Specifications

Feature	Detail
---------	--------

Feature	Detail
Brand	LABEKA
Model Name	W03B
Item Weight	0.06 Kilograms (2.08 ounces)
Item Dimensions (LxWxH)	1.97 x 4.33 x 6.3 inches
Material	Stainless Steel (for fountain components, filters are multi-material)
Included Components	8 Filters
Care Instructions	Hand Wash (for fountain components, filters are disposable)
Power Source	Gravity-Fed (for water flow, fountain itself is powered)

## Warranty and Customer Support

LABEKA is committed to providing high-quality products and excellent customer service.

- **Customer Service:** LABEKA offers 24/7 friendly customer support for any issues or questions you may have.
- **Maintenance:** Enjoy 12-Months free maintenance for your LABEKA products.
- **Return Policy:** A 7-Day Return Policy is available for your convenience.

For further assistance or to explore more LABEKA products, please visit the [LABEKA Store](#).