

[Manuals.plus](#) /

› [Max Build More](#) /

› MAX Build More Premium Retro Series 2 Building Set Instruction Manual

Max Build More 83228

MAX Build More Premium Retro Series 2 Building Set Instruction Manual

Model: 83228 | Brand: Max Build More

1. PRODUCT OVERVIEW

The MAX Build More Premium Retro Series 2 by ZURU offers an engaging unboxing and building experience with collectible mini bricks. Each capsule contains up to 188 premium pieces and instructions to construct one of four iconic retro designs: a game console, a cassette player, a vintage camera, or an electric guitar. These building sets are designed to stimulate creativity and provide a satisfying construction process, resulting in display-worthy models.

MAX Premium bricks are compatible with leading brick brands, making them a versatile addition to any existing collection. This series is suitable for ages 8 and up, appealing to collectors, builders, and those seeking nostalgic decor.



Image: Two individuals showcasing their assembled MAX Build More Retro Series models.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years.

Always supervise young children during play to prevent accidental ingestion of small parts. Keep all packaging materials away from children.

3. WHAT'S INCLUDED

Each MAX Build More Premium Retro Series 2 capsule contains:

- Up to 188 premium building pieces.
- Easy-to-understand assembly instructions for one retro design (game console, cassette player, vintage camera, or electric guitar).

The specific design included in each capsule is a mystery, adding to the unboxing excitement.

4. SETUP AND ASSEMBLY

Assembly is required for each model. Follow the included instructions carefully for the specific retro design you receive. The instructions are designed to be clear and easy to follow.

General Assembly Steps:

1. **Unpack:** Carefully open the capsule and remove all building pieces and the instruction booklet.
2. **Sort:** It is recommended to sort the pieces by color or shape to facilitate the building process.
3. **Follow Instructions:** Refer to the step-by-step diagrams in your instruction booklet. Each step will show which pieces to use and where to place them.
4. **Connect Pieces:** Ensure pieces are firmly pressed together to create a stable structure.
5. **Verify:** Double-check each step against the instructions to ensure accuracy.

Example Assembly Diagrams:

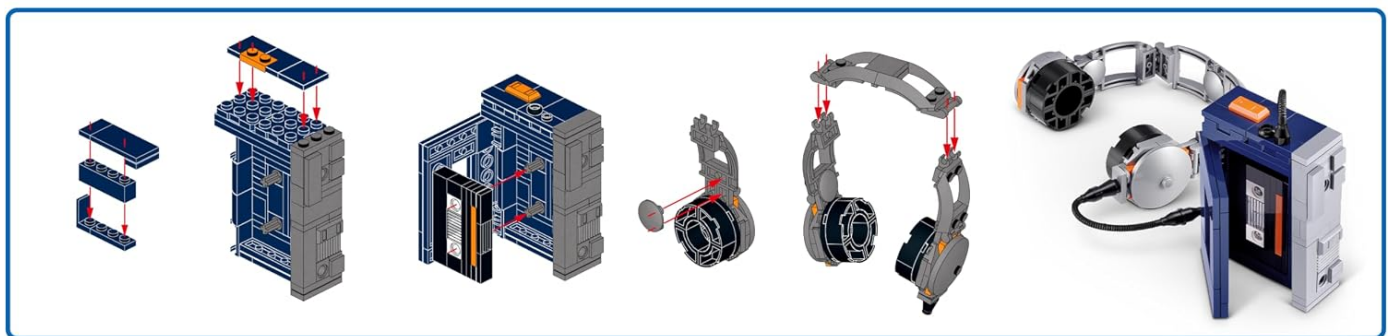 
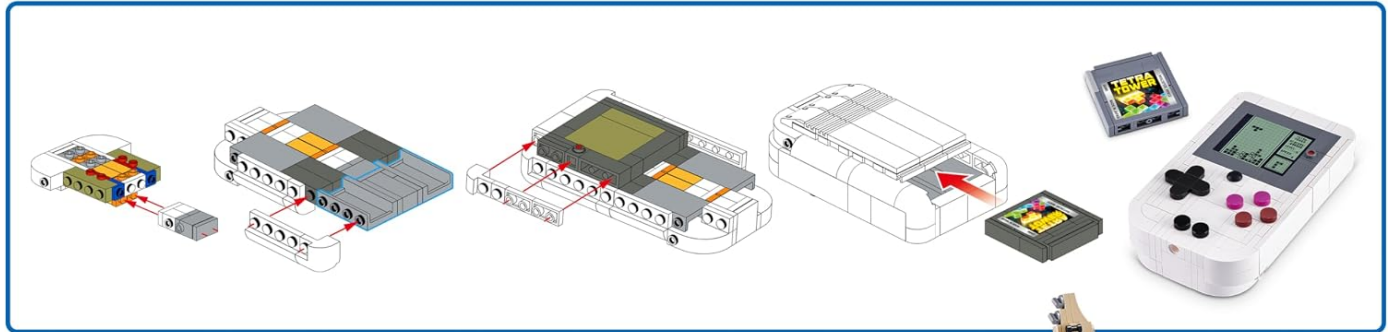 
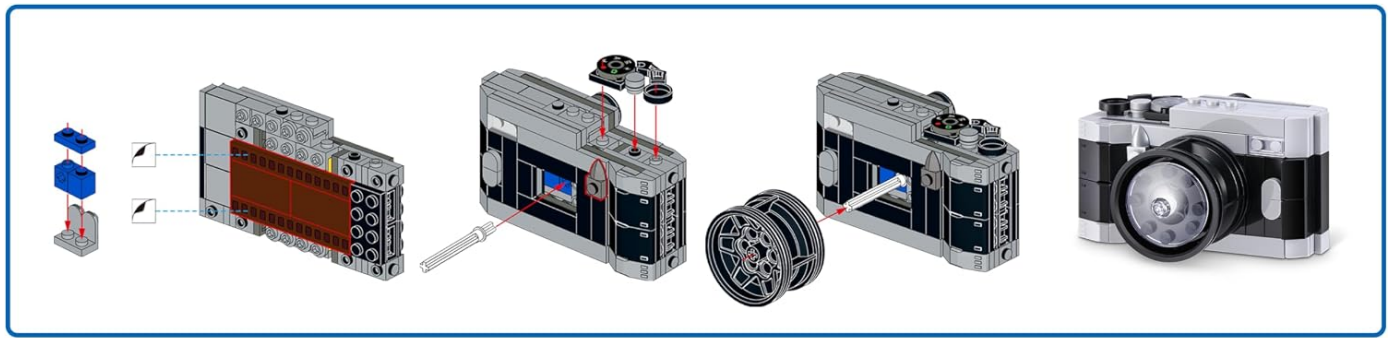 


Image: Assembly steps for the Vintage Camera model.



Image: Assembly steps for the Retro Game Console model.



Image: Assembly steps for the Electric Guitar model.



Image: Assembly steps for the Cassette Player and Headphones model.

5. OPERATING AND PLAY

Once assembled, your MAX Build More Retro Series model is ready for display or imaginative play. These models are designed for creative engagement and can be integrated with other leading brick brands.

- **Display:** Showcase your completed retro model on a shelf, desk, or in a display cabinet.
- **Imaginative Play:** Use the models as props in creative storytelling and role-playing scenarios.
- **Collect:** There are four unique designs in Series 2 to collect and build.



Image: The Vintage Camera model displayed on books.

6. MAINTENANCE

To ensure the longevity and appearance of your MAX Build More models, follow these simple maintenance guidelines:

- **Cleaning:** Dust your models regularly with a soft, dry cloth or a soft brush. For more thorough cleaning, gently wipe with a damp cloth and mild soap, then rinse and air dry completely. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store models in a cool, dry place away from direct sunlight to prevent discoloration or material degradation.
- **Handling:** Handle assembled models carefully to avoid pieces detaching.

7. TROUBLESHOOTING

If you encounter any issues during assembly or play, consider the following:

- **Missing Pieces:** Double-check the packaging and surrounding area. If pieces are genuinely missing, contact customer support.
- **Difficulty Connecting Pieces:** Ensure pieces are correctly oriented and apply firm, even pressure. Some new pieces may require a bit more force initially.
- **Model Instability:** Review the assembly instructions to ensure all steps were followed correctly and pieces are securely attached. Disassemble and reassemble problematic sections if necessary.

8. SPECIFICATIONS

Brand	Max Build More
Model Number	83228
Product Dimensions	29 x 28 x 12 cm
Item Weight	1 Kilogram
Material Type	Plastic
Manufacturer Recommended Age	8 years and up
Educational Objectives	Creativity and fine motor skill development, imaginative play
Assembly Required	Yes
Batteries Required	No

9. WARRANTY AND SUPPORT

For information regarding warranty, replacement parts, or customer support, please refer to the contact details provided on the product packaging or visit the official Max Build More website.

Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question