

PU18-33CB-RC

Hotsmtbang Remote Control for Greentouch Scott Living Fireplace (Model PU18-33CB-RC) - User Manual

1. PRODUCT OVERVIEW

This manual provides instructions for the Hotsmtbang replacement remote control, model PU18-33CB-RC, designed for Greentouch Scott Living Infrared Electric Fireplaces, including models like 1267FM-28-201, 1317FM-33-202, 1031288, and 3322-CG-BB. This remote is pre-programmed and requires no additional setup or programming. Simply insert batteries to begin operation.

2. SETUP: BATTERY INSTALLATION

The remote control requires two AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to remove it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 2.1: Battery compartment with cover removed, showing battery insertion points.

After battery installation, the remote is ready for use without any further programming.

3. OPERATING INSTRUCTIONS

This remote control features a simple button layout for controlling your compatible fireplace. Point the remote directly at the infrared receiver on your fireplace and press the desired function button.

- **Power Button:** Turns the fireplace ON or OFF.
- **Heat Button:** Adjusts the heat settings.
- **Flame Button:** Controls the flame effects.

Ensure there are no obstructions between the remote control and the fireplace's infrared receiver for optimal performance.

4. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's range decreases or it becomes unresponsive. Always replace both batteries at the same time with new ones.
- **Storage:** Store the remote in a dry place away from extreme temperatures and direct sunlight. If storing for extended periods, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

If you experience issues with your remote control, refer to the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there is a clear line of sight between the remote and the fireplace's infrared receiver. Remove any obstructions.
 - Verify that you are within the maximum operating range of 8 meters.
- **Intermittent Functionality:**
 - This may indicate low battery power. Replace the batteries.
 - Ensure the remote is not being used in an area with strong infrared interference.

If problems persist after trying these steps, please contact the seller for further assistance.

6. SPECIFICATIONS

Brand	Generic
Model Number	PU18-33CB-RC

Special Feature	No Programming Required
Compatible Devices	Fireplace (Greentouch Scott Living Infrared Electric Fireplaces)
Connectivity Technology	Infrared
Controller Type	Button Control
Button Quantity	3
Maximum Range	8 meters
Battery Type	2 AAA batteries (not included)
Color	As shown

7. COMPATIBILITY

This remote control is designed as a replacement for various Greentouch Scott Living Infrared Electric Fireplace models, including but not limited to: 1267FM-28-201, 1317FM-33-202, 1031288, and 3322-CG-BB. It is also compatible with PU18-33CB-RC models.

If you are unsure about the compatibility of this remote with your specific fireplace model, please contact the seller for verification before use.

8. SUPPORT

For any questions, concerns, or technical support regarding this remote control, please contact the seller directly through the platform where the purchase was made. Provide your order details and a clear description of the issue for prompt assistance.