

MONODEAL CD319

MONODEAL CD319 Portable CD Player User Manual

Model: CD319

1. INTRODUCTION

Thank you for choosing the MONODEAL CD319 Portable CD Player. This device offers versatile audio playback options including CD, Bluetooth, FM Radio, USB, and AUX, along with a built-in white noise function. Designed for both home and portable use, it features dual stereo speakers and a rechargeable battery for extended listening enjoyment.

2. WHAT'S IN THE BOX

- CD Player (MONODEAL CD319)
- 3.5mm Audio Cable
- Charging Cable (USB Type-C)
- Instruction Manual
- Remote Control



Image: All items included in the product packaging.

3. PRODUCT OVERVIEW

The MONODEAL CD319 features a compact design with intuitive controls and multiple connectivity options.

3.1 Front Panel Controls



Image: Top view of the CD player with main controls.

- **LCD Display:** Shows current mode, track number, volume level, and FM frequency.
- **Power Button:** Turns the device on/off.
- **Mode Button:** Switches between CD, Bluetooth, FM, USB, AUX, and White Noise modes.
- **Play/Pause Button:** Starts or pauses playback.
- **Previous/Next Track Buttons:** Skips to the previous or next track/station. Long press for fast forward/rewind.
- **Repeat Button:** Cycles through repeat modes (e.g., repeat one, repeat all, shuffle).
- **Volume Knob:** Rotates to adjust volume. Press to switch modes.
- **CD Compartment:** Press the open button to access the CD tray.

3.2 Rear Panel Connections

Battery Power Comparison



Image: Rear view of the CD player with connection ports labeled.

- **Headphone Jack (3.5mm):** Connect headphones for private listening.
- **AUX Input (3.5mm):** Connect external audio devices via the included AUX cable.
- **USB Port:** Insert a USB drive for MP3/WMA playback.
- **ON/OFF Switch:** Main power switch for the device.
- **DC IN (USB Type-C):** Connect the charging cable to power the device or recharge the internal battery.

3.3 Dual Stereo Speakers

All in one CD player



Image: The CD player's dual stereo speakers producing sound.

The CD319 is equipped with dual HIFI stereo speakers, providing clear and rich audio without the need for external speakers.

4. SETUP

4.1 Charging the Device

Before first use, fully charge the CD player. Connect the provided USB Type-C charging cable to the DC IN port on the rear of the device and plug the other end into a compatible USB power adapter (not included) or a computer USB port. The battery indicator on the LCD display will show charging status.



Image: Battery and charging information.

A full charge provides up to 12 hours of continuous playback.

4.2 Powering On/Off

Slide the ON/OFF switch on the rear panel to the 'ON' position. Press the Power button on the front panel or the remote control to turn the device on. Press and hold the Power button to turn it off.

5. OPERATING MODES

The MONODEAL CD319 supports multiple playback modes. Press the 'MODE' button on the device or remote to cycle through them.



Image: Display showing different operating modes.

5.1 CD Playback

1. Slide the 'OPEN' button to open the CD compartment lid.
2. Carefully place a CD (CD/CDR/HDCD/MP3/WMA compatible) onto the spindle with the label side facing up.
3. Close the CD compartment lid firmly.
4. Press the 'MODE' button until 'CD' appears on the display.
5. The CD player will automatically begin playback. Use the Play/Pause, Previous/Next, and Repeat buttons to control playback.

Anti-Skip Technology: The CD319 features intelligent anti-jump protection (40 seconds for CD, 120

seconds for MP3) to ensure smooth playback even in motion.

Dual 3W speakers deliver crystal-clear stereo sound with punchy bass for any vibe.



Image: Play modes and compatible formats.

5.2 Bluetooth Connectivity

The CD319 functions as both a Bluetooth transmitter and receiver.

5.2.1 Bluetooth Receiver Mode (Play audio from your phone/tablet)

1. Press the 'MODE' button until 'BT' appears on the display. The device will enter pairing mode.
2. On your smartphone or tablet, enable Bluetooth and search for 'CD319'.
3. Select 'CD319' to pair. Once connected, you can stream audio from your device to the CD player's speakers.

5.2.2 Bluetooth Transmitter Mode (Play CD/USB/FM audio on Bluetooth headphones/speakers)

1. Ensure the CD319 is in CD, USB, or FM mode.
2. Press and hold the 'MODE' button for 3 seconds. The display will show 'BT' and start searching for Bluetooth devices.
3. Put your Bluetooth headphones or speaker into pairing mode.
4. The CD319 will automatically connect to the nearest discoverable Bluetooth device.

5.3 FM Radio

1. Press the 'MODE' button until 'FM' appears on the display.
2. Use the Previous/Next Track buttons to manually tune to a station.
3. Long press the Previous/Next Track buttons to auto-scan for the next available station.



Image: FM Radio function with frequency range.

5.4 USB Playback


1. Insert a USB flash drive into the USB port on the rear panel.
2. Press the 'MODE' button until 'USB' appears on the display.
3. The device will automatically detect and play compatible audio files (MP3/WMA).



Image: USB connection for playback.

5.5 AUX Input

1. Connect one end of the 3.5mm AUX cable to the AUX IN port on the rear panel of the CD319.
2. Connect the other end to the headphone jack or audio output of your external device (e.g., smartphone, MP3 player).
3. Press the 'MODE' button until 'AUX' appears on the display.
4. Control playback and volume from your external device.

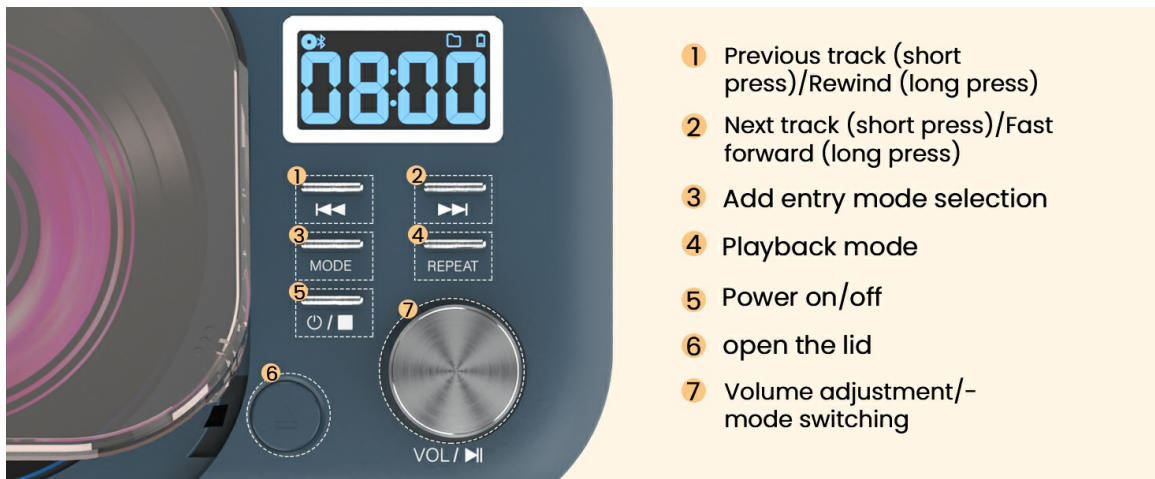

- 1 Previous track (short press)/Rewind (long press)
- 2 Next track (short press)/Fast forward (long press)
- 3 Add entry mode selection
- 4 Playback mode
- 5 Power on/off
- 6 open the lid
- 7 Volume adjustment/-mode switching

Image: AUX connection in a car setting.

5.6 White Noise Function

The CD319 includes 7 built-in white noise sounds to aid relaxation, sleep, or focus.



Image: White noise options for relaxation.

1. Press the 'MODE' button until 'AN1' (or similar) appears on the display, indicating White Noise mode.
2. Use the Previous/Next Track buttons to cycle through the 7 different white noise sounds.

3. Adjust the volume using the volume knob.

6. REMOTE CONTROL

The included remote control allows for convenient operation of all functions from a distance.



Image: CD player with its remote control.

- **Power Button:** Turns the device on/off.
- **Mode Button:** Cycles through playback modes.
- **Mute Button:** Mutes/unmutes audio.
- **Volume +/-:** Adjusts volume up or down.
- **Previous/Next Track:** Skips tracks/stations.
- **Play/Pause:** Starts or pauses playback.
- **Repeat:** Cycles through repeat options.
- **EQ:** Selects equalizer presets.
- **Sleep:** Sets a sleep timer.
- **A-B:** Repeats a specific section of audio.

- **PROG:** Programs track playback order.

7. MAINTENANCE

- Keep the device away from water, moisture, and direct sunlight.
- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- To clean the CD lens, use a specialized CD lens cleaning kit.
- Avoid dropping the device or subjecting it to strong impacts.
- When not in use for extended periods, store the device in a cool, dry place and fully charge it every 3 months to maintain battery health.

8. TROUBLESHOOTING

- **No Power:**
 1. Ensure the ON/OFF switch on the rear is in the 'ON' position.
 2. Check if the battery is charged. Connect the USB-C charging cable.
 3. Press the Power button on the device or remote.
- **CD Not Playing/Skipping:**
 1. Ensure the CD is clean and free of scratches or smudges.
 2. Make sure the CD is inserted correctly with the label side up.
 3. Close the CD compartment lid completely.
 4. Ensure the device is in 'CD' mode.
- **No Sound:**
 1. Check the volume level on the device and any connected external speakers/headphones.
 2. Ensure the device is not muted.
 3. Verify correct mode selection (CD, BT, FM, USB, AUX).
 4. If using AUX, ensure the cable is securely connected and the external device's volume is up.
- **Bluetooth Pairing Issues:**
 1. Ensure the device is in 'BT' mode for receiving or 'BT' (after long press MODE) for transmitting.
 2. Make sure the external Bluetooth device is in pairing mode and within range.
 3. Disconnect and re-pair the devices.
- **FM Radio Poor Reception:**
 1. Adjust the position of the device to improve signal reception.
 2. Ensure there are no strong interference sources nearby.

9. SPECIFICATIONS

Feature	Specification
Brand	MONODEAL
Model Name	CD319
Connectivity Technology	Auxiliary, Bluetooth, USB
Special Features	Anti-Skip Protection, Built-In Radio, CD-R/RW Compatible, Rechargeable, White Noise Function
Number Of Discs	1
Supported Audio Format	CD/CDR/HDCD/MP3/WMA
Connector Type	USB Type-B, USB Type-C (Charging)
Compatible Devices	Headphone, Laptop, Smartphone, Speaker, Tablet
Headphones Jack	3.5mm Jack
Battery Capacity	4000mAh (Up to 12 hours playback)

10. WARRANTY AND SUPPORT

MONODEAL offers a 12-month replacement warranty and lifetime technical support for this product.

For any questions or issues, please contact customer service.

Some customers may also be eligible for an extended warranty if registered within a specific timeframe after purchase. Please refer to any included warranty cards or contact the seller for details.



Image: Customer support information.

11. PRODUCT VIDEO OVERVIEW

Watch this video for a detailed overview of the MONODEAL CD319 Portable CD Player's features and functions.

Video: CD319 Portable CD Player with Dual Stereo Speakers by YJTime Direct.

© 2026 MONODEAL. All rights reserved.