

Aokitec AK00334

Aokitec Electric Nail Clipper User Manual

Model: AK00334

1. INTRODUCTION

Thank you for choosing the Aokitec Electric Nail Clipper. This device is designed for safe and efficient nail trimming, featuring a hidden blade, two-speed settings, LED illumination, and effective debris collection. This manual provides essential information for the proper use, maintenance, and care of your device.

2. SAFETY INFORMATION

- The device features a hidden blade design to prevent accidental injuries. Only the nail should enter the trimming slot.
- Keep out of reach of children. This is not a toy.
- Do not attempt to disassemble or modify the device.
- Avoid contact with water or other liquids.
- Ensure the device is fully charged before use to maintain optimal performance.
- If you experience any discomfort or pain during use, discontinue immediately.



The Aokitec Electric Nail Clipper features a hidden blade for safe trimming, with options for low speed (soft nails) and high speed (thick nails).

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Aokitec Electric Nail Clipper:



Detailed diagram of the Aokitec Electric Nail Clipper components, including the magnetic protective cover, blade, storage box, power button, and charging port.

- **Magnetic Protective Cover:** Protects the trimming head and can be opened with one hand.
- **Indicator Port:** Displays device status.
- **Blade:** Hidden for safety, designed for nail-only entry.
- **Storage Box:** Collects nail debris.
- **Floodlight (LED Light):** Illuminates the trimming area.
- **Trim Switch:** Activates the trimming function.
- **Power Button & Speed Adjustment Button:** Controls power and switches between two speeds.
- **Charging Port:** USB-C port for recharging the device.

4. SETUP

4.1 Charging the Device

Before first use, fully charge the Aokitec Electric Nail Clipper. Use the provided USB cable to connect the device to a power source (e.g., power bank, car charger, laptop, USB charger). The indicator light will show charging status.



The device is USB rechargeable, offering convenient charging from various sources like power banks, car chargers, laptops, or wall adapters.

A full charge provides up to three hours of continuous use.

5. OPERATING INSTRUCTIONS

Follow these steps for safe and effective nail trimming:

1. **Power On:** Long press the power button to turn on the device. The LED light will illuminate.
2. **Select Speed:** The device has two speed levels. Press the power button briefly to switch between low speed (for soft, thin nails) and high speed (for thick, hard nails). The vibration intensity will indicate the selected speed.
3. **Trim Nails:** Gently place your nail against the grinding head. Move your finger slowly to trim the nail to the desired length and shape. The hidden blade ensures only the nail is trimmed.
4. **Power Off:** After trimming, long press the power button to turn off the device.

Easy Application




1. Long press to turn on



2. Select the proper speed, low for soft nails, high for adults thick nails



3. Gently place the nail against the grinding head and trim
Tips: Finish trimming, long press to turn off

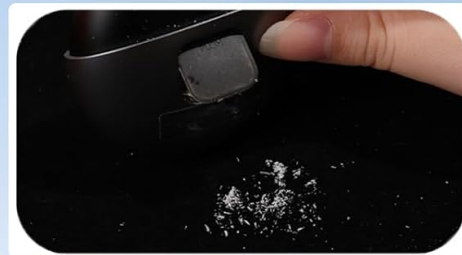

4. Press down the PUSH symbol position to open, empty nail debris, and use the cleaning brush to wipe the grinding head

Visual guide for easy application: Power on, select speed, trim nails, and empty debris.

5.1 LED Illumination

The integrated soft LED light provides clear visibility of the nail, allowing for safe trimming even in low-light conditions. This feature is particularly beneficial for users with low vision.



45 dB & Magic Cover & LED Light & Vibration Indicator



~45dB Low Noise



Magic Cover for easy one-handed operation



Soft LED Lighting



Vibration Indicator


The soft LED light ensures safe trimming in various lighting conditions, while the device operates at a low noise level (45

6. MAINTENANCE

6.1 Cleaning the Debris Collection Box

The Aokitec Electric Nail Clipper is designed with a closed system that collects over 90% of nail debris, preventing splashes and maintaining hygiene. To empty the debris:

1. Locate the 'PUSH' symbol on the device.
2. Press down on the 'PUSH' symbol to open the nail debris storage box.
3. Empty the collected debris into a waste bin.
4. Use the provided cleaning brush to wipe the grinding head and ensure no residue remains.
5. Close the storage box securely after cleaning.

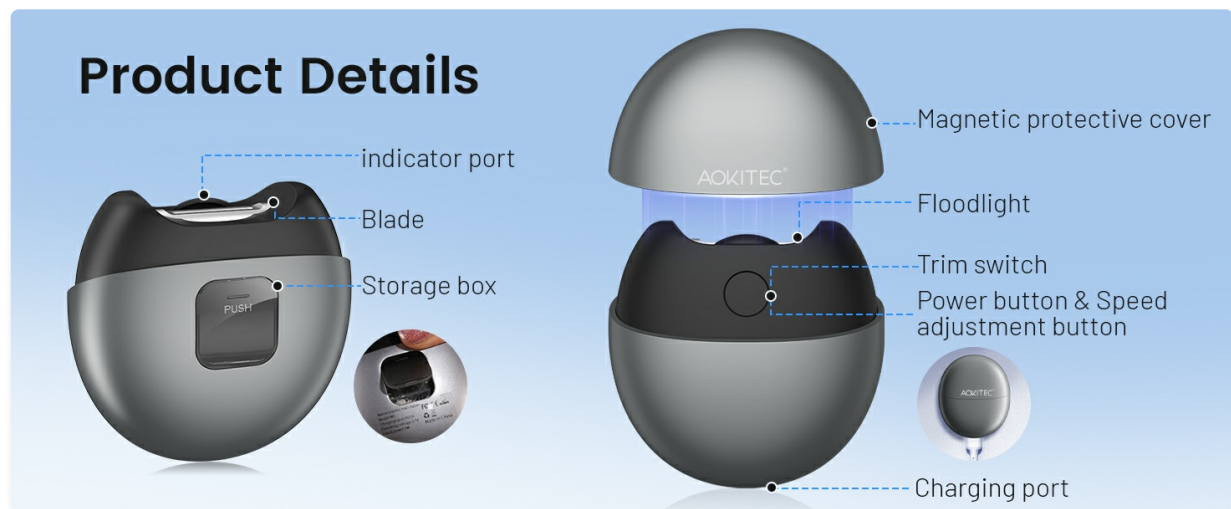

The device efficiently collects over 90% of nail debris, ensuring a hygienic and mess-free experience.

6.2 General Cleaning

Wipe the exterior of the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the device is completely dry before storage.

7. TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. Connect it to a power source and allow it to charge for at least 30 minutes before attempting to power on again.
- **Poor trimming performance:** Check if the debris collection box is full and clean it if necessary. Ensure the grinding head is free of obstructions.
- **Unusual noise or vibration:** Turn off the device immediately. Check for any foreign objects in the trimming area. If the issue persists, contact customer support.

8. SPECIFICATIONS

Model Number	AK00334
--------------	---------

Brand	Aokitec
Dimensions	10.8 x 9.6 x 3.7 cm
Weight	150 g
Battery Capacity	300 mAh
Usage Time	Up to 3 hours on a single charge
Noise Level	Approximately 45 dB
Debris Collection Rate	> 90%
Charging Port	USB-C

9. WARRANTY AND SUPPORT

Aokitec products are manufactured to high-quality standards. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Aokitec website. Please have your model number (AK00334) and purchase date ready when contacting support.