

[Manuals.plus](#) /

› [LocoLee](#) /

› LocoLee Light Kit for LEGO 10358 Transformers: Soundwave - Standard Version Instruction Manual

LocoLee Standard Version Light Kit

LocoLee Light Kit for LEGO 10358 Transformers: Soundwave - Standard Version Instruction Manual

Model: Standard Version Light Kit

1. INTRODUCTION

This instruction manual provides detailed guidance for installing and operating your LocoLee Standard Version LED Lighting Kit, designed specifically for compatibility with the LEGO 10358 Transformers: Soundwave model.

Important: This product is an LED lighting kit only. The LEGO 10358 Transformers: Soundwave model building set is NOT included and must be purchased separately or already owned.



Image 1.1: The LocoLee Light Kit illuminates the LEGO 10358 Transformers: Soundwave model, highlighting its details with vibrant blue and red LEDs.

NOT Included The Model Set



Model Shown For Display Only – Not For Sale

Image 1.2: This kit includes only the lighting accessories. The LEGO model is shown for display purposes only and is not part of this package.

2. SAFETY INFORMATION

Please read and follow these safety guidelines carefully:

- Keep all small components out of reach of young children to prevent accidental ingestion.
- Do not pull wires excessively during installation to avoid damage.
- Ensure the power source voltage is less than 5V to prevent damage to the lighting components.

3. PACKAGE CONTENTS

Your LocoLee Light Kit package should contain the following components:

Model Shown For Display Only – Not For Sale



1 x Disc Light Rotating Red



3 x Light-15CM Red



2 x Hard Light Bar-Blue



1 x Hard Light Bar-Warm White



 
2 x LED Strip Blue




1 x Connecting Cable 5CM



2 x Connecting Cable 10CM

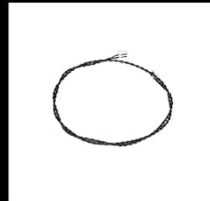

2 x Connecting Cable 15CM

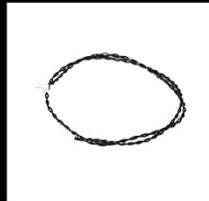 

1 x Connecting Cable 20CM



1 x Connecting Cable 50CM



1 x 4 Expansion Board



1 x 6 Expansion Board



1 x 4 Expansion Board



1 x 2 Expansion Board



1 x Power Cable

Image 3.1: Overview of all components included in the LocoLee Light Kit.

- 1 x Disc Light Rotating Red
- 3 x Light-15CM Red
- 2 x Hard Light Bar-Blue
- 1 x Hard Light Bar-Warm White
- 2 x LED Strip Blue
- 1 x Connecting Cable 5CM
- 2 x Connecting Cable 10CM
- 2 x Connecting Cable 15CM
- 1 x Connecting Cable 20CM
- 1 x Connecting Cable 50CM
- 1 x 4 Expansion Board
- 1 x 6 Expansion Board
- 1 x 4 Expansion Board (additional)
- 1 x 2 Expansion Board

- 1 x Power Cable (USB)

4. SETUP AND INSTALLATION

The installation process involves carefully integrating the LED components into your LEGO 10358 Transformers: Soundwave model. Detailed, step-by-step instructions are provided online to guide you through the process.

4.1 Accessing Installation Instructions

For comprehensive video and PDF installation guides, please refer to the online resources. You can typically find these by scanning a QR code or searching for the product code provided with your kit on the manufacturer's website.

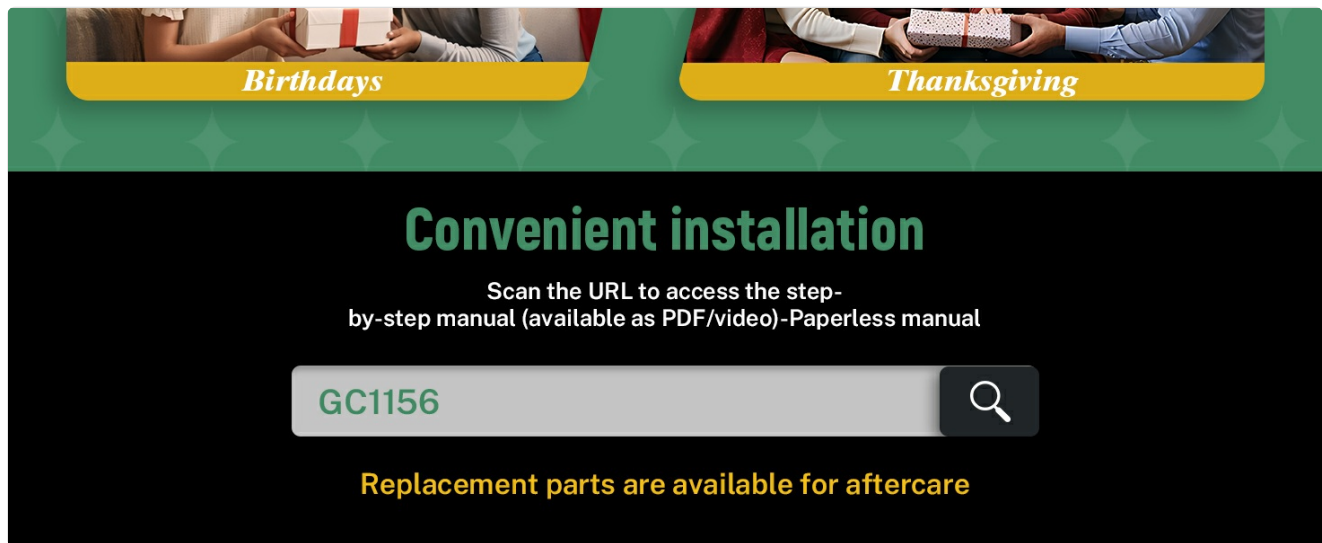


Image 4.1: Reference for accessing online installation instructions.

4.2 General Installation Tips

- **Patience is Key:** Take your time during installation. The components are small and require careful handling.
- **Test Before Finalizing:** It is recommended to test each light part before fully assembling to ensure proper function.
- **Adhesive Placement:** If using adhesive components, do not press them down too firmly until you are certain of their final position. Minor adjustments may be necessary to ensure all pieces connect correctly.
- **Wire Management:** Carefully route wires to conceal them within the LEGO model structure, avoiding excessive tension.

5. OPERATING INSTRUCTIONS

Once installed, your LocoLee Light Kit is ready to illuminate your LEGO model.

5.1 Powering the Light Kit

The light kit is powered via a USB connection. Ensure the power source provides a voltage of less than 5V. Connecting to a USB port on a computer, power bank, or a standard USB wall adapter (not included) is suitable.

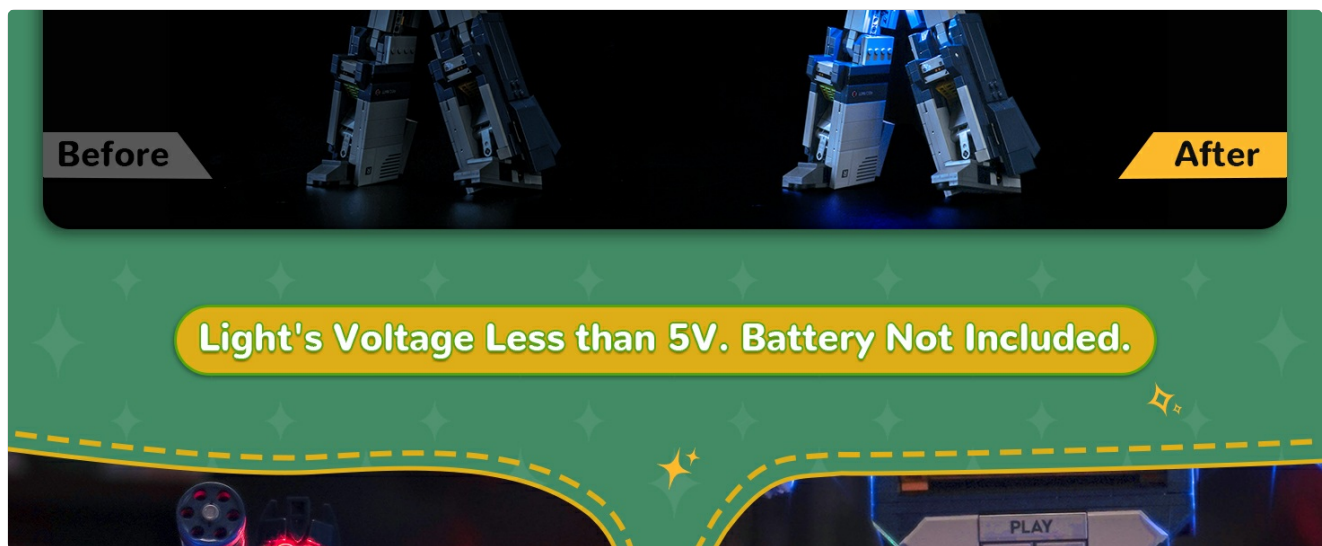


Image 5.1: The light kit requires a USB power source with voltage less than 5V. Batteries are not included.

5.2 Enhancing Your Display

The LED lights are designed to highlight the intricate details of your LEGO 10358 Transformers: Soundwave model, making it a captivating display piece, especially in low-light conditions.

NOT Included The Model Set



Model Shown For Display Only – Not For Sale

Image 5.2: A visual comparison demonstrating the transformative effect of the light kit on the LEGO model.

6. MAINTENANCE

To ensure the longevity and optimal performance of your light kit:

- **Cleaning:** Gently dust the LED components and wires with a soft, dry cloth. Avoid using liquids or abrasive cleaners.
- **Storage:** If disassembling or storing the model, handle the wired components with care to prevent damage.
- **Environmental Conditions:** Keep the model and light kit away from extreme temperatures, direct sunlight, and high humidity.

7. TROUBLESHOOTING

If you encounter any issues with your light kit, consider the following:

- **Lights Not Working:**

- Check all cable connections to ensure they are secure and properly seated.
- Verify that the USB power source is functioning and providing power (less than 5V).
- Ensure no wires are pinched or damaged within the LEGO structure.
- **Dim Lights:** Ensure your USB power source is adequate. Some USB ports may provide lower current, affecting brightness.
- **Installation Difficulties:** Refer back to the online video/PDF installation instructions for detailed visual guidance. Sometimes, re-adjusting a few bricks can resolve connection issues.

If problems persist, please contact customer support for assistance.

8. SPECIFICATIONS

Brand	LocoLee
Model	Standard Version Light Kit
Compatible With	LEGO 10358 Transformers: Soundwave
Material	Plastic (ABS), Copper Lines
Light Source Type	Light Emitting Diode (LED)
Power Source	DC adapter (USB-powered, < 5V)
Bulb Features	USB-powered
Number of Light Sources	Varies by component (e.g., LED strips, individual lights)
Batteries Included	No
Product Dimensions (Packaging)	6.06 x 1.26 x 3.98 inches
Item Weight	3.52 ounces
Recommended Age	16 years and up

9. WARRANTY AND SUPPORT

LocoLee is committed to product quality. If you have any questions or require assistance with your light kit, please do not hesitate to contact us. Replacement parts are available for aftercare services.

For support, please refer to the contact information provided with your purchase or visit the official LocoLee store page.

© 2025 LocoLee. All rights reserved. LEGO is a trademark of the LEGO Group of companies which does not sponsor, authorize or endorse this product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FKMVS4K5>

More documents and user manuals: <https://manuals.plus/>