

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [NUISK](#) /

› [NUISK 4K Thumb Action Camera MZXJ-4K User Manual](#)

## NUISK MZXJ-4K

# NUISK 4K Thumb Action Camera MZXJ-4K User Manual

Model: MZXJ-4K | Brand: NUISK

## INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your NUISK 4K Thumb Action Camera. Please read this manual thoroughly before using the device and retain it for future reference.

## SAFETY INFORMATION

- Do not expose the camera to extreme temperatures or direct sunlight for prolonged periods.
- Ensure the waterproof case is properly sealed before submerging the camera in water.
- Keep the device away from strong magnetic fields to prevent data corruption.
- Use only approved charging cables and power adapters.
- Avoid dropping or subjecting the camera to severe impacts.

## PACKAGE CONTENTS

Verify that all items are present in your package:

- NUISK 4K Thumb Action Camera
- 128GB Micro SD Card (pre-installed)
- Waterproof Case
- Magnetic Pendant
- Back Clip
- USB Charging Cable (Type-C)

- Helmet Bracket A
- Helmet Bracket B
- Bicycle H-shaped Bracket
- Camera Bracket
- Bottom Support
- User Manual



Image: All components included with the NUISK 4K Thumb Action Camera, neatly arranged.

## PRODUCT OVERVIEW

The NUISK 4K Thumb Action Camera is a compact device designed for capturing high-quality video and photos in various environments. Its small size and versatile mounting options make it suitable for a wide range of activities.

# Product Description



Image: Labeled diagram showing the anti-collision lens, power button, 128G high-speed SD card interface, and Type-C charging port on the camera.

- **Anti-collision Lens:** Protects the camera optics.
- **Power Button:** Used for powering on/off and initiating recording.
- **128G High-speed SD Card Interface:** Slot for the included Micro SD card.
- **Type-C Charging Port:** For charging the internal battery.

## SETUP

### 1. Charging the Camera

Before first use, fully charge the camera. Connect the supplied USB Type-C cable to the camera's charging port and a compatible USB power adapter (not included). The charging indicator light will show the charging status.

### 2. Powering On/Off

- To power on: Press and hold the Power Button for approximately 3 seconds until the indicator light illuminates.

- To power off: Press and hold the Power Button for approximately 3 seconds until the indicator light turns off.

### 3. Inserting/Removing SD Card

The camera comes with a 128GB Micro SD card pre-installed. To access or replace the card, gently open the protective flap on the side of the camera. Insert the Micro SD card with the gold contacts facing down until it clicks into place. To remove, push the card in slightly until it springs out.

### 4. App Installation & Wi-Fi Connection

Download the official NUISK app from your smartphone's app store. Once installed, enable Wi-Fi on your camera and smartphone. Connect to the camera's Wi-Fi network (SSID and password typically found in the camera's settings or quick start guide). The app allows for remote control, live view, and file transfer.

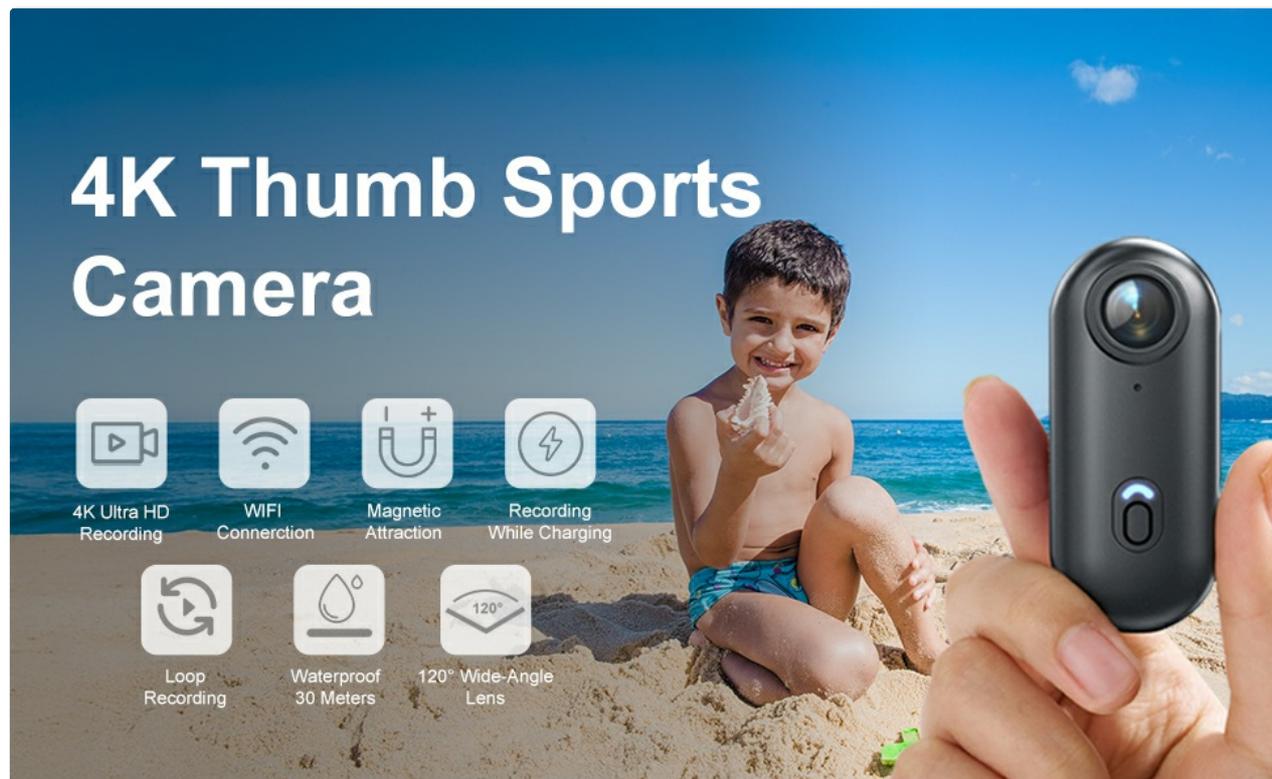


Image: A smartphone displaying a live feed from the NUISK camera, illustrating Wi-Fi connectivity for remote control and viewing.

## OPERATING INSTRUCTIONS

### 1. Recording Video

With the camera powered on, press the Power Button once to start video recording. The indicator light will change to confirm recording is in progress. Press the Power Button again to stop recording. Videos are saved to the Micro SD card in 4K resolution.

### 2. Taking Photos

While in standby mode, a quick double-press of the Power Button will capture a still image. Photos are saved to the Micro SD card.

### 3. Using Attachments

The NUISK camera includes various attachments for diverse usage scenarios:

- **Magnetic Pendant:** Attach the camera to the magnetic pendant and wear it around your neck for hands-free, first-person perspective (POV) recording.



Image: Individuals engaged in various activities while wearing the NUISK camera via its magnetic pendant, capturing POV footage.

- **Back Clip:** Insert the camera into the back clip for attaching to clothing, backpack straps, or other surfaces.



Image: The NUISK camera secured to a shirt using the back clip, demonstrating a hands-free mounting option.

- **Waterproof Case:** For underwater activities up to 40 meters (131 feet), place the camera inside the waterproof case. Ensure the case is securely latched before submersion.



**Waterproof To 130 Feet**  
**Diving, Swimming, Raining, Waterproof for daily life**

\* Please note that you need to wear a waterproof case when going into the water

Image: The NUISK camera enclosed in its transparent waterproof housing, shown partially submerged with water splashes, highlighting its water resistance.

- **Helmet & Bicycle Mounts:** Use the provided helmet brackets (A and B) and the bicycle H-shaped bracket to securely attach the camera to helmets or bicycle handlebars for action-oriented footage.

## What will you get?

- ① NUISK Thumb Sports Camera
- ② Helmet Bracket A
- ③ Waterproof Shell
- ④ Camera Bracket
- ⑤ User Manual
- ⑥ Magnetic Pendant
- ⑦ Helmet Bracket B
- ⑧ Back Clip
- ⑨ USB Cable
- ⑩ 128G HD Card
- ⑪ Bicycle H-shaped Bracket
- ⑫ Bottom Support



Image: The NUISK camera attached to a bicycle handlebar and a helmet, demonstrating its use in cycling and other outdoor sports.

### 4. Loop Recording

The camera supports loop recording, which automatically overwrites the oldest files when the memory card is full. This feature is ideal for continuous recording without manual file management.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and moisture.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the camera regularly, even when not in use, to maintain battery health.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Low battery.	Charge the camera fully.
Cannot record video.	SD card full or not inserted correctly.	Check SD card insertion, delete old files, or replace card.
Wi-Fi connection issues.	Incorrect password or camera too far from phone.	Ensure correct password, move closer to camera, restart both devices.
Poor video quality.	Dirty lens, low light, or incorrect settings.	Clean the lens, ensure adequate lighting, check resolution settings in the app.

## SPECIFICATIONS

Feature	Detail
Brand	NUISK
Model Number	MZXJ-4K
Video Capture Resolution	4K
Video Capture Format	MP4
Flash Memory Type	Micro SD (128GB included)
Connectivity Technology	Wi-Fi
Waterproof Depth (with case)	Up to 40 meters (131 feet)
Item Weight	1.27 ounces
Product Dimensions	0.7 x 1.1 x 2.2 inches
Battery	1 Nonstandard Battery (included)



Image: Visual representation of the compact dimensions of the NUISK 4K Thumb Action Camera.



Image: The NUISK 4K Thumb Action Camera resting in the palm of a hand, emphasizing its lightweight design (approximately 1.27 oz).

## **WARRANTY AND SUPPORT**

---

For warranty information and technical support, please refer to the contact details provided on the product packaging or visit the official NUISK website. Our 24/7 support team is available to assist with any inquiries.