

[manuals.plus](#) /

› [VECYS](#) /

› [VECYS LYCZ629 Bottom Loading Water Dispenser with Ice Maker User Manual](#)

VECYS LYCZ629

VECYS LYCZ629 Bottom Loading Water Dispenser with Ice Maker

User Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Ensure the unit is placed on a level, stable surface.
- Do not operate the unit with a damaged power cord or plug.
- Keep the appliance away from direct sunlight and heat sources.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Supervise children to ensure they do not play with the appliance.
- The hot water dispenser features a child safety lock. Always engage this lock when not in use.
- Only use bottled water with the dispenser.

2. PRODUCT OVERVIEW

The VECYS LYCZ629 is a versatile bottom-loading water dispenser that provides hot, cold, and room temperature water, along with an integrated ice maker. It is designed for ease of use and convenience.



Figure 1: Front view of the VECYS LYCZ629 water dispenser.

Key Features:

- **3-in-1 Dispensing:** Delivers hot, cold, and room temperature water.
- **Integrated Ice Maker:** Produces bullet-shaped ice cubes.
- **Bottom Loading Design:** Simplifies water bottle replacement (compatible with 3-5 gallon bottles).
- **Child Safety Lock:** Prevents accidental hot water dispensing.
- **Self-Clean Function:** Facilitates easy maintenance.
- **LED Display:** Indicates operational status and settings.

3. SETUP AND INSTALLATION

3.1 Unpacking

1. Carefully remove the appliance from its packaging.
2. Remove all packing materials, including any tape or labels.
3. Inspect the unit for any damage. If damaged, do not operate and contact customer support.

3.2 Placement

Choose a suitable location for your water dispenser:

- Place the unit on a hard, level surface capable of supporting its weight when full.
- Ensure adequate ventilation around the unit. Maintain at least 4 inches (10 cm) of space from walls.
- Avoid direct sunlight or proximity to heat-generating appliances.
- The unit dimensions are approximately 17.7"D x 14.4"W x 44.1"H.



Figure 2: Recommended placement and dimensions for the water dispenser.

3.3 Water Bottle Installation

1. Open the lower cabinet door of the dispenser.
2. Remove the cap from a new 3 or 5-gallon water bottle.
3. Insert the probe assembly into the water bottle. Ensure the probe is fully submerged.
4. Slide the water bottle into the lower cabinet.
5. Close the cabinet door. The internal pump will begin drawing water into the reservoirs.



Figure 3: Illustration of bottom-loading water bottle installation.

3.4 Initial Cleaning and Power Connection

1. Before first use, perform a self-clean cycle (refer to Section 5.1).
2. Plug the power cord into a grounded electrical outlet.
3. Allow the unit to sit for at least 15 minutes before dispensing water to allow the water to cool/heat.

4. OPERATING INSTRUCTIONS

The control panel features touch-sensitive buttons and LED indicators for various functions.



Figure 4: Close-up of the LED display and control panel.

4.1 Water Dispensing (Hot, Cold, Room Temperature)

The unit features a single nozzle for all water temperatures.

1. Place your cup or container on the drip tray beneath the dispensing nozzle.
2. **For Cold Water:** Press the **Cold Water** button. Press again to stop dispensing.
3. **For Room Temperature Water:** Press the **Fresh Water** button. Press again to stop dispensing.
4. **For Hot Water:** First, press the **Child Lock** button to unlock. Then, press the **Hot Water** button. Press again to stop dispensing. The child lock will re-engage automatically after a short period of inactivity.

WATER DISPENSER WITH ICE



Cold water



Fresh water



Hot water



Figure 5: Dispensing various water temperatures.

ANTI-SCALD SAFETY LOCK SWITCH



Figure 6: Child safety lock feature for hot water.

4.2 Ice Making

The integrated ice maker produces bullet-shaped ice cubes.

1. Ensure the unit is powered on and has sufficient water in the bottle.
2. The **Making Ice** indicator on the LED display will illuminate when ice production is active.
3. Ice production typically takes 6-8 minutes per cycle.
4. To dispense ice, place your cup under the ice chute and press the ice dispensing lever/button.



Figure 7: Ice making capabilities and bullet-shaped ice.

5. MAINTENANCE

5.1 Self-Clean Function

The self-clean function helps maintain the hygiene of the water tanks and lines.

1. Ensure a full water bottle is installed.
2. Refer to the control panel for the specific self-clean activation procedure (usually a dedicated button or a combination of buttons).
3. Follow the on-screen indicators or manual instructions for the duration of the cycle.
4. After the cycle, dispense and discard a few cups of water from each tap to flush the system.

5.2 Drip Tray Cleaning

The removable drip tray should be cleaned regularly to prevent water overflow and maintain hygiene.

1. Gently pull the drip tray forward to remove it from the unit.
2. Empty any collected water.
3. Wash the drip tray with mild soap and warm water. Rinse thoroughly.
4. Dry completely before reinserting into the dispenser.



Figure 8: Drip tray for easy cleaning.

5.3 Exterior Cleaning

Wipe the exterior surfaces of the dispenser with a soft, damp cloth. Avoid abrasive cleaners or solvents.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No water dispensing	Water bottle empty or not properly installed; unit unplugged; pump issue.	Replace water bottle; ensure proper installation; check power connection; contact support if pump issue persists.
No ice production	Water bottle empty; ice maker function not activated; ambient temperature too high.	Replace water bottle; ensure 'Making Ice' indicator is on; ensure proper ventilation.
Water not hot/cold enough	Heating/cooling function not activated; insufficient time for heating/cooling.	Ensure hot/cold water functions are enabled; allow 15-30 minutes for water to reach desired temperature.
Child lock engaged for hot water	Safety feature is active.	Press the Child Lock button first, then the Hot Water button.
"Lack of Water" indicator illuminated	Water bottle is empty or probe is not correctly positioned.	Replace water bottle and ensure probe is fully submerged.

7. SPECIFICATIONS

Feature	Detail
Brand	VECYS
Model Number	LYCZ629
Color	Black
Material	Plastic
Capacity (Water Bottle)	3-5 Gallons

Feature	Detail
Product Dimensions (D x W x H)	17.7" x 14.4" x 44.1"
Wattage	450 watts
Installation Type	Freestanding
Access Location	Bottom
Upper Temperature Rating (Hot Water)	Up to 190 Degrees Fahrenheit
Ice Making Capacity	22 LBS/24 Hours
Ice Storage Capacity	1.1 LBS
Ice Making Time (per cycle)	6-8 minutes
Item Weight	46 pounds

8. WARRANTY AND SUPPORT

For warranty information and customer support, please contact VECYS directly. Details regarding your product's warranty period and terms can typically be found on the manufacturer's website or by contacting their customer service department.

When contacting support, please have your model number (LYCZ629) and purchase date available.