

## Ergobaby Metro 3 Deluxe

# Ergobaby Metro 3 Deluxe Stroller User Manual

Model: Metro 3 Deluxe

## 1. IMPORTANT SAFETY INFORMATION

---

Always read and understand all instructions and warnings before using your Ergobaby Metro 3 Deluxe Stroller. Failure to follow these instructions could result in serious injury or death.

- Never leave your child unattended in the stroller.
- Always use the restraint system. Ensure your child is securely fastened in the harness.
- Do not carry additional children or bags on the stroller that could cause it to become unstable.
- Ensure all locking devices are engaged before use.
- Do not use the stroller if any part is broken, torn, or missing.
- Avoid placing hot liquids or heavy items in the cup holder to prevent tipping.
- Maximum weight recommendation for the child is 50 pounds (22 kg).
- Maximum height recommendation for the child is 40 inches (101.6 cm).

## 2. PRODUCT OVERVIEW

---

The Ergobaby Metro 3 Deluxe Stroller is designed for comfort and convenience, suitable for newborns, infants, and toddlers. It features a compact, one-hand fold, near-flat recline, and an adjustable handlebar.



The Ergobaby Metro 3 Deluxe Stroller in Jet Black, showcasing its sleek design and compact form.

## Key Features:

- **Newborn Ready:** Integrated Newborn Nest mode for use from birth.
- **Ergonomic Cushioned Seat:** Supports healthy hip and back positioning.
- **Near-Flat Recline & Adjustable Leg Rest:** Provides comfort for naps and relaxation.
- **Adjustable Leatherette Handlebar:** Reduces strain for parents of varying heights.
- **All-Wheel CushionRide™ Suspension:** Absorbs bumps for a smooth ride.
- **One-Hand Fold:** Simplifies transitions and compact storage.
- **Magnetic Buckle:** For easy and secure child fastening.
- **Extendable UV-Protective & Water-Resistant Sunshade:** Offers enhanced protection.
- **Spacious Storage:** Includes an under-basket and seat-back pocket.

## 3. SETUP

### 3.1 Unfolding the Stroller

1. Place the folded stroller on a flat, stable surface.

2. Release the auto-lock mechanism (if engaged).
3. Lift the handlebar firmly until the stroller clicks into its fully open position. Ensure all frame locks are engaged.

### 3.2 Adjusting the Handlebar

The leatherette handlebar can be adjusted to suit your height for comfortable pushing.

- Locate the adjustment buttons on either side of the handlebar.
- Press and hold the buttons, then raise or lower the handlebar to your desired height.
- Release the buttons to lock the handlebar in place.

### 3.3 Newborn Nest Mode

The Metro 3 Deluxe is newborn-ready with its integrated Newborn Nest mode.

## Stroll from Newborn to Toddler



**0-6 months**

**Metro 3 Deluxe  
& Car Seat  
Adapters**  
(sold separately)



**0-6 months**

**Metro 3 Deluxe  
in Newborn  
Nest Mode**



**6-48 months**

**Metro 3 Deluxe  
Stroller**

The Ergobaby Metro 3 Deluxe Stroller supports various configurations for different age groups, including car seat compatibility, Newborn Nest mode, and standard toddler use.

- To activate Newborn Nest mode, fully recline the seat to its near-flat position.
- Adjust the leg rest to its highest position to create an enclosed, cozy space for newborns.

### 3.4 Car Seat Compatibility

The stroller is compatible with various infant car seats using adapters (sold separately). Refer to the car seat manufacturer's instructions for proper installation with the adapters.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Securing Your Child

Always use the 5-point magnetic buckle harness to secure your child.



A parent securing a baby in the stroller using the easy-to-use magnetic buckle harness.

1. Place your child in the seat.
2. Bring the shoulder straps over your child's shoulders and the waist straps around their hips.
3. Connect the shoulder and waist buckles into the central magnetic buckle until they click securely.
4. Adjust the straps for a snug fit, ensuring they are not too tight or too loose.

### 4.2 Adjusting Seat Recline and Leg Rest

The seat offers a near-flat recline and an adjustable leg rest for optimal child comfort.

# Surprising Size, Expected Comfort.



\*\*Based on surface area vs. leading ultra compact strollers, Circana Data, March 2025.

An annotated image detailing the various comfort and convenience features of the Ergobaby Metro 3 Deluxe Stroller.

- **Seat Recline:** Locate the recline mechanism on the back of the seat. Squeeze the lever or press the button (depending on model variation) and adjust the seat to the desired angle. Release to lock.
- **Leg Rest:** Press the buttons on either side of the leg rest to adjust its angle up or down. Release to lock.

## 4.3 Folding the Stroller

The stroller features a convenient one-hand compact fold.

# Packs Small, Rolls Big.



The Ergobaby Metro 3 Deluxe Stroller folds compactly, making it easy to store and transport.

1. Ensure the seat is in an upright position and the canopy is retracted.
2. Locate the folding mechanism on the handlebar (refer to specific model instructions for exact location).
3. Activate the folding mechanism and push the handlebar forward and down until the stroller is fully folded and the auto-lock engages.
4. Use the integrated carry strap for easy transport.

## 4.4 Brake System

The stroller is equipped with a foot-activated brake system.

- To engage the brake, press down firmly on the brake pedal located near the rear wheels. A red indicator will show when the brake is engaged.
- To release the brake, lift the pedal upwards.

## 4.5 Canopy Adjustment

The upgraded woven sunshade is extendable and provides UV-protective and water-resistant coverage.

- Pull the canopy forward to extend it for maximum sun protection.

- Retract the canopy by pushing it backward.
- Utilize the peek-a-boo window to check on your child without disturbing them.

## 5. MAINTENANCE

---

### 5.1 Cleaning Instructions

- **Fabric:** Spot clean with a mild detergent and cold water. Air dry. Do not bleach or machine wash.
- **Frame:** Wipe clean with a soft, damp cloth. Dry thoroughly.
- **Wheels:** Regularly clean wheels and axles to remove dirt and debris. Lubricate moving parts with a silicone-based lubricant if necessary.

### 5.2 Storage

- Store the stroller in a dry, cool place away from direct sunlight.
- Ensure the stroller is clean and dry before storing to prevent mold or mildew.

## 6. TROUBLESHOOTING

---

- **Stroller not folding/unfolding smoothly:** Check for any obstructions in the folding mechanism. Ensure the seat is upright and the canopy is retracted.
- **Wheels squeaking or stiff:** Clean any debris from the wheel axles and lubricate with a silicone spray.
- **Harness difficult to buckle:** Ensure all buckle components are aligned correctly before attempting to connect the magnetic buckle.

## 7. SPECIFICATIONS

---

Feature	Specification
Folded Size	22.5"L x 12"W x 9"H
Item Dimensions (L x W x H)	22.24"L x 17.72"W x 8.86"H
Harness Type	5 Point
Stroller Type	Pram Stroller
Car Seat Compatible	Yes (adapters sold separately)
Harness Feature	Quick-release magnetic buckle
Seating Capacity	1
Stroller Brake System	Foot-activated
Material Type	Textiles (Seat, Canopy), Lightweight Metal/Plastic (Frame)
Maximum Weight Recommendation	50 Pounds (22 kg)
Maximum Height Recommendation	40 Inches (101.6 cm)

Feature	Specification
Color	Jet Black

## 8. WARRANTY AND SUPPORT

---

For warranty information, product registration, or to contact customer support, please visit the official Ergobaby website or refer to the documentation included with your purchase. Keep your proof of purchase for warranty claims.

**Online Resources:**

- Ergobaby Official Website: [www.ergobaby.com](http://www.ergobaby.com)
- Amazon Ergobaby Store: [Ergobaby Store on Amazon](#)